Installation And Operation Manual



Model: DK-CA002 Applicable age: 37-95 months Maximum weight: 30 KG

Execution Standard: GB6675&GB19865 EN71&EN62115 ASTM-F963





Address:No.88,Qinsha section,Pinglang Road,Xincang Town, Pinghu City,Jiaxing City,Zhejiang Province,China Website: www.daketoys.com

The BRP,Can-Am,Rotax,and Maverick trademarks,logos and designs are the intellectual property of Bombardier Recreational Products Inc.and are used under license by Pinghu Dake Baby Carrier Co.,Ltd.

Warning: This is a Child's Toy and NOT intended for Off-Road Use.

 π_A


Installation steps

Assembly

1.Spare parts list

Car body 1 PC	Front guard bar 1 PC	Steering axle 1 PC
Dashboard with MP3 or MP4	Seat 1 PC	Taillight 1 PC
Handlebar 1 PC	Cover for handlebar 1 PC	Rear axle 1 PC
Driving motors 2 or 4 PCS	Wheels 4 PCS	Wheel covers 4 PCS
Manual 1 PC	Charge 1 PC	Socket wrenches 2 PCS
Bolt 1 PC	M10 Nut 1 PC	M10 Gasket 2PCS
M4*10mm Screws 22 PCS	M12 Gaskets: 7 PCS	M10 Spring gasket 1PC
Remote control 1 PC(not inclu	iding when without RC function)
MP3 line 1 PC(not including u	nder the MP4 version)	
Connection for wheel (Under	4 motors version)	

2.Part name

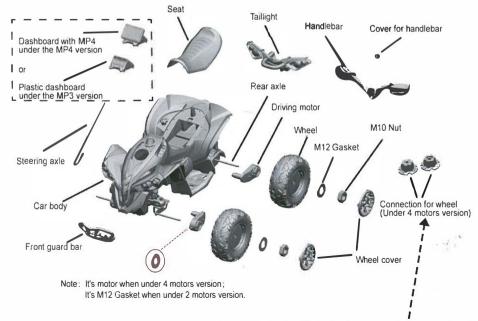


Note: Install "connection for wheel" on 2 wheels without connections before installing wheels.

Installation steps

3. Installation steps


Step 1: Install front bumper

Please install front bumper onto the body, and use 4 PCS of M4*10mm screws to fix.

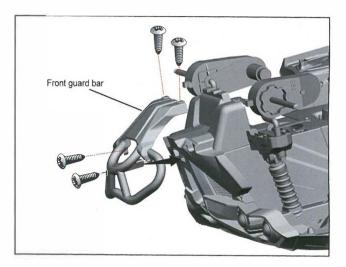

Step 2: Adjust front axle

Please adjust front axle to be in place as picture shows, and then insert 1PC of M6*13mm screw bolt. In addition, using 1PC of M6 nut to fix, but don't be too tight, ensure the iron stand can be turning smoothly.

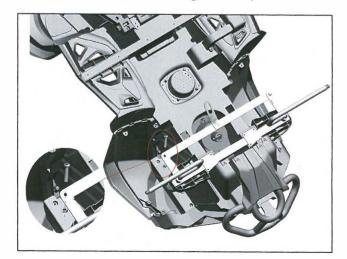


Assembly

Installation steps

Step 3: Install front wheels

PS:Use 4PCS M4*10mm screws to fix the "connection for wheel" onto the wheels under 4 motors version first.


A:Under 2 motors version: install spare parts onto front axle following the sequences: M12 gasket - Wheels - M12 gasket - M10 nut - Wheel cover.
B:Under 4 motors version: install spare parts onto front axle following the sequences: Wheels - M12 gasket - M10 nut - Wheel cover.

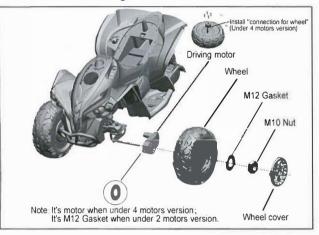

Step 4: Install rear wheels

A: Insert rear axle into the body.

B: Install spare parts following sequences: Driving motors "L" or "R" -Wheel - M12 gasket - M10 nut - Wheel cover.

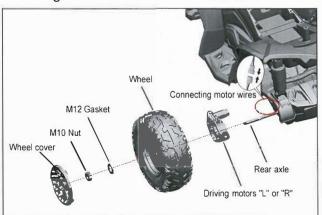


. . .

Installation steps


Step 5: Install taillight

- A: Insert light lines of taillight into the holes of body, then put them well and then put the taillight on the body.
- B: Use 8PCS of M4*10mm screws to fix taillight, and then connect the parts well according to the photo.

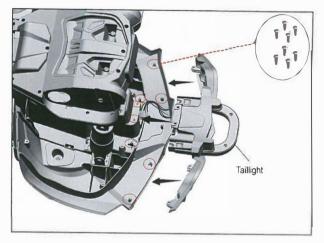


Step 6: Install steering axle

Insert the steering axle into the body, and use 1PC of M10 gasket and 1PC of bolt to fix.

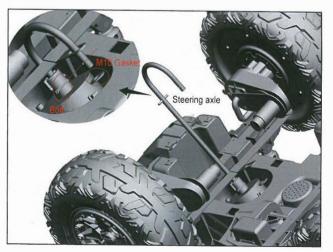

Instructions

4. Introduction for the car

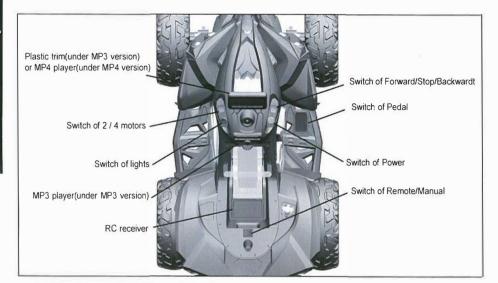


Description for the switch of Manual / Remote:

For safety reason, the switch of Manual / Remote is installed under the seat, so that children can't touch it, Under the Manual: the car only can drive by the child;


Under the Remote: the car only can drive by the remote control;

5. Introduction for MP3

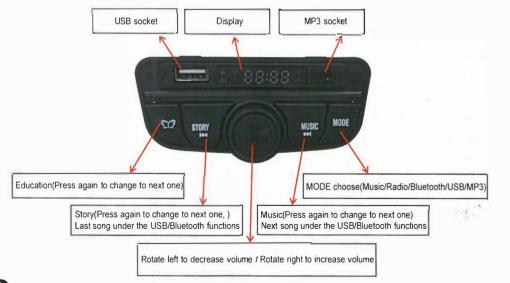

Instructions

Connect with Remote Control

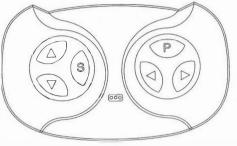

2.4G Remote Control Instructions


Step 1: The Remote Controller is loaded with two AAA batteries.

Step 2: Turn off the power switch on the vchicle.

Step 3: Hold down "▲ " & " ▼ " keys for 3 seconds start match code, The first LED flicker, Now turn on the vehicle power switch The red indicator lights stop flashing, and the code is successful.

Keys caption : "S" set up speed, 1 led lit up is low speed, 2 leds lit up is medium speed, 3 leds lit up is high speed,

"▲" Forward, "▼ "Back, " ◀ "Left, " ▶ " Right, Press "P" key hold the brake, All LED flicker

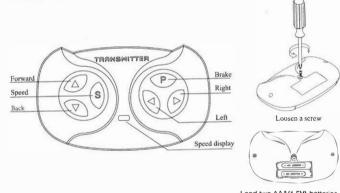

Load two AAA(1.5V) batteries

WARNING! Not for children under 3 years. Small parts. Choking hazard -Load two AAA (1.5V) batteries according to the diagram.

- -Non-rechargeable batteries are not to be recharged.
- -Different types of batteries or new and used batteries are not to be mixed.
- -Batteries are to be inserted with the correct polarity.
- -Exhausted batteries are to be removed from the toy.
- -The supply terminals are not to be short-circuited.
- -The packaging must be retained since it contains important information.

*Manufactured according to FCC certification testing and ECM

credential.

*This remote is to be used by adult only.

Instructions

Troubleshooting

10)


Problem: The vehicle cannot be driven.

Cause of the problem: the battery is insufficient Please charge in time after each use, and charge at least once a month. It is recommended to charge for 8-12 hours, not more than 20 hours.

Problem: The car does not move.

Answer: The battery is low, please charge for 8-12 hours but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active.

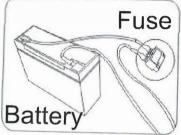

To avoid short fuse or power cut off:

1. Do not overload the product. Max load is 30 Kg.

2. Do not drag any item behind this product.

3. Do not allow water or any liquid into electric parts.

4. Do not change wire system without a professional.

TROUBLESHOOTING

Problem: The car only runs for a short time.

Answer 1: The battery is low, please charge for 8-12hours but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active. Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem: The sound does not work.

Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.

Problem: Charger overheating.

It is normal for battery and charger to be slightly warm during charging. If the charger feel excessively hot, please check for a current overload or battery short circuit.

Instructions

- 01. While driving, adult supervision is required all the time
- 02. Always wear a helmet when driving
- 03. Please don't drive near road or on the footpath.
- 04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
- 05. It is recommended to drive this vehicle on smooth surface only.
- 06. Please don't drive this vehicle outdoors when it is raining. 07. Make sure that the vehicle stop completely before changing
- direction from forward to reverse 08. Please don't allow children to operate the charger or
- play with the battery
- 09. Clean the vehicle with a dry cloth only.
- 10. Please follow the correct weight and age limits allowed to drive this vehicle
- 11. It is prohibited to change the circuit or add other electric parts.
- 12. Adults must teach their children about safe driving procedures.
- 13. Please turn the power off when not in use.
- 14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
- 15. Inspect all wires and connection of the vehicle periodically.
- 16. Charging the battery should only be done by adults.
- 17. Charging plug is located underneath the seat.
- 18. In order to avoid accidents, please ensure the vehicle is safe before driving
- 19. Please don't let children touch the wheels or be near them when the car is moving
- 20. Please mind fingers when opening and closing doors

WARNING! For safety reasons.

products as standard

*please use this vehicle under adult guidance and supervision. *do not use this product on main roads, slopes highways or other dangerous places. *children must wear shoes and protective gears contains important information. use the detachable supply unit when operating the vehicle. *children should be seated with the seat belt fasten when driving *only load a maximum of 30Kg on the vehicle *only children aged 37 - 95 months should be allowed on this vehicle *use this toy strictly according to safety manual. *please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle. *this toy vehicle should be used with caution and requires skill to avoid fall or collision with third replaceable. since it battery, only narties *Non-rechargeable batteries are no to be recharged; *The supply terminals are not to be short-circuited. B *Rechargeable batteries are to be removed from the toy before being charged the *The toy should be regularly examined for damage to the cord, þe plug, anclosure and other parts, and in the event of such damage, t must hey must not be used until the damage has been repaired **RNING:** r contains battery the -Only use the battery specified by the manufacturer WARNING toy.DC -Only use the charger specified by the manufacturer. manual Pictures are for reference only please adhere to the original purposes o Products as standard The product must be assembled by Adults. instruction Warning! Not suitable for children under 36 months. Car c ovided v or the Long cord. Strangulation hazard. Pictures are for reference only, please adhere to the original

be used in the sands. cannot toy **Narning**: This

brake.

ou

has

toy

Narning. This

Assembly

near motor

dways, I

in roa

use

Never

or steps, a

inclines o more

steep

near

on or

is required. I vehicles, on

5

S

die

supervision

adult

injury,

5

risk

۵

Ē

Ū

ÜN 6 rider

than

allow ŏ

never

and

ming pools shoes, and

wimmir vear sho

change significantly

range t

ed.

environmetnal adult

other

and

vith

used by

pe may

đ

should i

and

ylno, Re

5

2. ah

± ŝ

DNG

WARNI

he remote control is not a toy. hild. A close adult supervision

-

JR1922RXS DO 12V Max35. with . only bypa ss. 6

I. A clos. a weather, batter, , **VARNINC** "IRE.DO not by