


# 1

## Kit 187137

**CITROËN Dispatch**, 4-dr Van, 16-  
**CITROËN Jumpy**, 4-dr Van, 16-  
**CITROËN SpaceTourer**, 5-dr Bus, 16-  
**FIAT Scudo**, 4-dr Van, 22-  
**FIAT Ulysse**, 5-dr Bus, 22-  
**OPEL Vivaro**, 4-dr Van, 19-  
**OPEL Zafira Life**, 5-dr Bus, 19-

**PEUGEOT Expert**, 4-dr Van, 16-  
**PEUGEOT Traveller**, 5-dr Bus, 16-  
**TOYOTA ProAce**, 4-dr Van, 16-  
**TOYOTA ProAce Verso**, 5-dr Bus, 16-  
**VAUXHALL Vivaro**, 4-dr Van, 19-  
**VAUXHALL Vivaro Life**, 5-dr Bus, 19-



+ 
 10,5 kg = Max: 100 kg  
 21,1 lbs / 220 lbs

+ 
 14 kg = Max: 150 kg  
 30,8 lbs / 330 lbs

Max 130 km/h  
 80 Mph

80 km/h  
 50 Mph

ISO 11154-E






THULE.COM




This kit is only for vehicles with fixpoint mounting and without glass roof.



**1**  
KIT

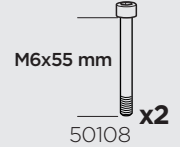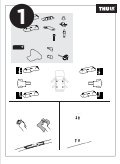


**2**  
KIT

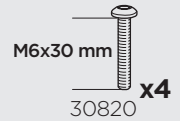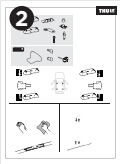


**Kit 187010**

EXT.  
PAD

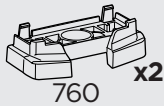


**i**

**2**  
KIT



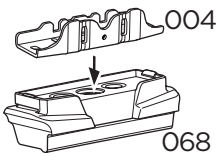


**Kit 187010**

**2**  
KIT


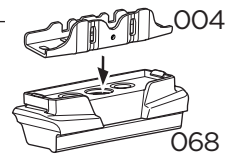


**Kit 187010**

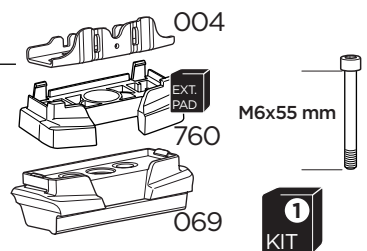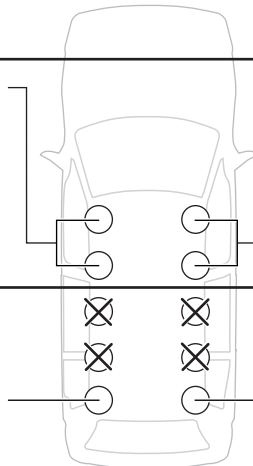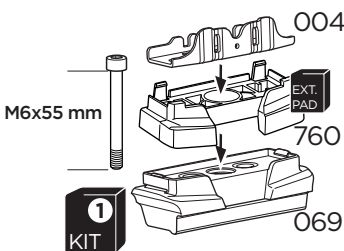


**1**  
KIT


1

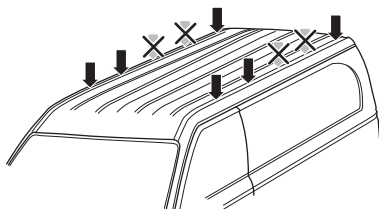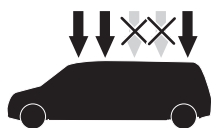


2

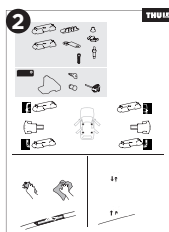


Kit 187010

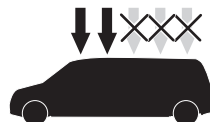

3




x2

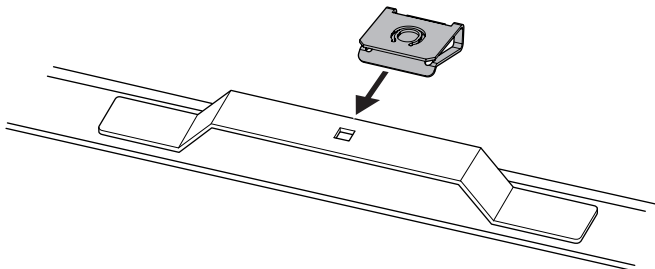

4

M6x55 mm

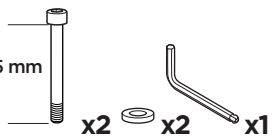


x2

x2

x1







8 Nm

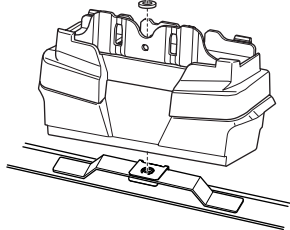



x2





This kit is only for vehicles with fixpoint mounting and without glass roof.

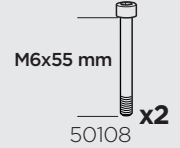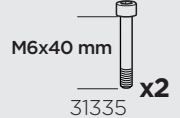



**Kit 187010**

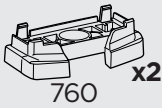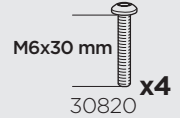


**i**

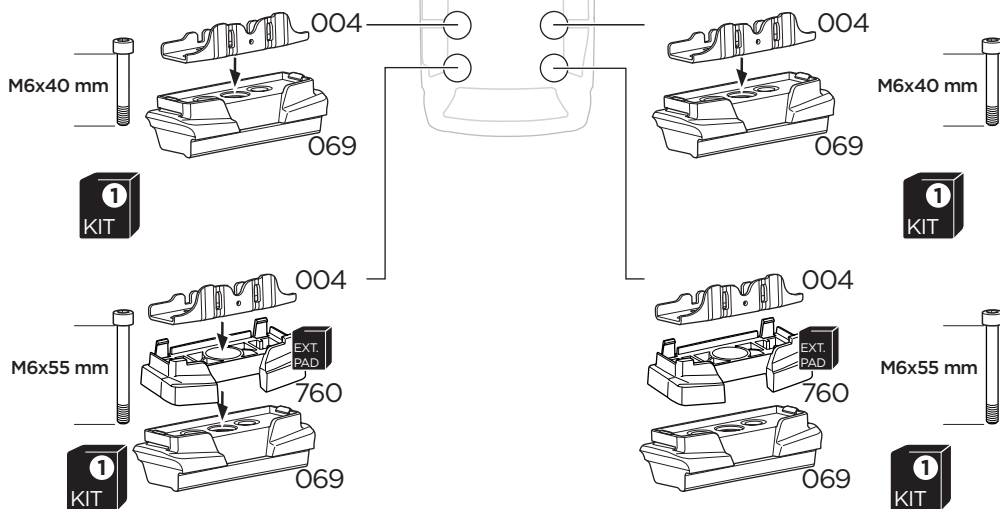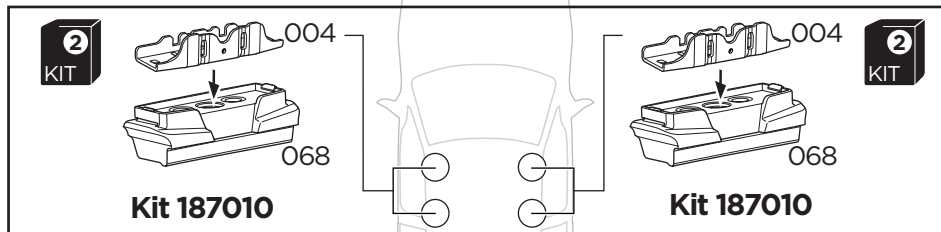


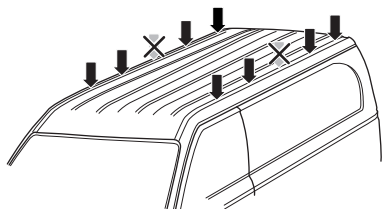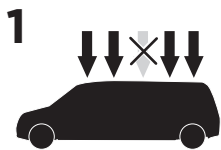



2

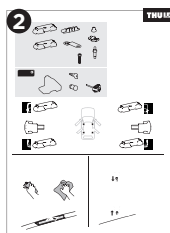




Kit 187010

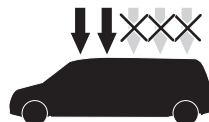

3

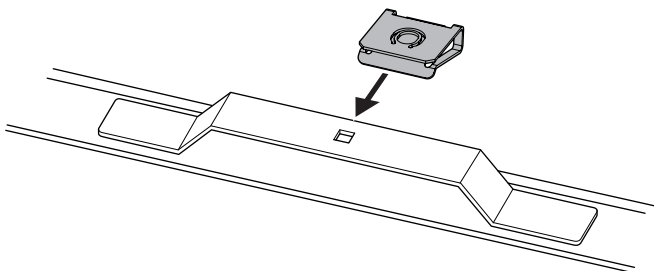


4

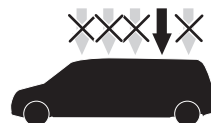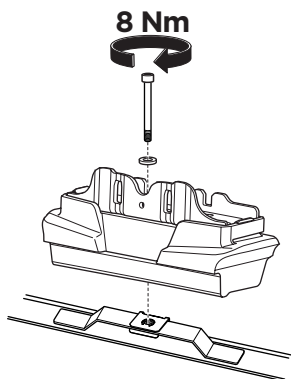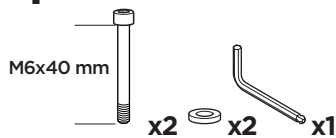




x2

**5**

M6x55 mm

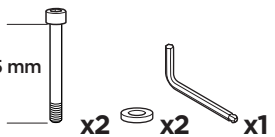

8 Nm

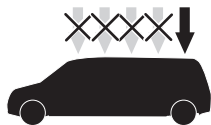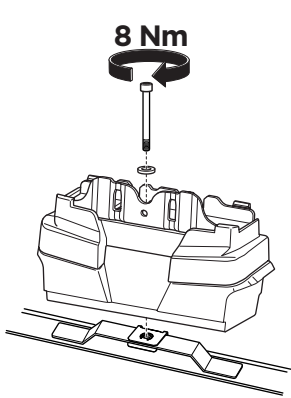

**2**




x2

**i**



**A**

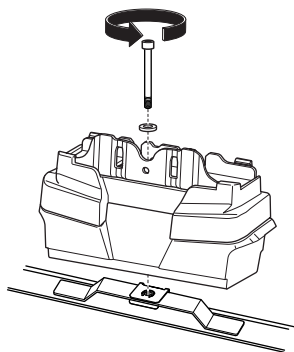

**B**

