

# 1

## Kit 187004









CHEVROLET Trailblazer, 5-dr SUV, 02-09  
 MERCEDES Sprinter, 4-dr Van, 06- /\*10-  
 RENAULT Espace, 5-dr MPV, 03-14  
 VOLKSWAGEN Crafter, 4-dr Van, 06-16, 17-




ISO 11154-E

\*North America


This kit is only for vehicles with T-Profile.

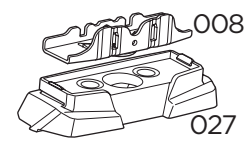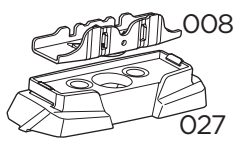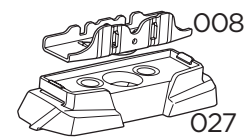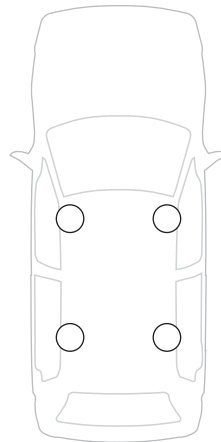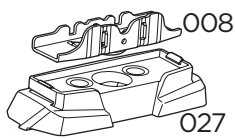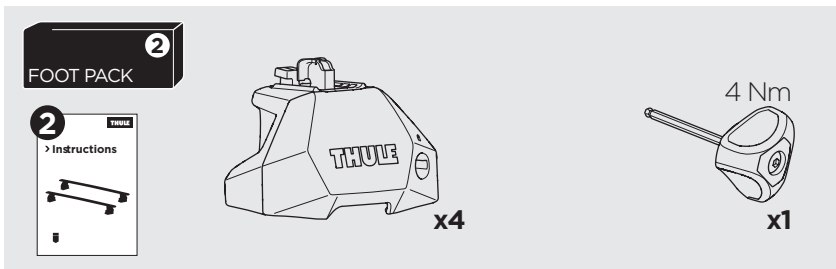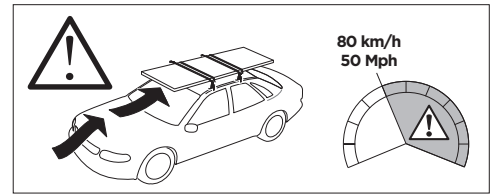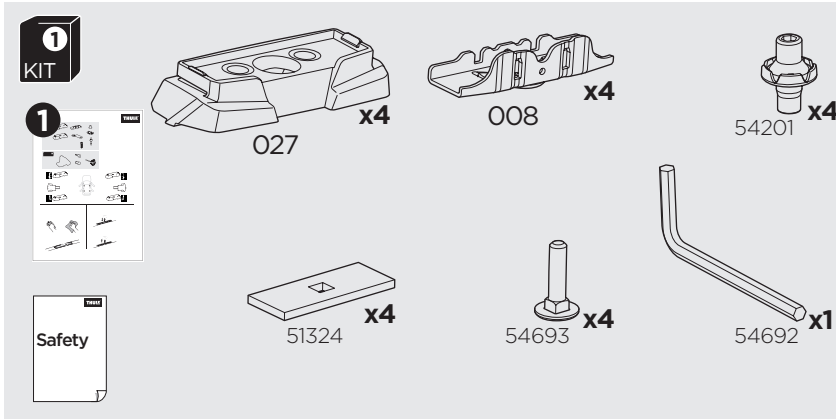


1

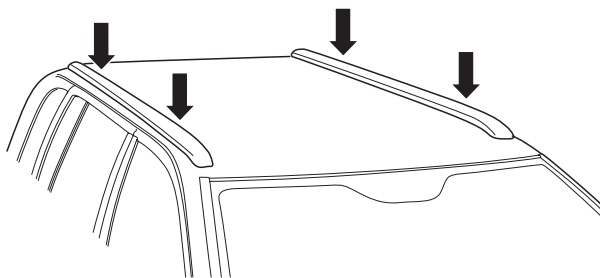


2

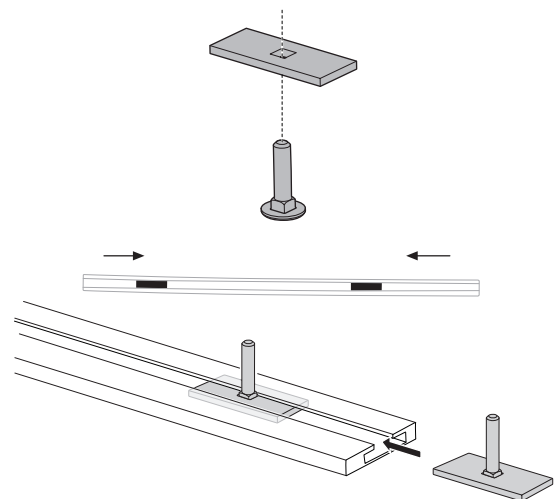


3

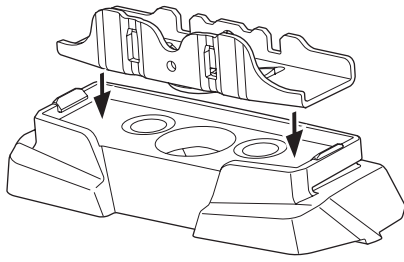


4

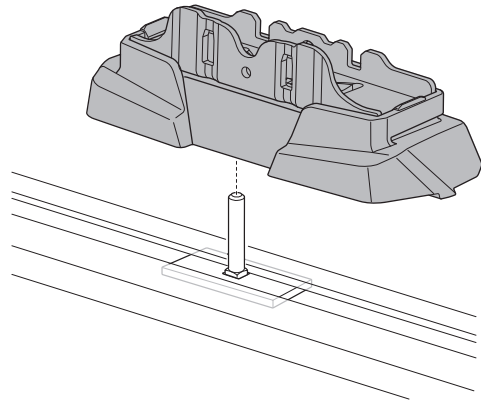


5

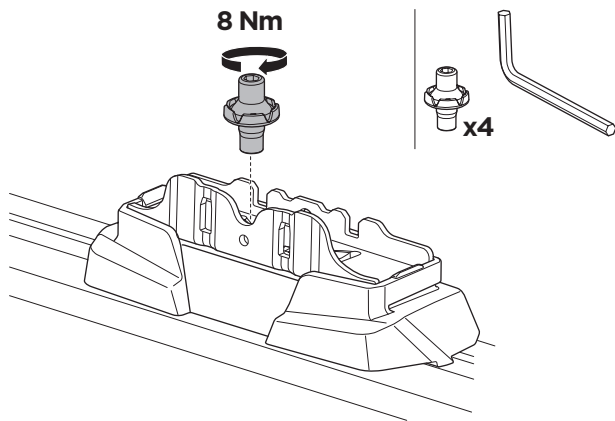

6

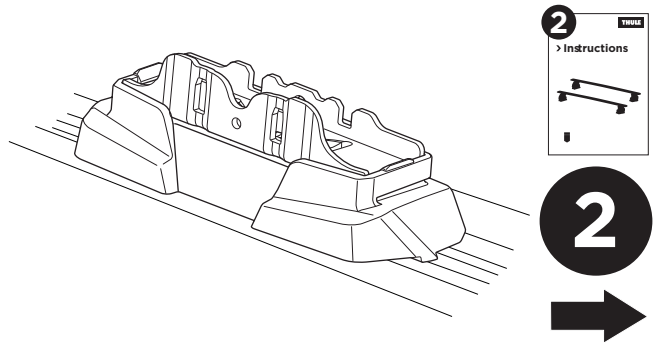

A

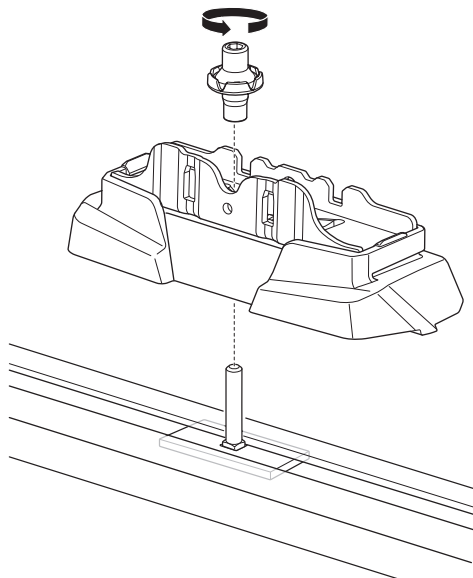

B

