

# EVOS

## NORDRIVE<sup>®</sup>

TRANSPORT SOLUTIONS


BMW SERIE 5



01/10→01/17




Art. N21124

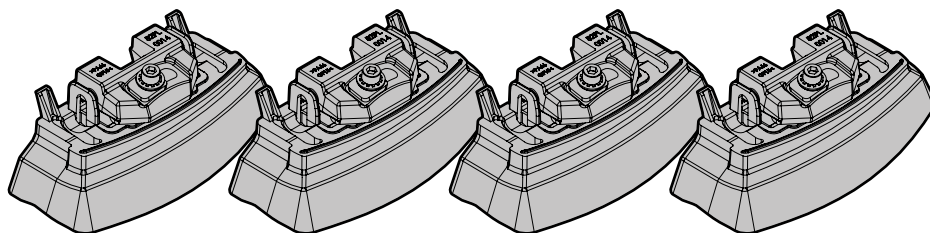

+

Art. N20001

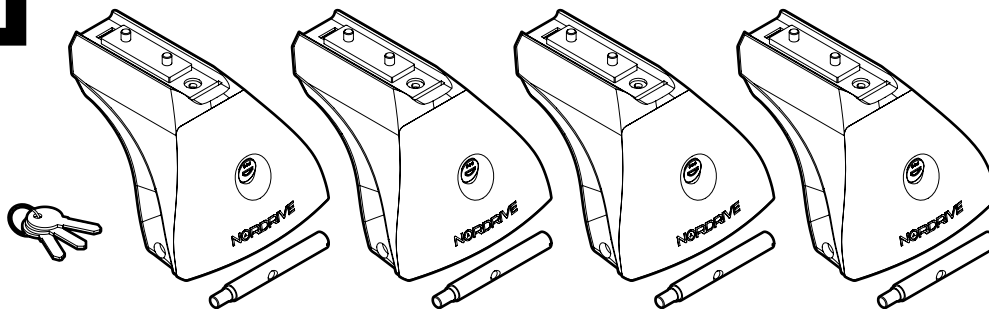

+


Art. N15020 **M**




**A**

**QUADRA**  
ACCIAIO  
Steel

=

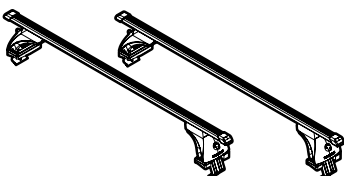


Art. N15025 **M**

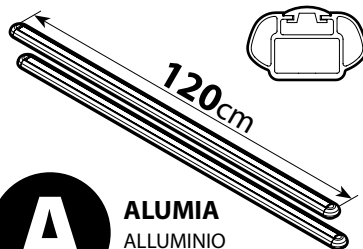


**A**

**ALUMIA**  
ALLUMINIO  
Aluminium

=

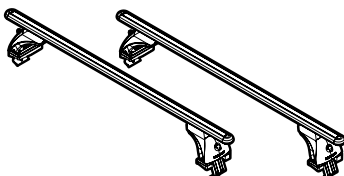


Art. N15075 **M**




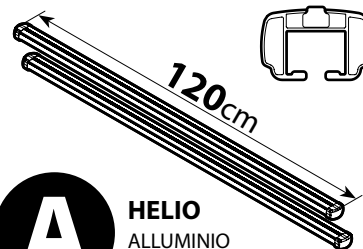



**A**

**HELIO**  
ALLUMINIO  
Aluminium













=

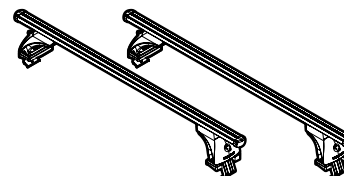

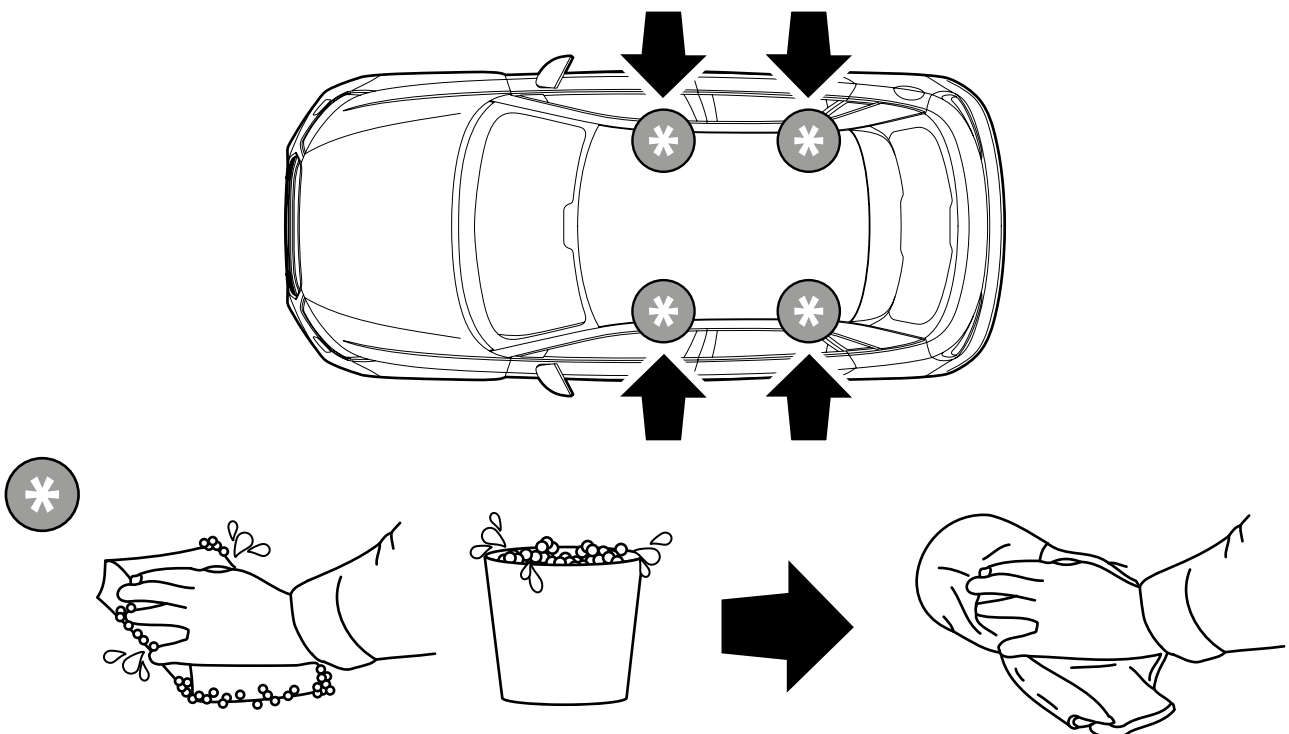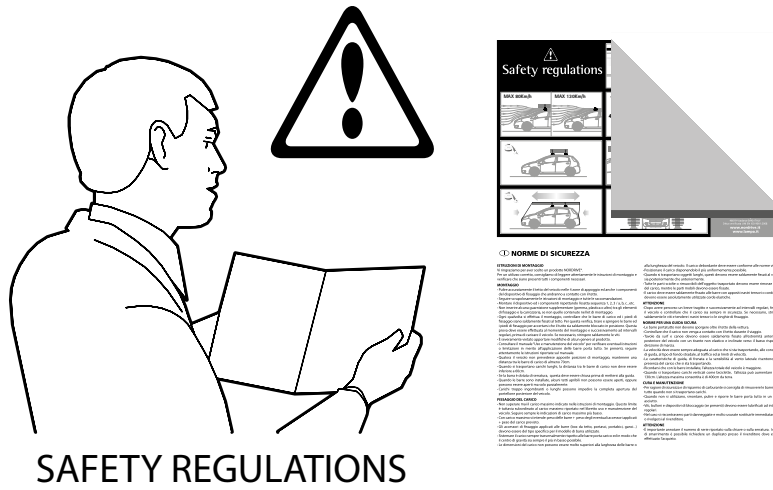
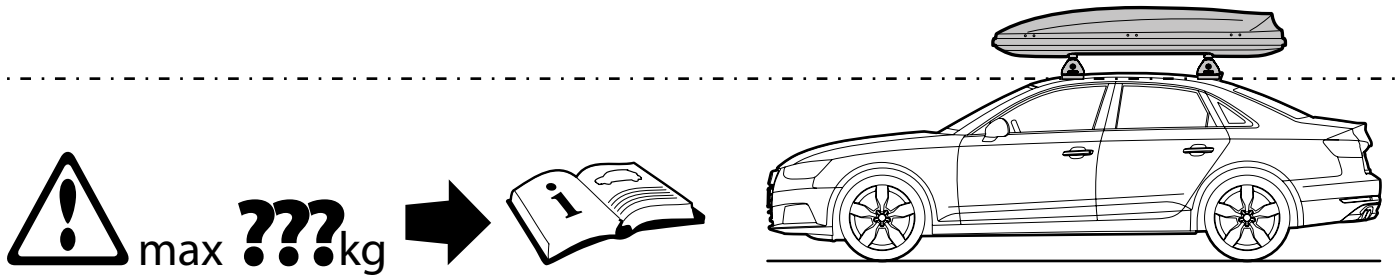
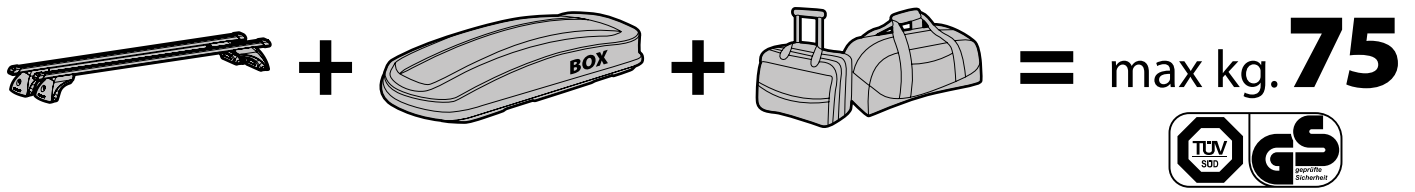


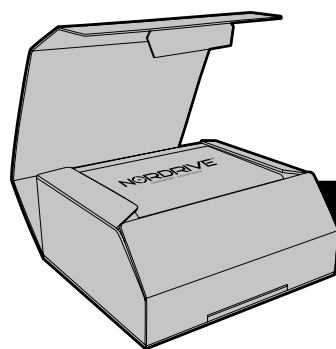



Art. **N21124**

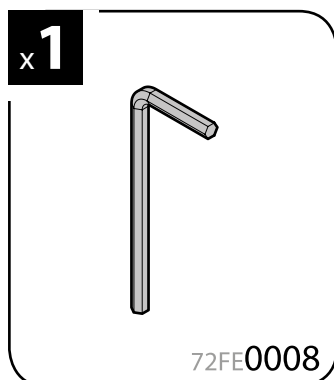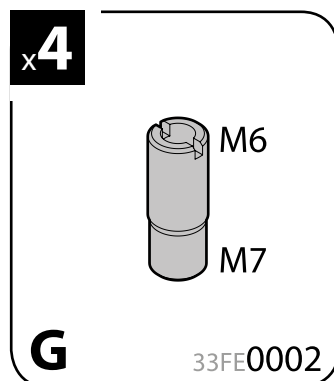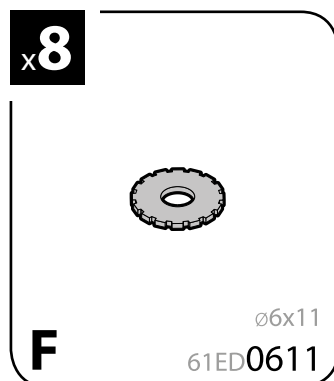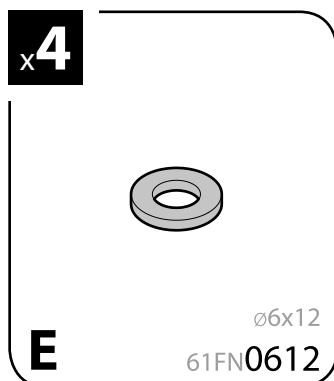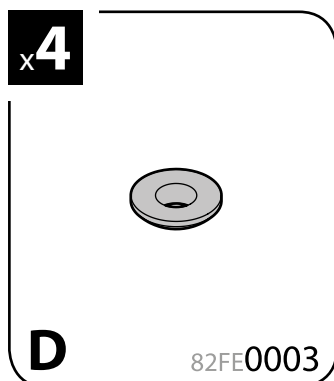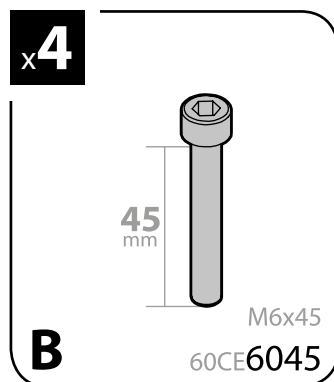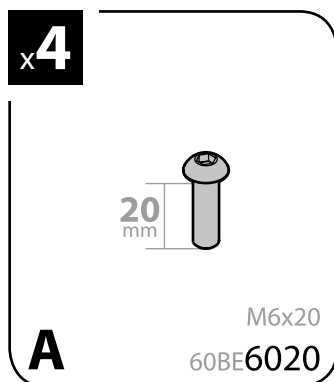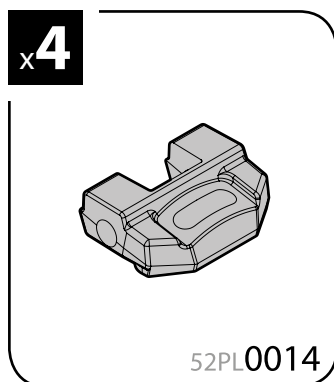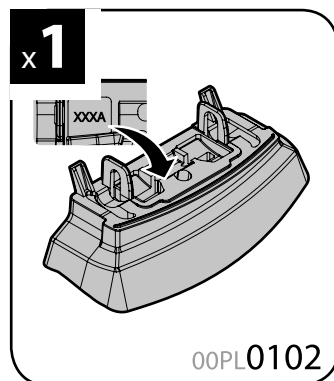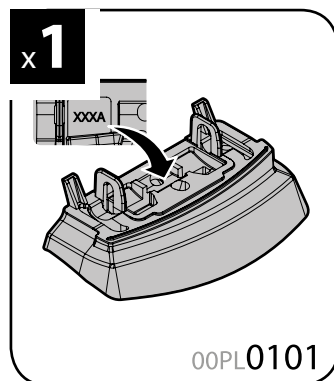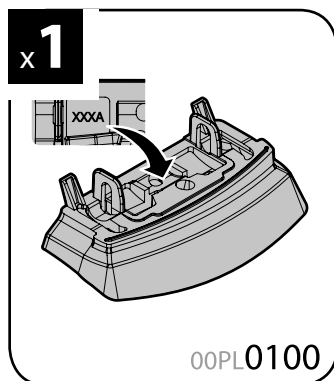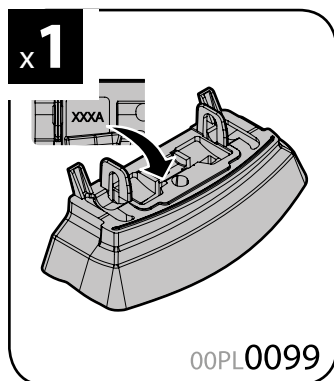



1

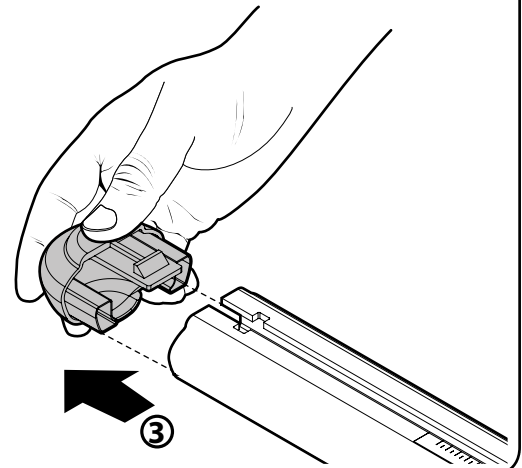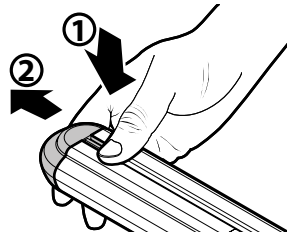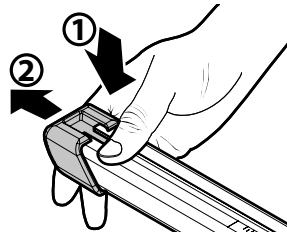


2

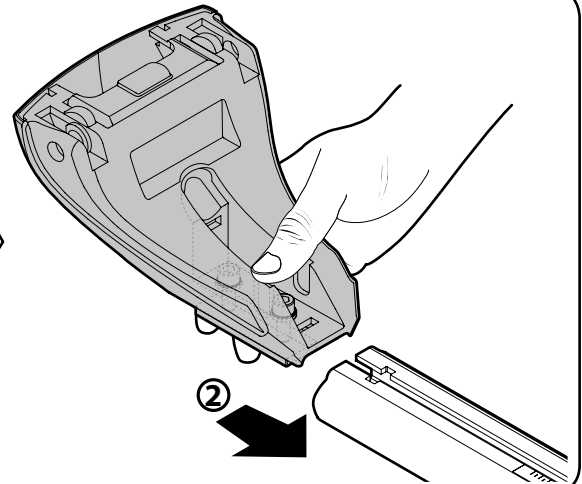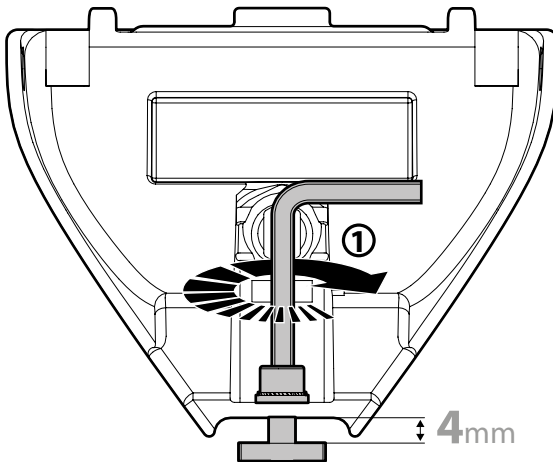


3

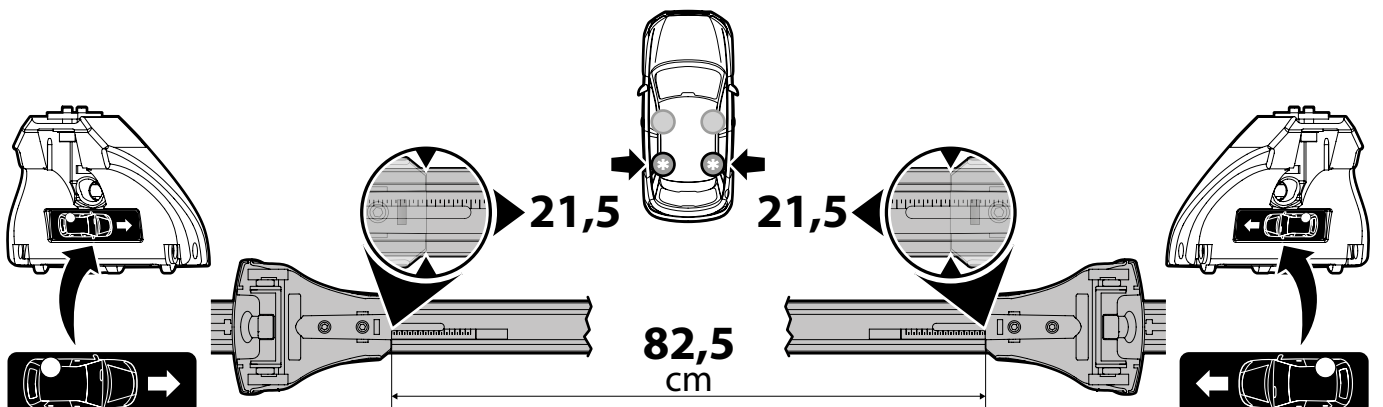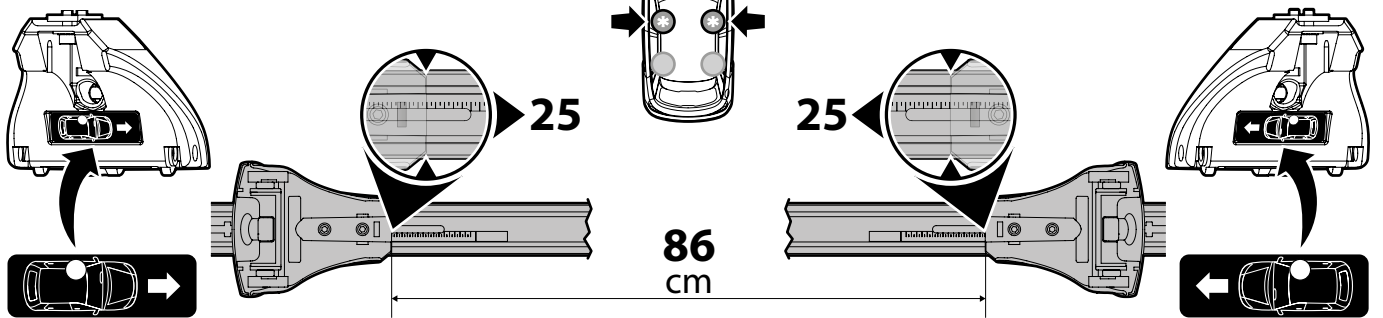


4

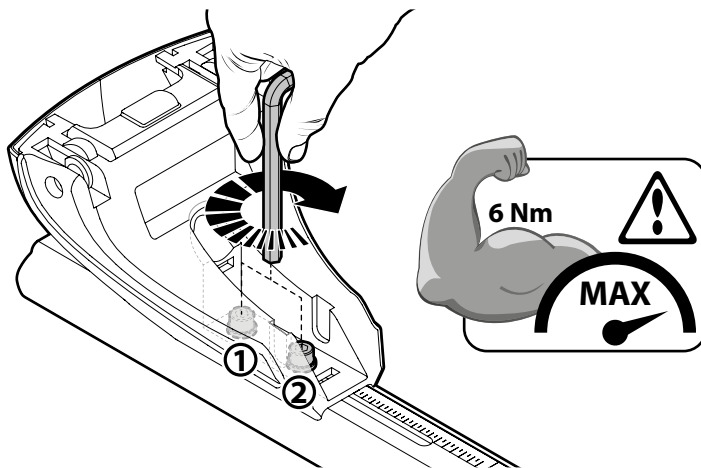


5

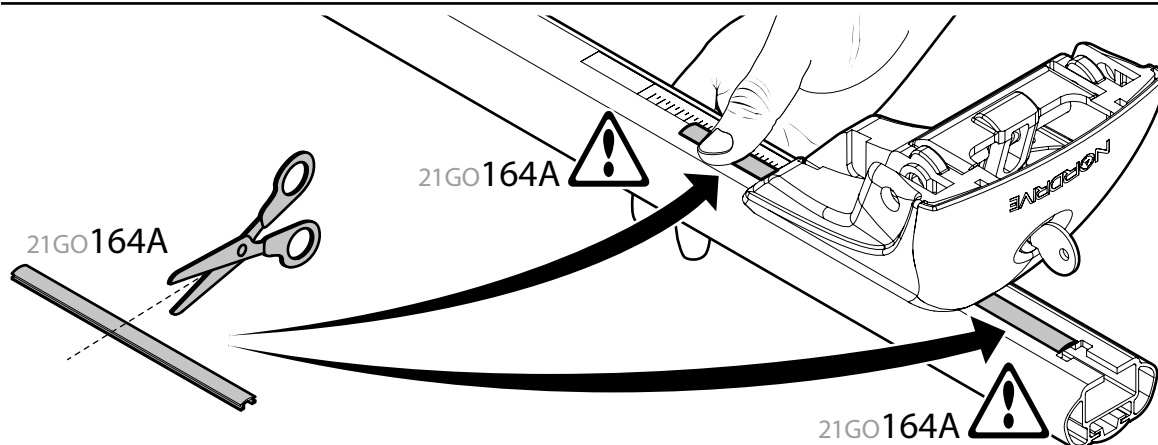


6

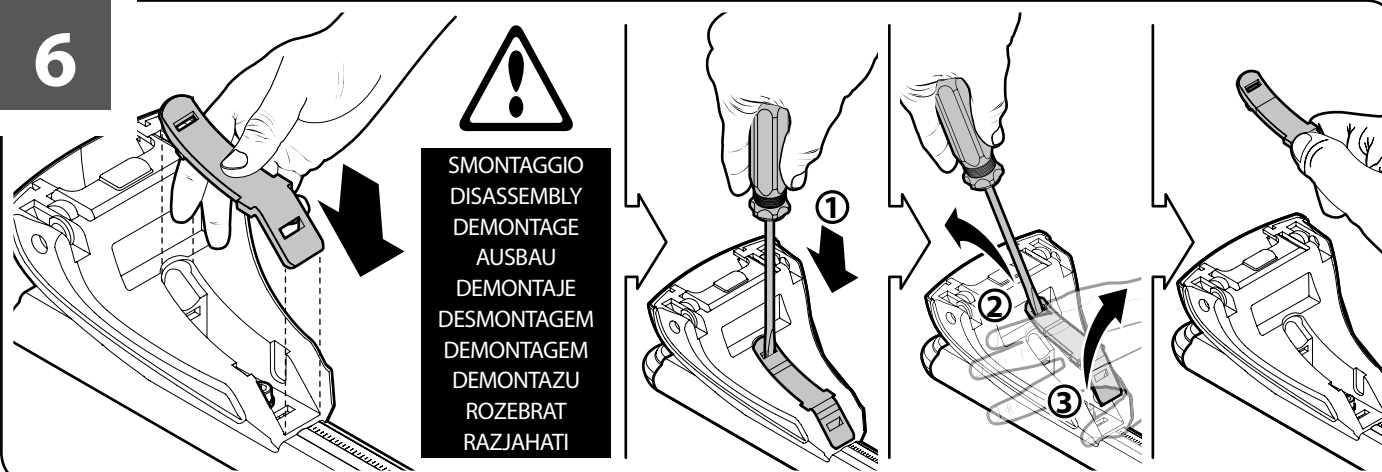


7

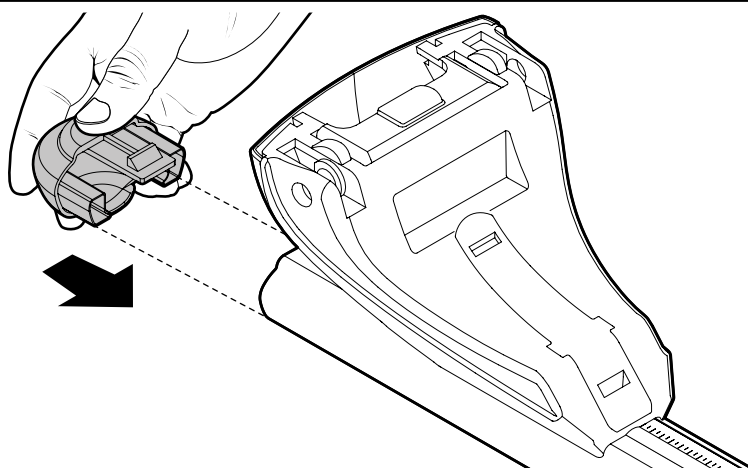


8

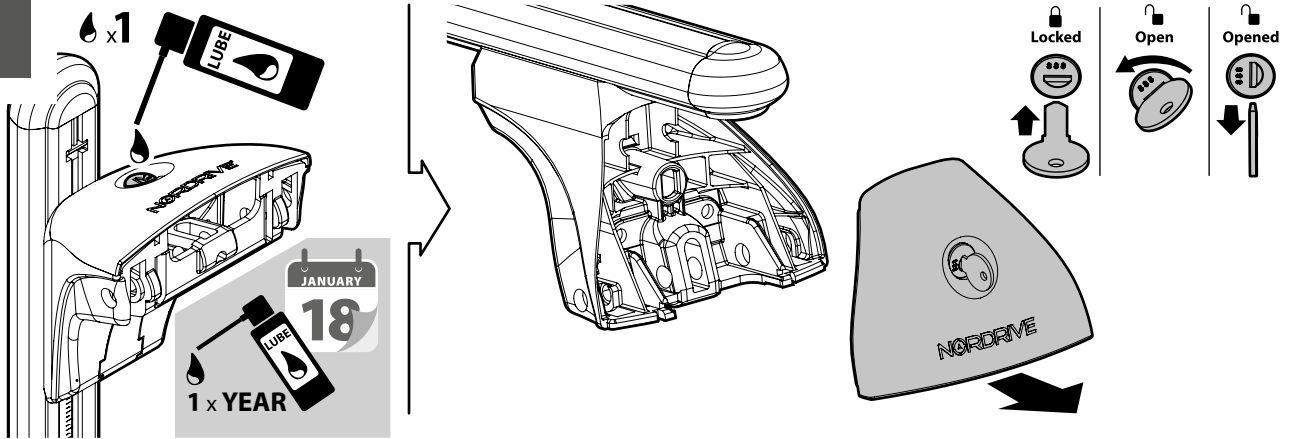


9

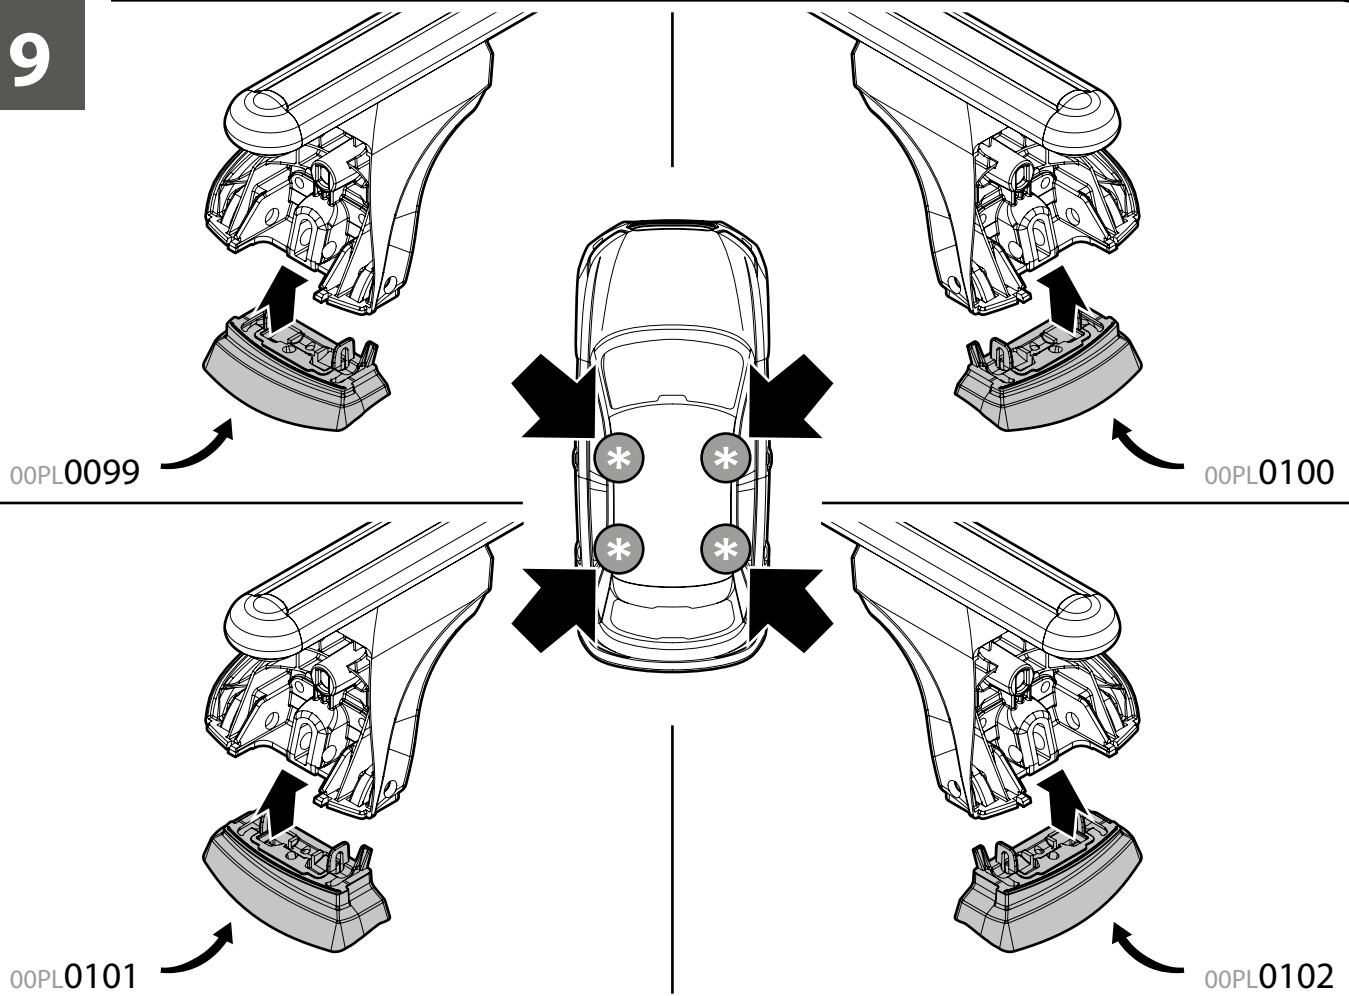


10

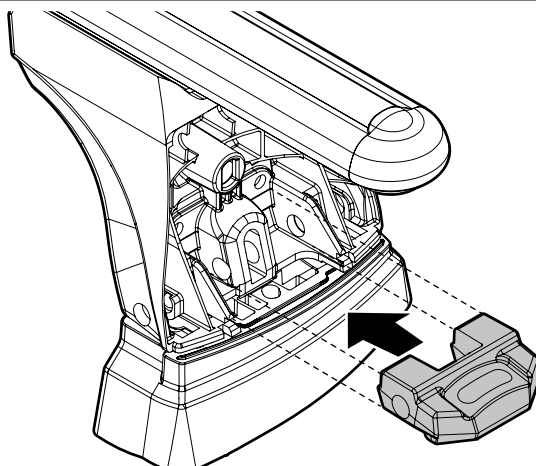

11





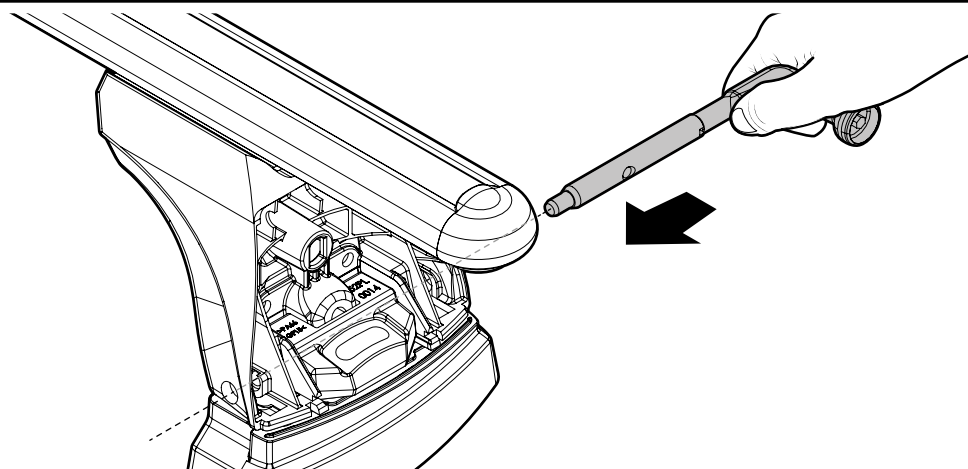


12




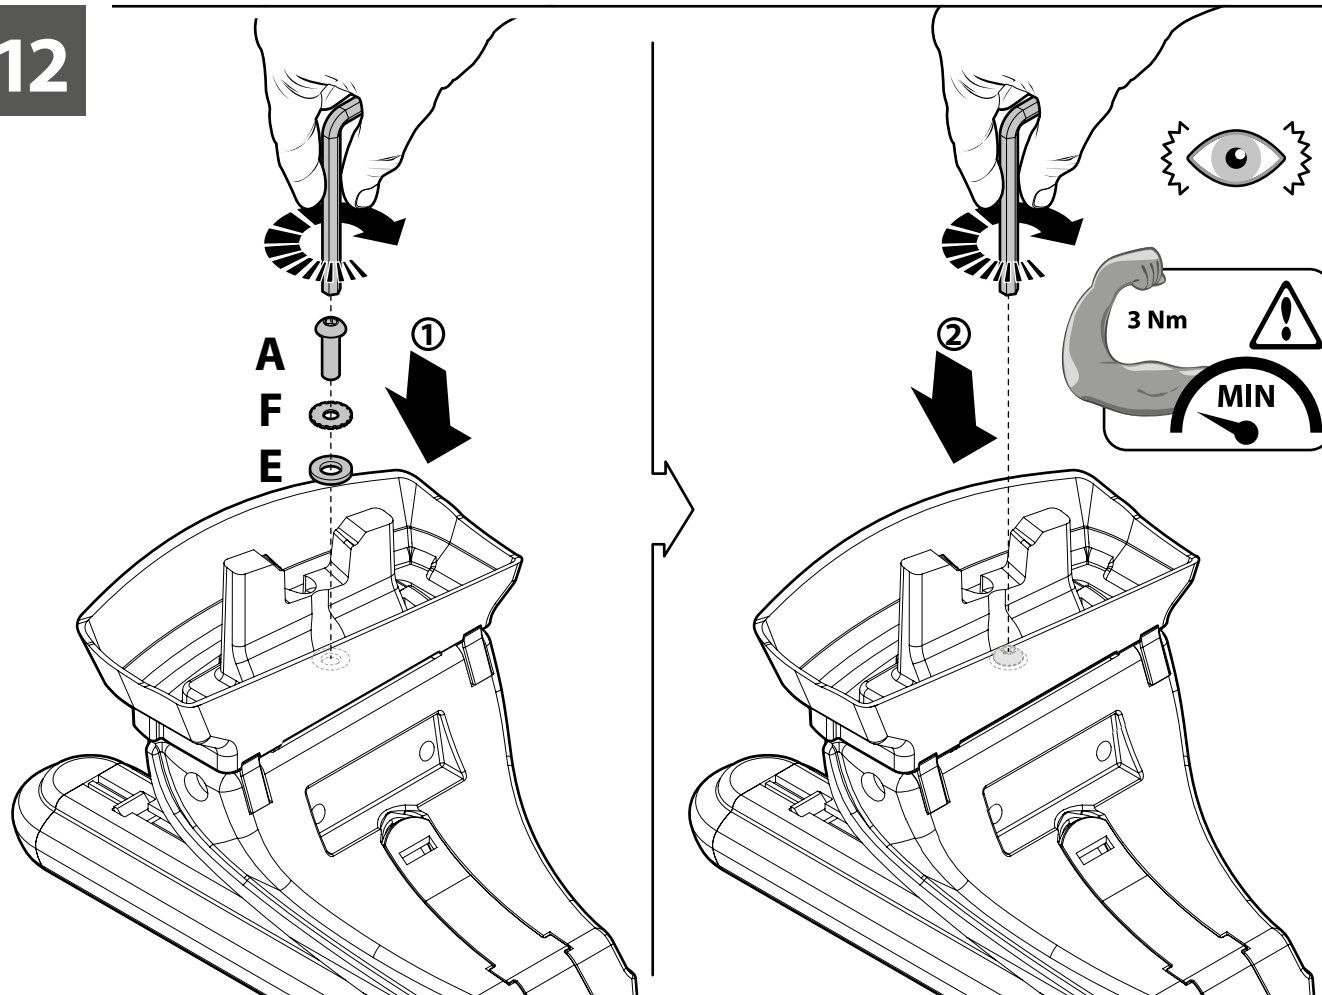


# 13


- ① Non incluso
- ⒼⒷ Not included
- ② Non inclus
- ③ Nicht enthalten
- ④ No incluido

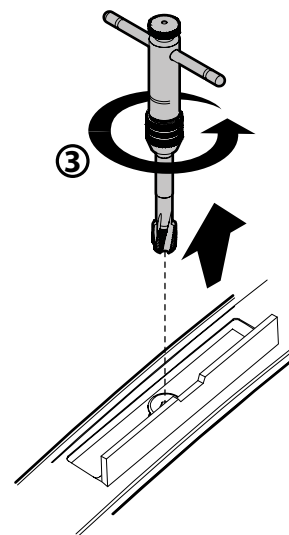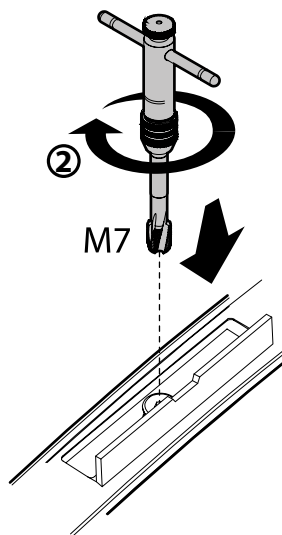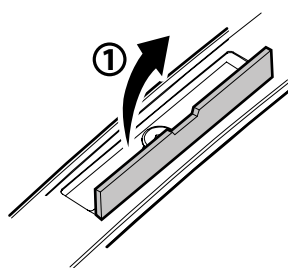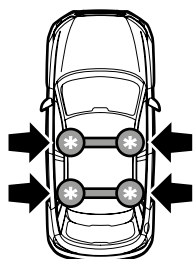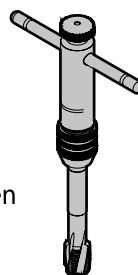




# 14

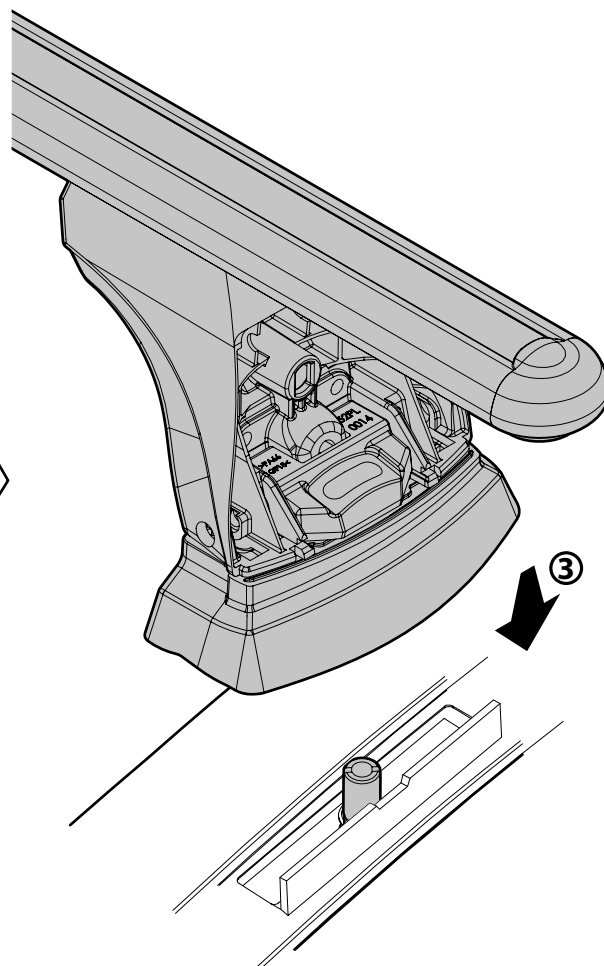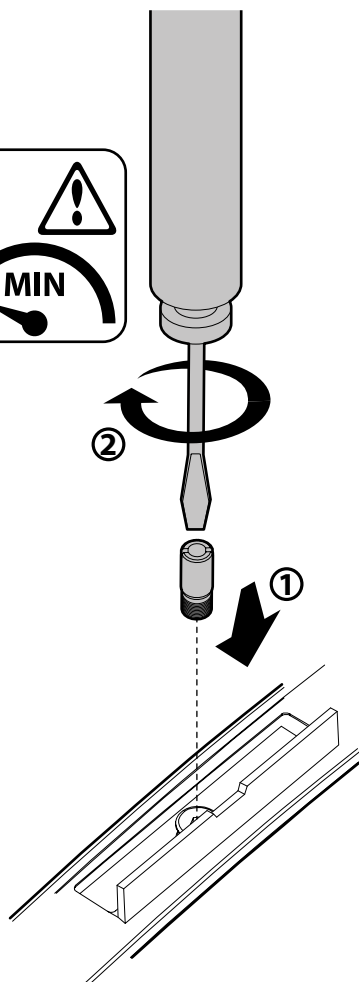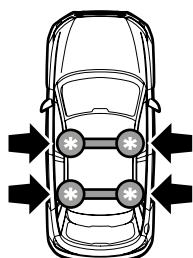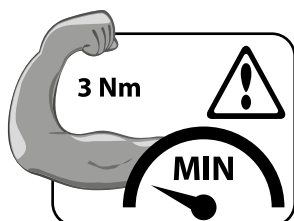



15

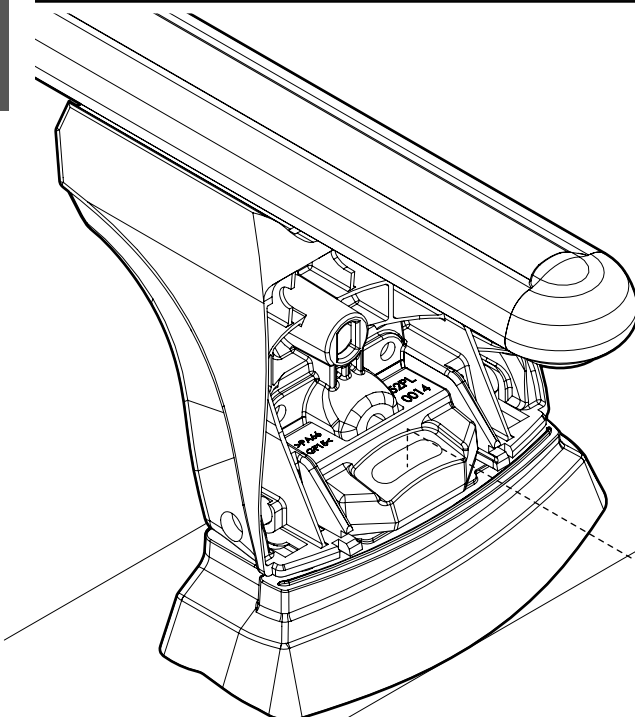



- B**
- F**
- D**
- C**

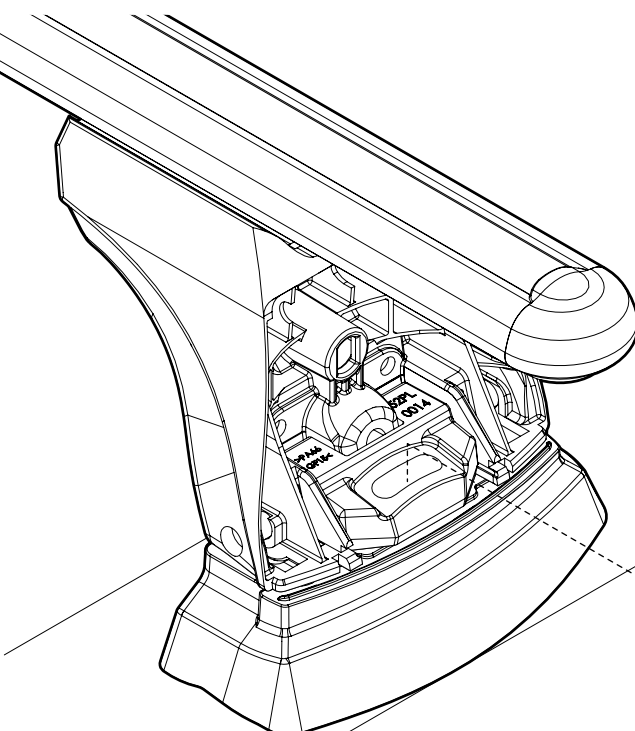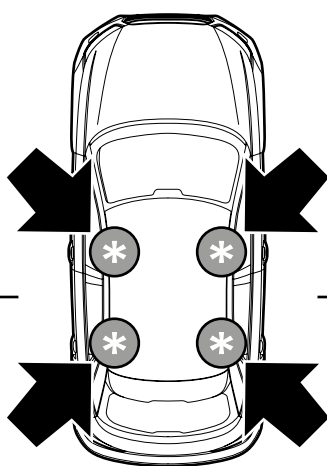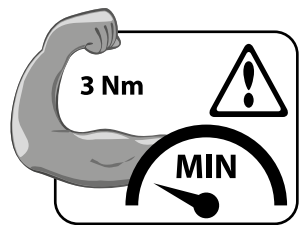




- B**
- F**
- D**
- C**

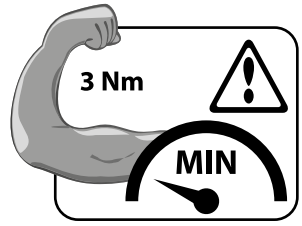




16

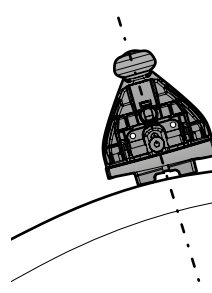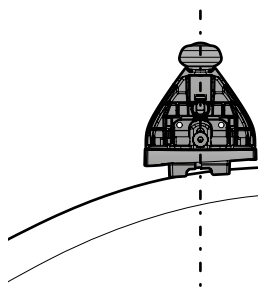

17

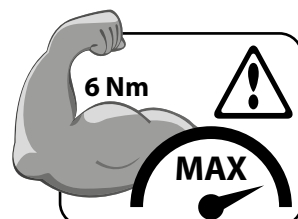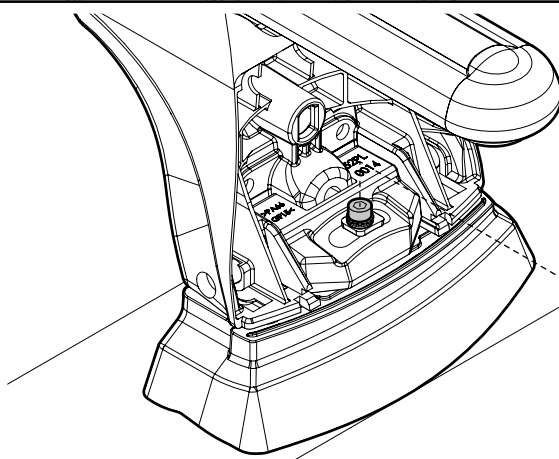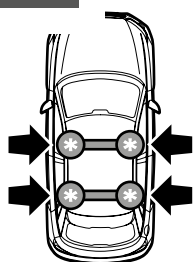

# ATTENZIONE WARNING

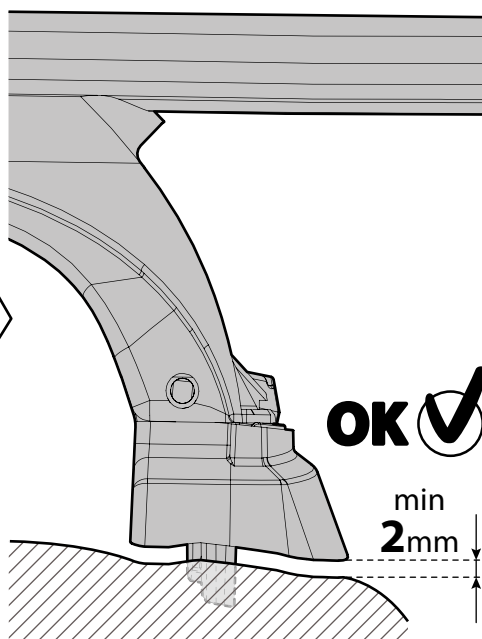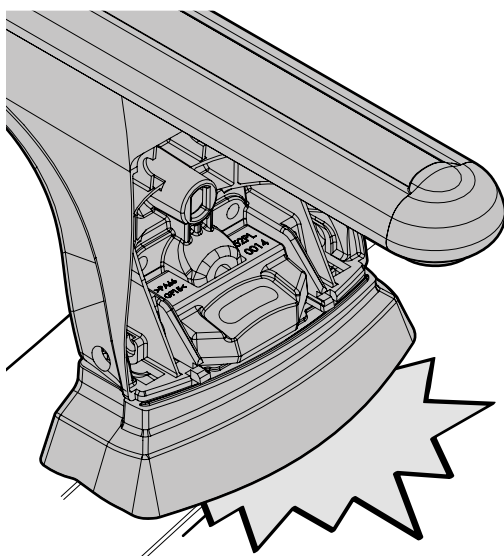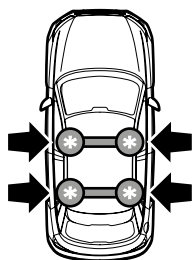

min  
2mm

**18**

This diagram illustrates the final step of attaching the outboard motor to the transom. A large black arrow points from the previous step to this one. The outboard motor is shown being lowered into the transom. A pin is used to secure the motor to the transom. The diagram shows the motor being lowered into the transom and secured with a pin.

19

OK

20

The diagram illustrates the removal of the front door lock cylinder. A top-down view of the car shows the front doors. The main diagram shows a hand turning the door handle to the 'Opened' position. A screwdriver is used to remove the lock cylinder (1) and the door handle pin (2). A legend shows the 'Opened', 'Lock', and 'Locked' positions of the door handle.

# EVOS

**NORDRIVE®**  
TRANSPORT SOLUTIONS

is a registered trade mark of

**LAMPA S.p.A.**

Via G. Rossa 53/55, 46019 Viadana (MN) ITALY

Tel. +39 0375 820700

UNI EN ISO 9001:2015 Certified Company

**[www.nordrive.it](http://www.nordrive.it)**

**[www.lampa.it](http://www.lampa.it)**