



Art. **N30022**


CITROËN JUMPER

 1/94→3/06



FIAT DUCATO

 7/94→6/06

PEUGEOT BOXER

 2/94→3/06

KIT x4

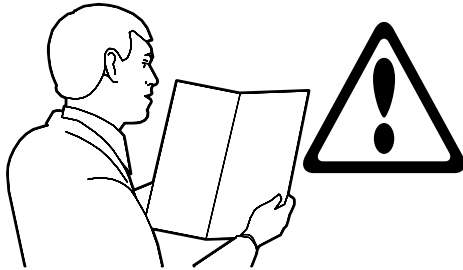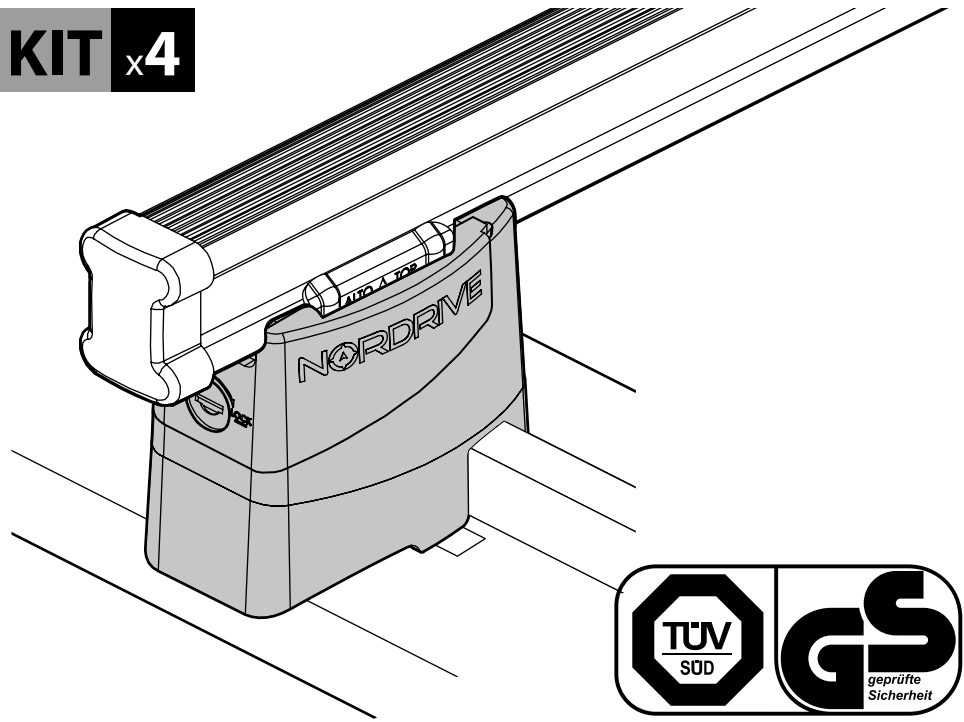


- ⓘ ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE
KARGO SERIES**

- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓒ MONTERINGSANVISNING
- Ⓕ ASENNUSOHJE
- Ⓔ PAIGALDUSJUHEND
- Ⓗ STIPRINĀŠANAS INSTRUKCIJA
- Ⓕ PRITVIRTINIMO INSTRUKCIJOS
- Ⓖ INSTRUKCJA MONTAŻU
- Ⓒ Инструкции по установке
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓒ NÁVOD NA MONTÁŽ
- Ⓕ NAVODILA ZA PRITRJEVANJE
- Ⓗ UPUTA ZA SASTAVLJANJE
- Ⓗ A FELSZERELÉS MÓDJA
- Ⓒ Οδηγίες συναρμολόγησης
- Ⓕ MONTAJ TALIMATLARL
- Ⓒ ИHCTPYKЦИИ 3A MOHTAЖ
- Ⓕ UPUTSTVA ZA MONTAŽU



 **Kargo**
ACCIAIO
Steel

- ⓘ BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

180cm

Art. **N10015** x2



 **Kargo-Plus**
ALLUMINIO
Aluminium


- ⓘ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS

180cm

Art. **N10045** x2




KRS-7

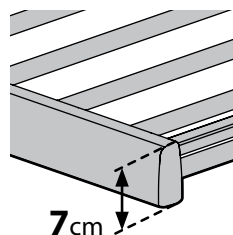

7cm

KRS-12

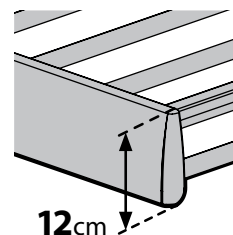


12cm

- ⓘ CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

NORDRIVE®








TRANSPORT SOLUTIONS

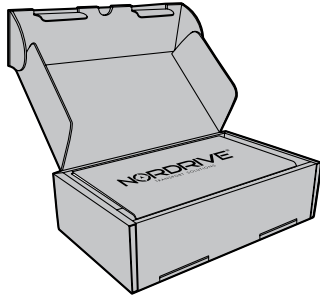


NORDDRIVE®

TRANSPORT SOLUTIONS

Art. **N30022**

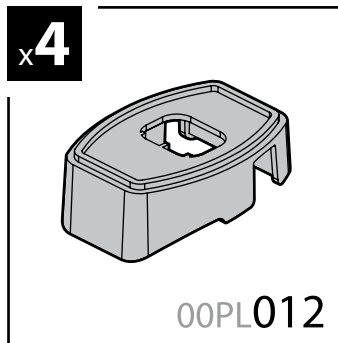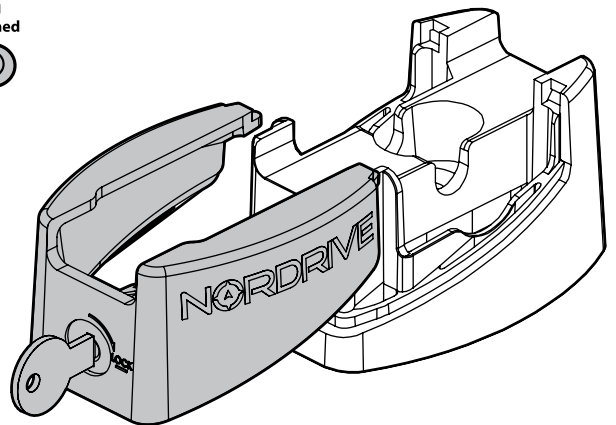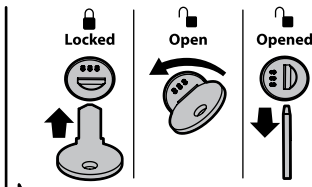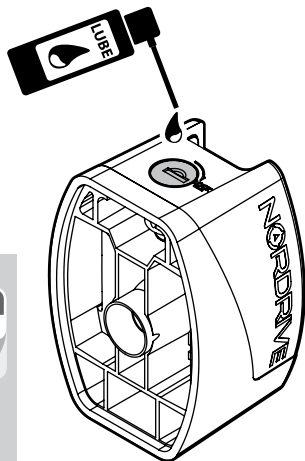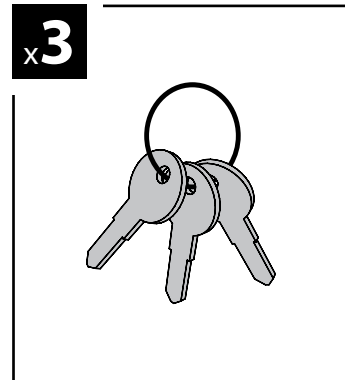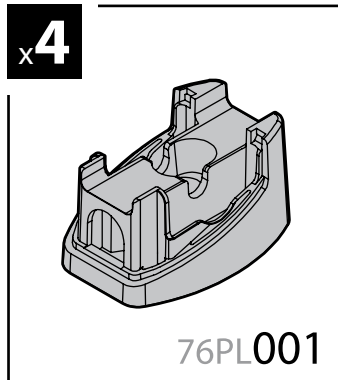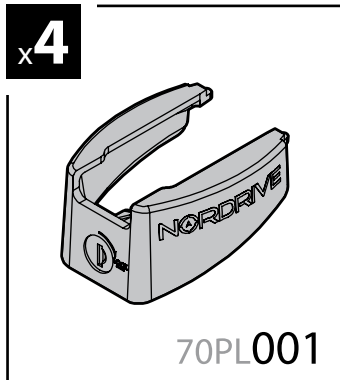


x8

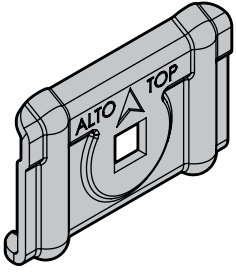


40FE001

x4

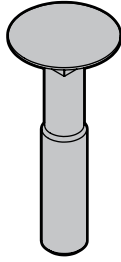


60BQ8045

x4



62BB0800

x4

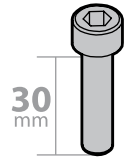


M6x30
60CE6030

x4




61ED0611

x4




ø6 - ø15
82FE0001

x4

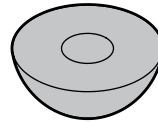


60RO004

x4

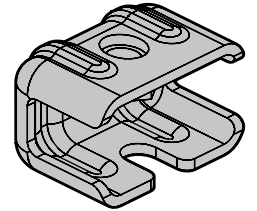


40FE003

x1






72FE0001

x1



72FE0002

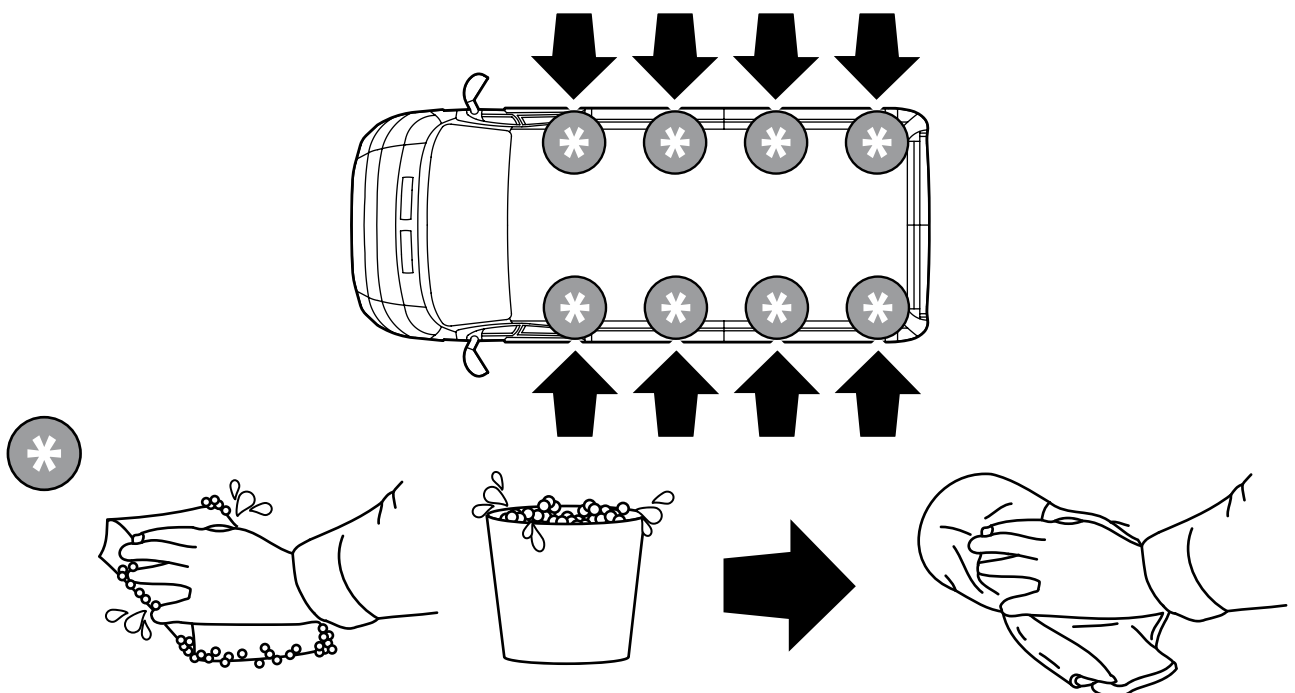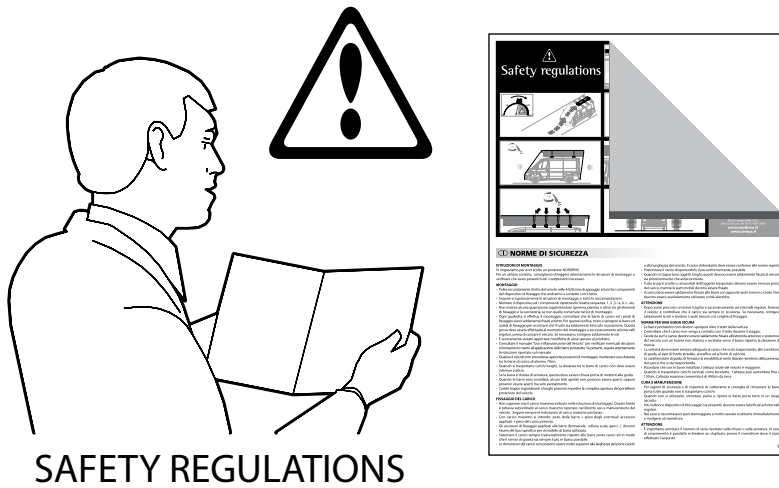
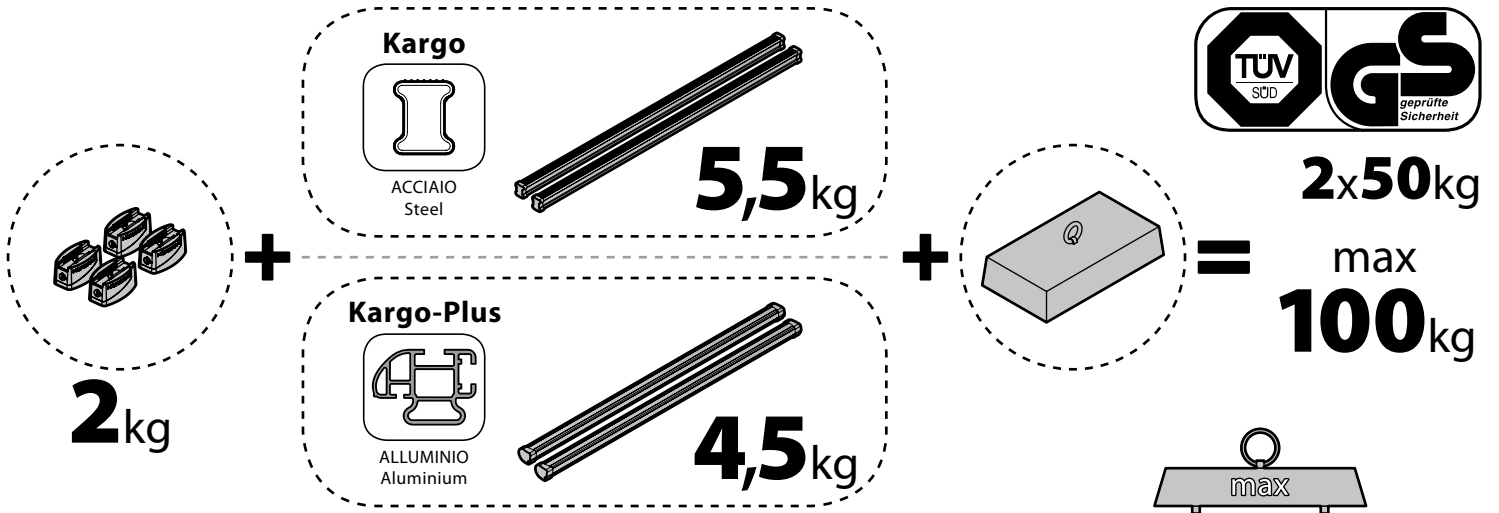


ⓘ ISTRUZIONI DI MONTAGGIO
ⓖᔡ FITTING INSTRUCTIONS
ⓓ MONTAGEANLEITUNG
ⓕ INSTRUCTIONS DE MONTAGE
ⓔ ISTRUCCIONES DE MONTAJE
ⓖ ⓓ INSTRUÇÕES DE MONTAGEM
Ⓝᓚ MONTAGE-INSTRUCTIES
Ⓢ MONTERINGSANVISNING

ⓕᓗᓗ ASENNUSOHJE
ⓔᓄᓄ PAIGALDUSJUHEND
ⓕᓗᓄ STIPRIŅĀŠANAS INSTRUKCIJA
ⓕᓗᓄ PRITVIRTINIMO INSTRUKCIJOS
ⓕᓗᓄ INSTRUKCJA MONTAŻU
ⓕᓗᓄ Инструкции по установке
ⓕᓗᓄ NÁVOD NA MONTÁŽ
ⓕᓗᓄ NÁVOD NA MONTÁŽ


ⓕᓗᓄ NAVODILA ZA PRITRJEVANJE
ⓕᓗᓄ UPUTA ZA SASTAVLJANJE
ⓕᓗᓄ A FELSZERELÉS MÓDJA
ⓕᓗᓄ Οδηγίες συναρμολόγησης
ⓕᓗᓄ MONTAJ TALIMATLARL
ⓕᓗᓄ ИHCTPYKЦИИ ЗА MONTAЖ
ⓕᓗᓄ UPUTSTVA ZA MONTAЖ

1

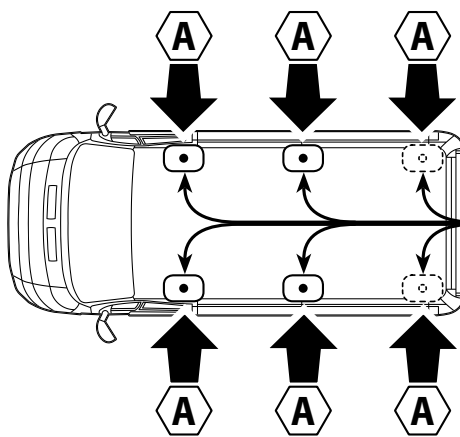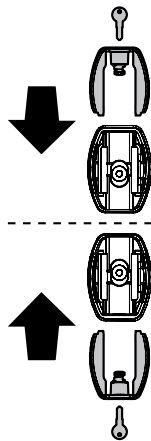


2


A

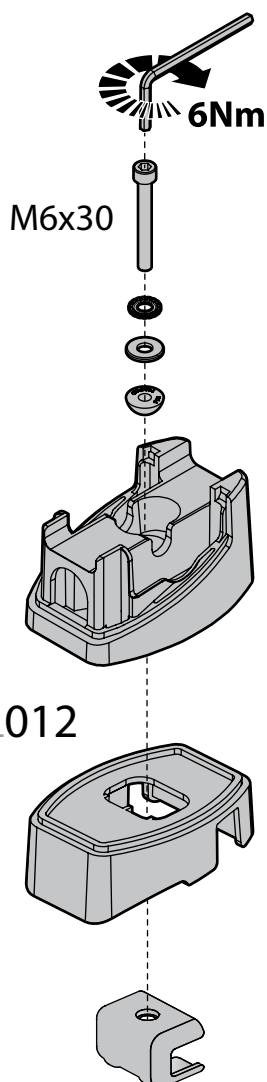

3

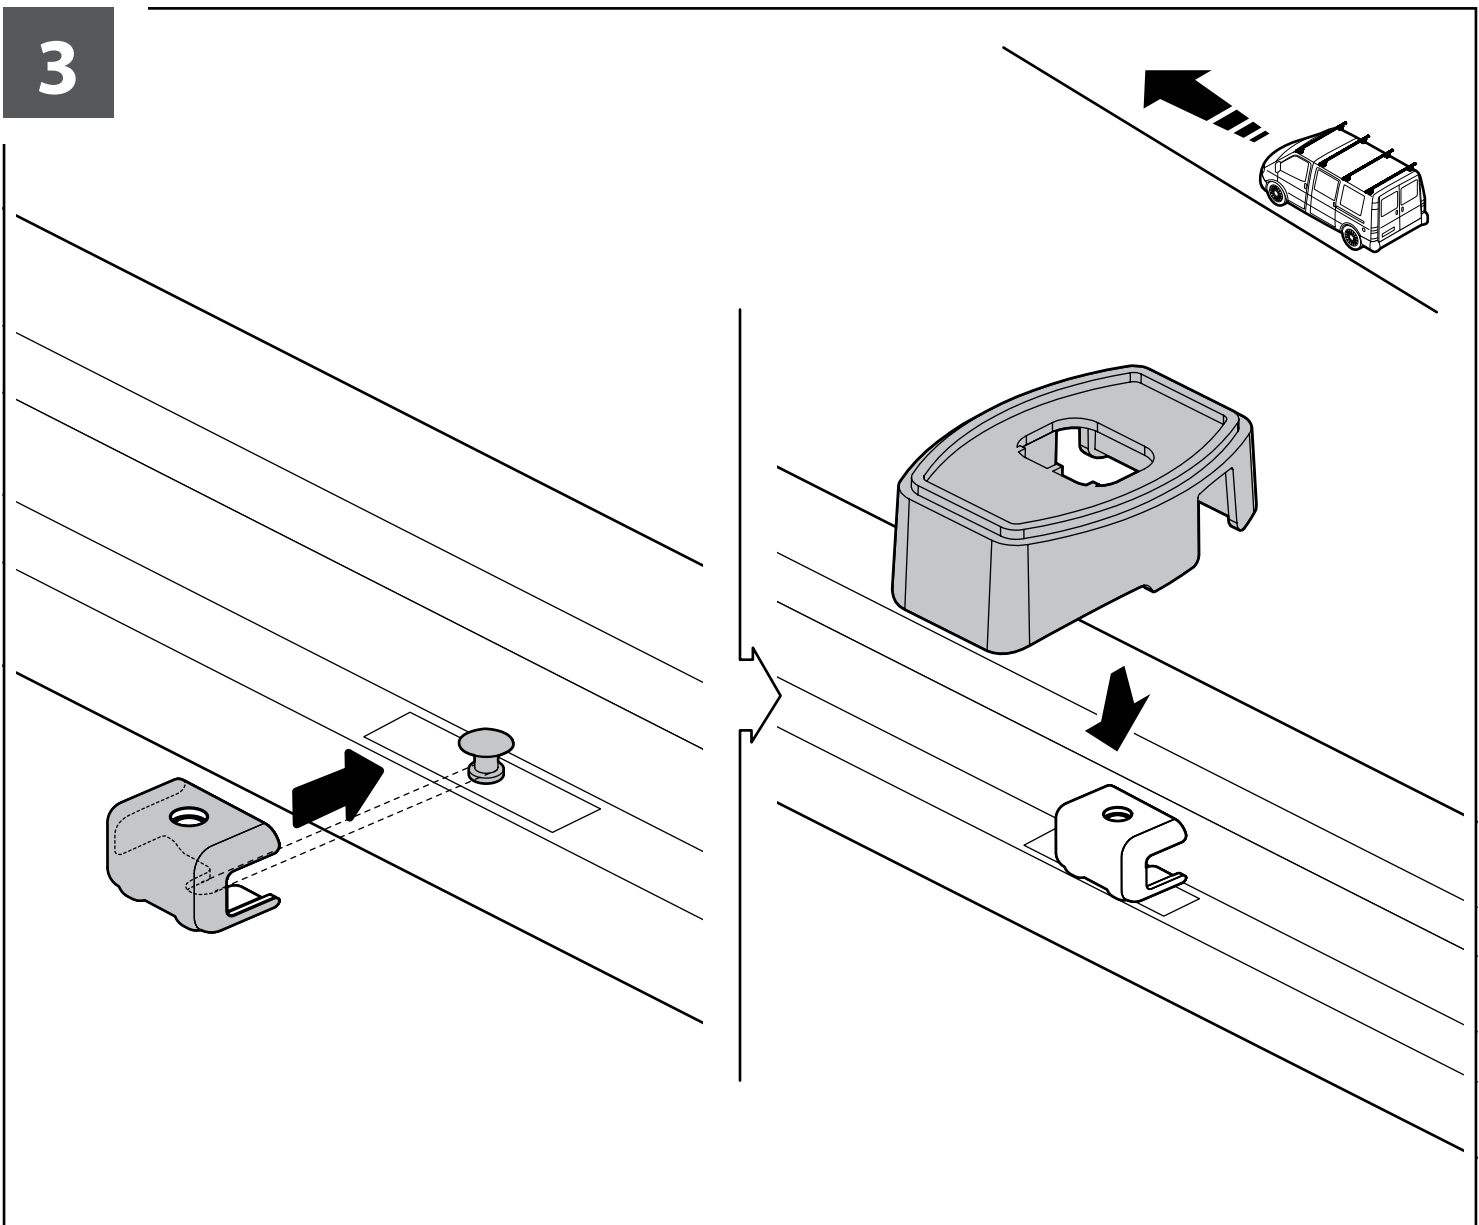

4

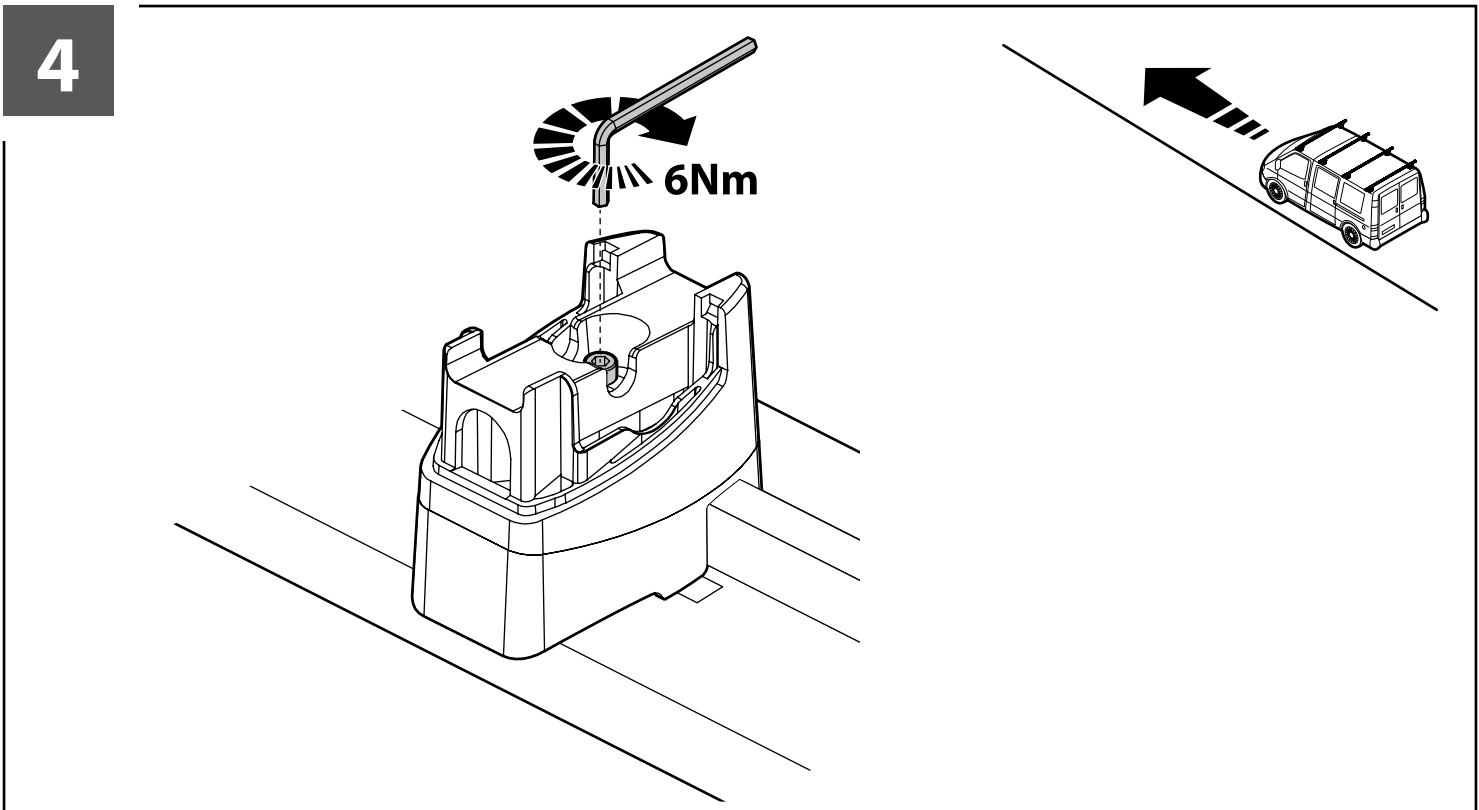




ATTENZIONE WARNING



Kargo

A

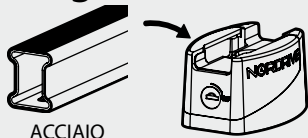


ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

Kargo-Plus



B

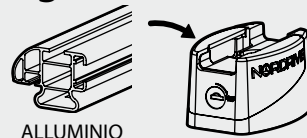



ALLUMINIO
Aluminium

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE



OK ✓

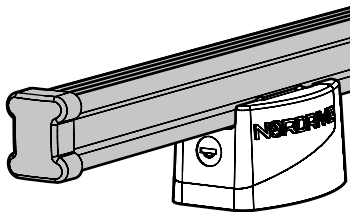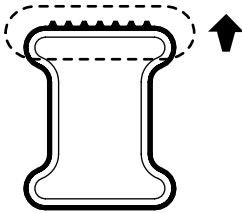





NO ✗

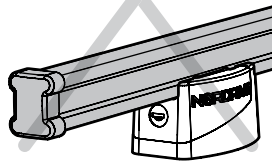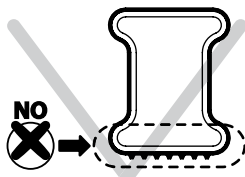


OK ✓

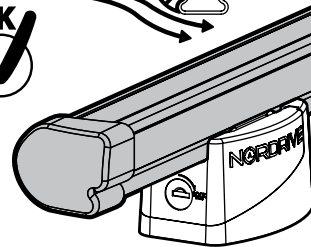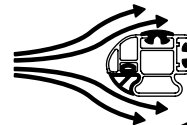



NO ✗

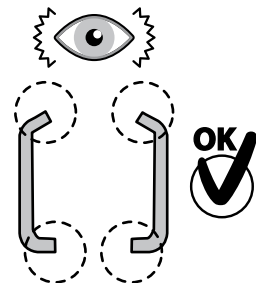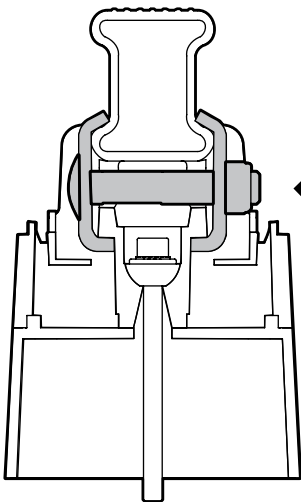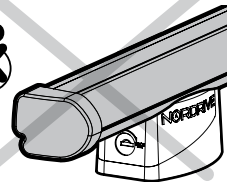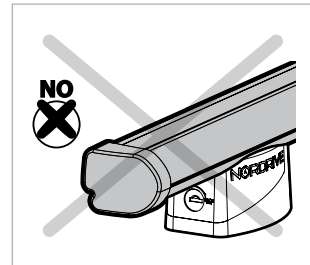


OK ✓

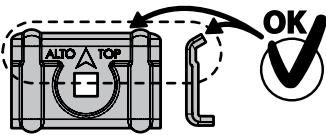


OK ✓

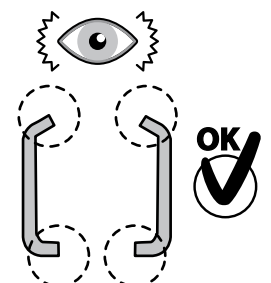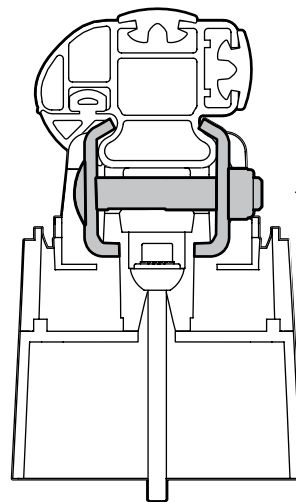


OK ✓

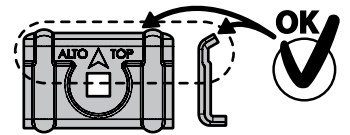


OK ✓

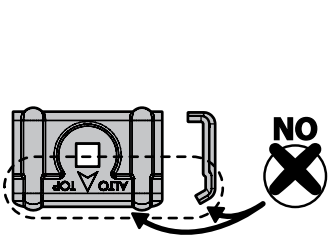


NO ✗

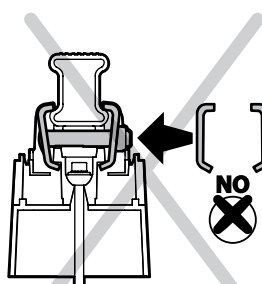

NO ✗

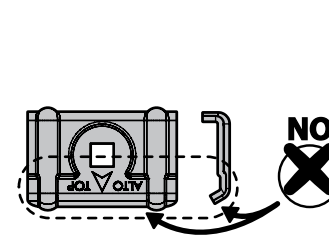


NO ✗

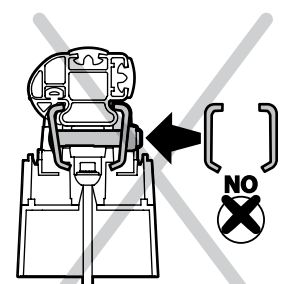

NO ✗

5


A

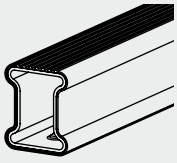


Kargo



ACCIAIO
Steel

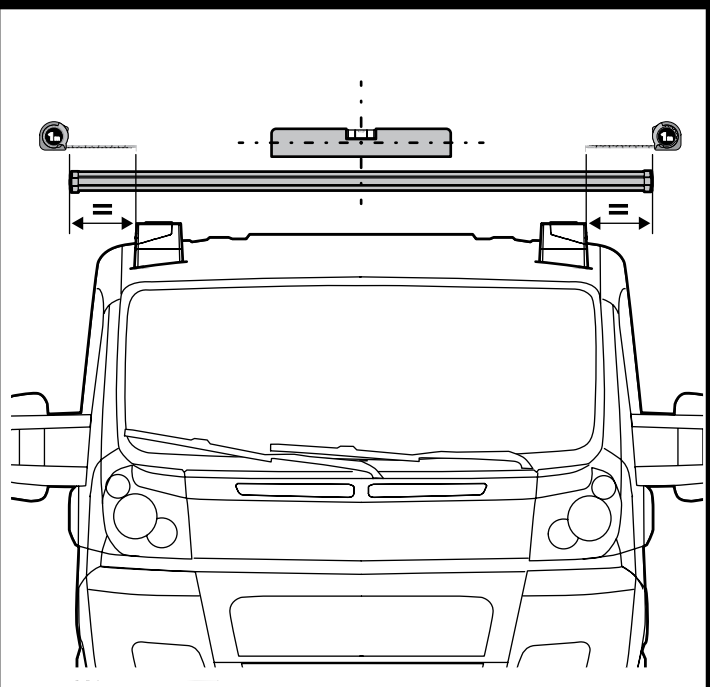


B

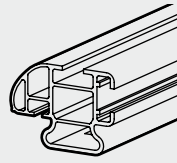


Kargo-Plus




ALLUMINIO
Aluminium

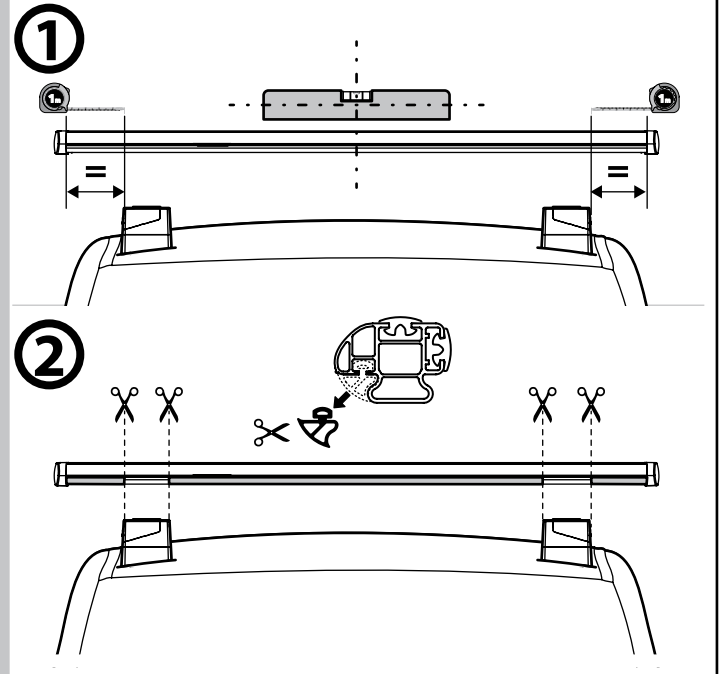



6

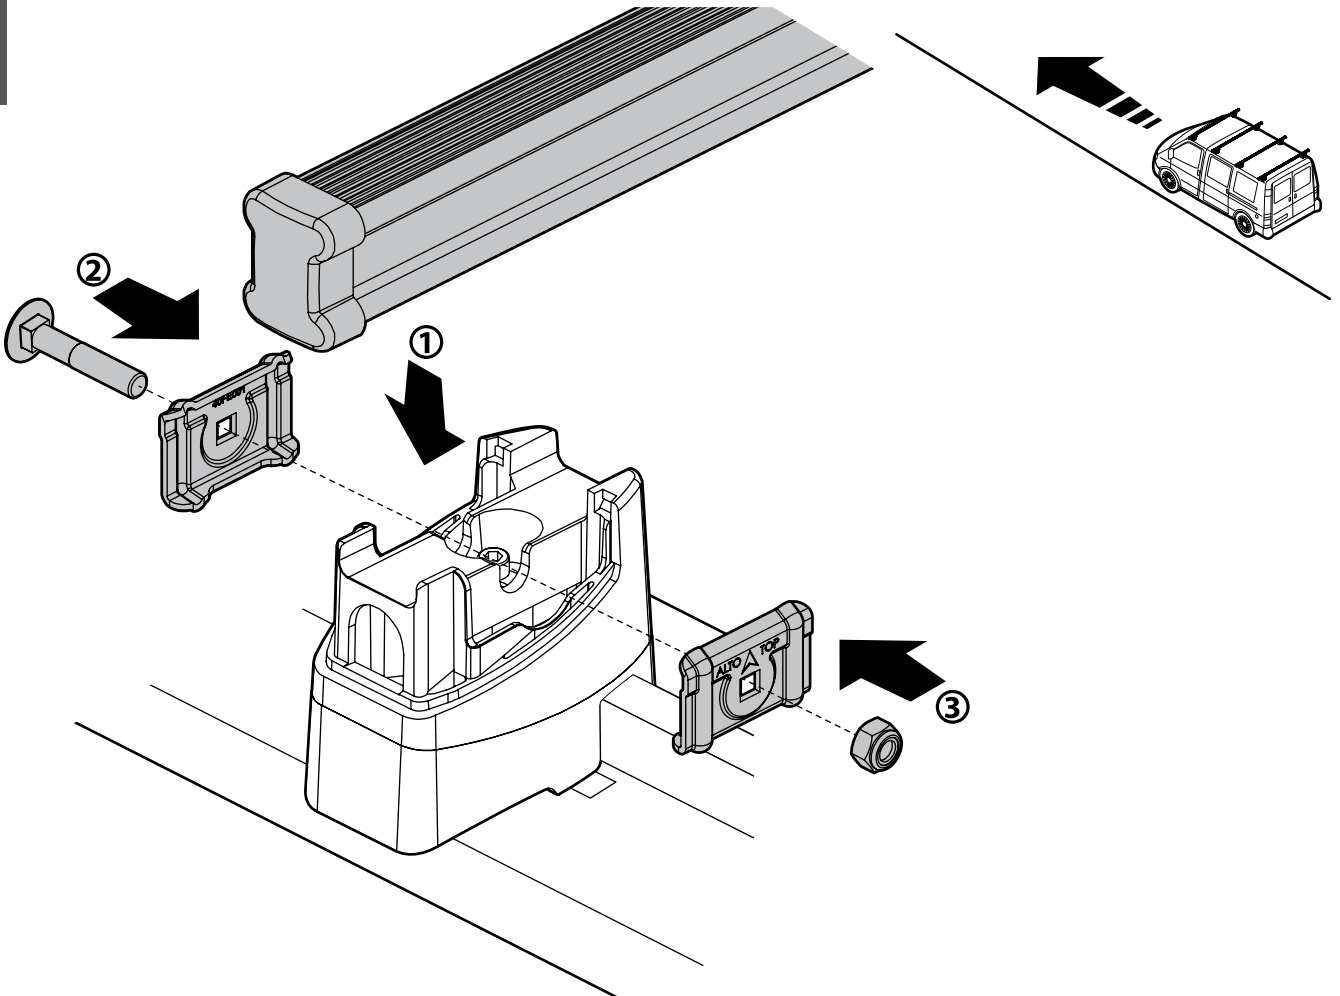

7

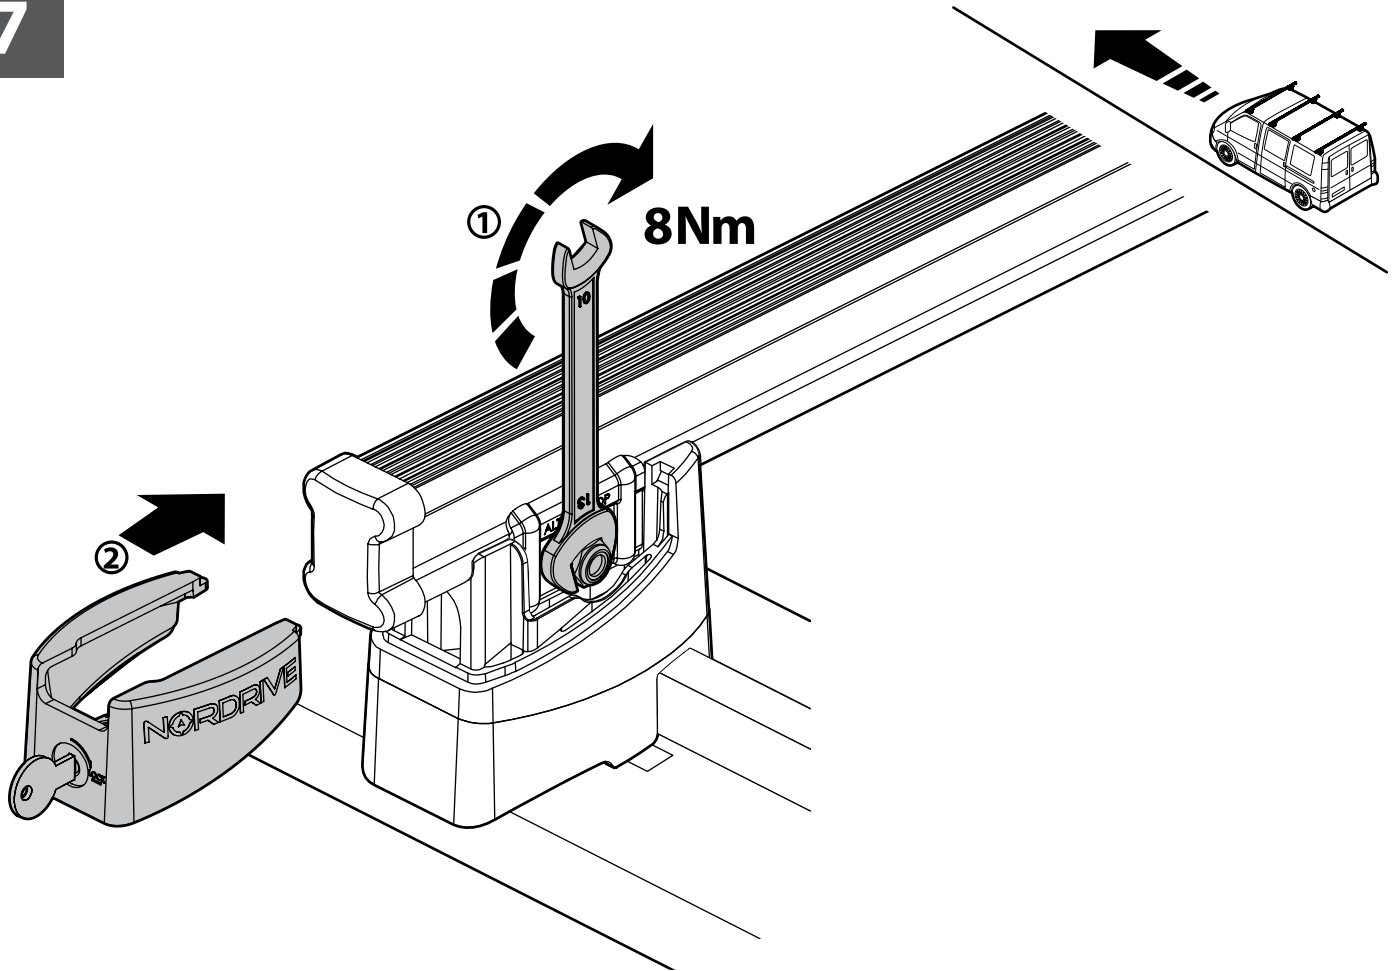


8

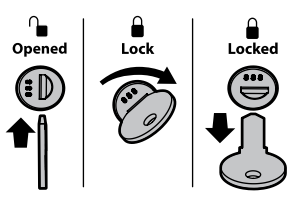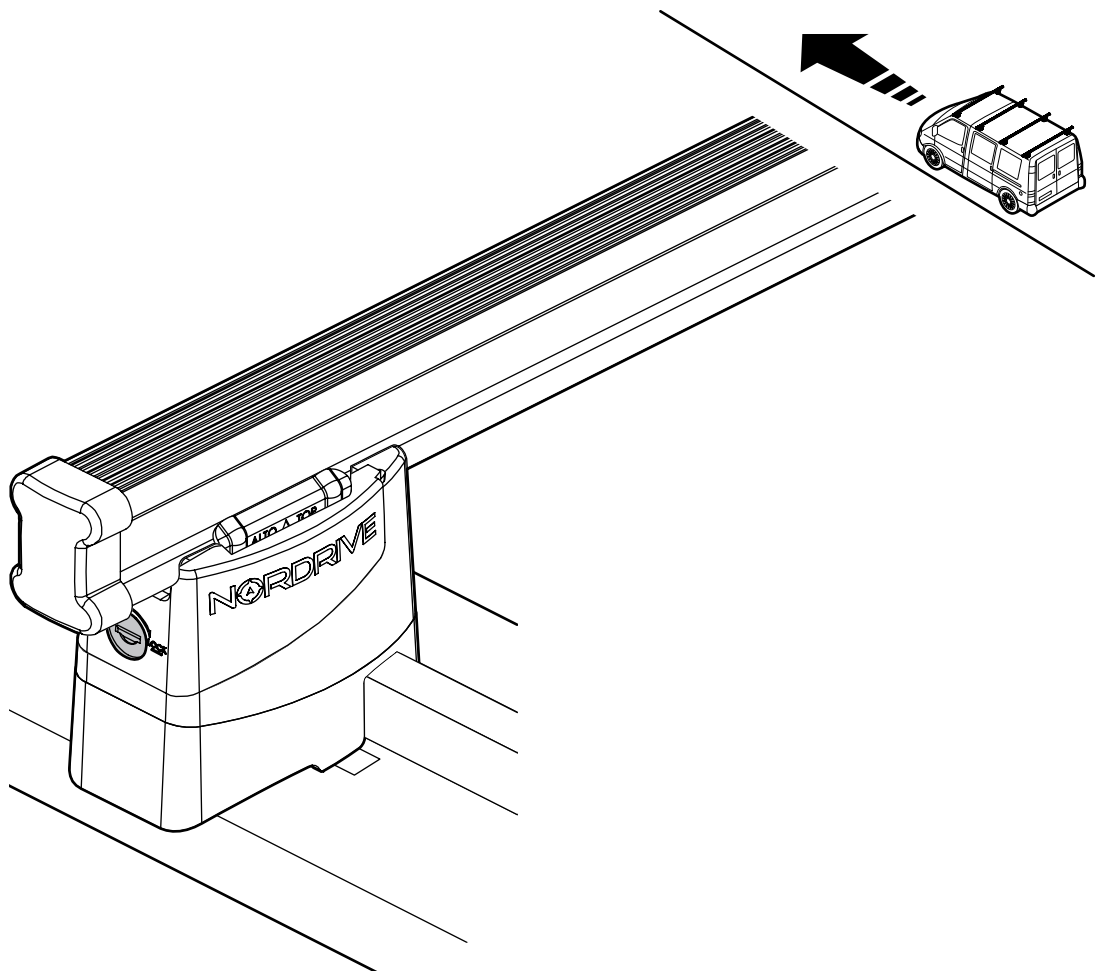

Kargo series




Acciaio / Steel

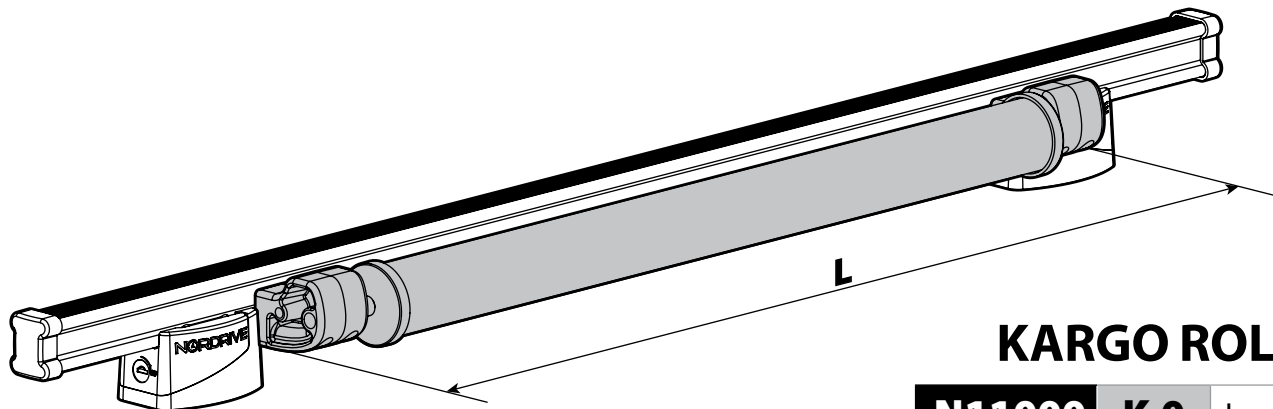


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

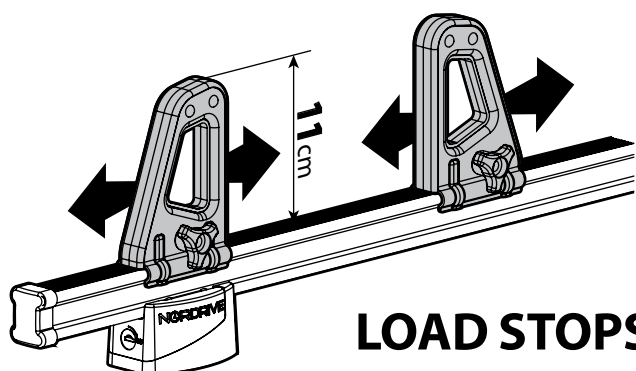


LOAD STOPS

N11001 K-1

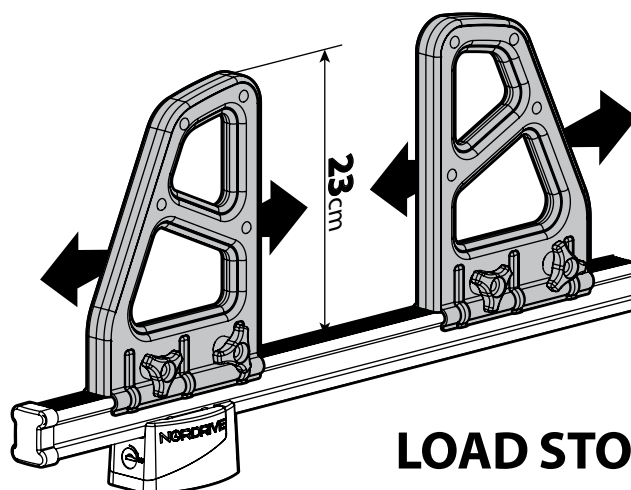

LOAD STOPS

N11002 K-2

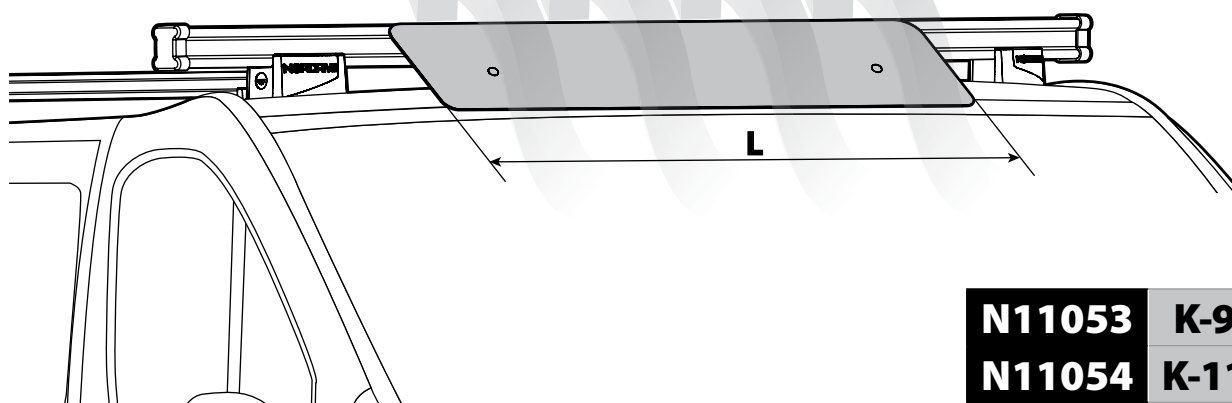


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series

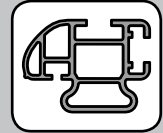


Alluminio / Aluminium

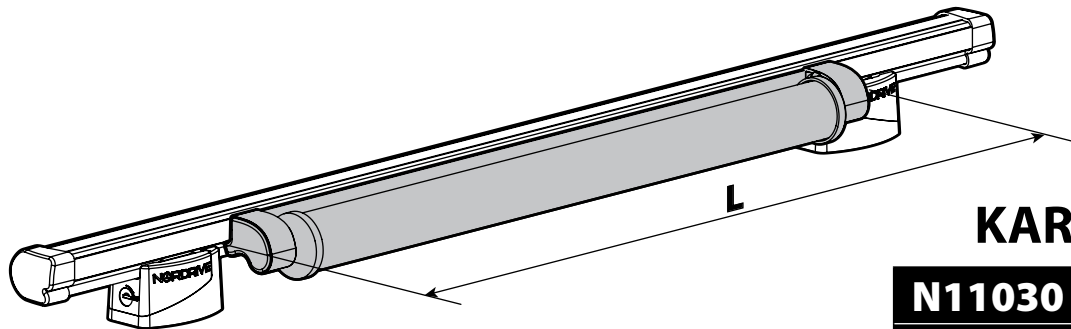


KARGO ROLLER

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

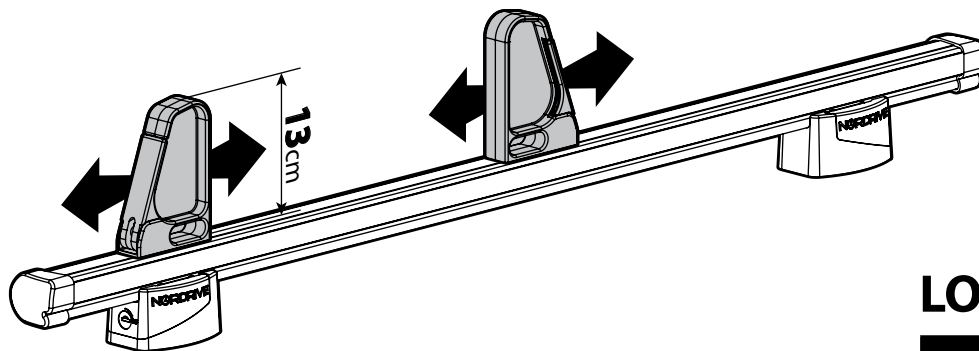


LOAD STOPS

N11031	KP-1
---------------	-------------

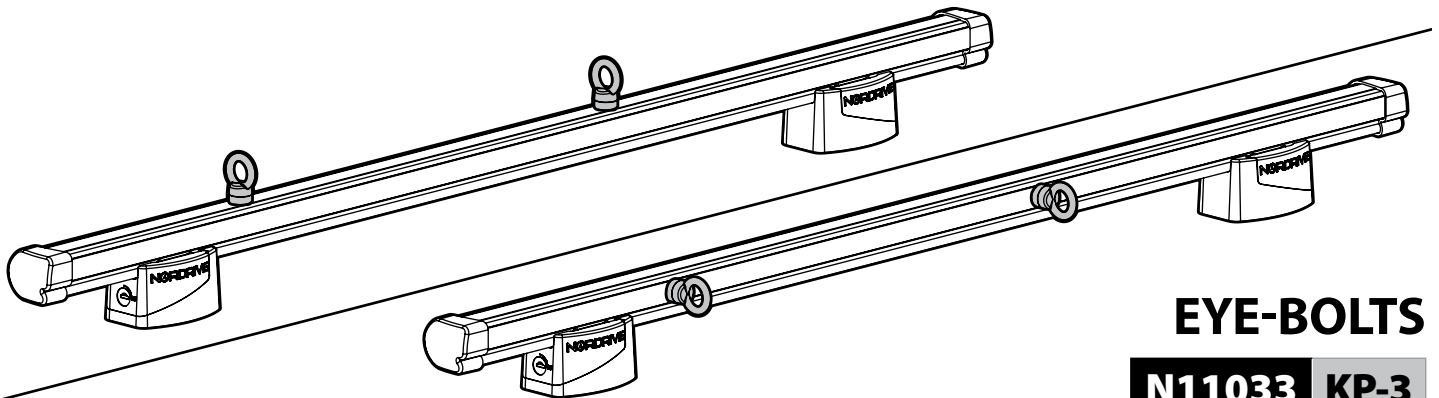

EYE-BOLTS

N11033	KP-3
---------------	-------------

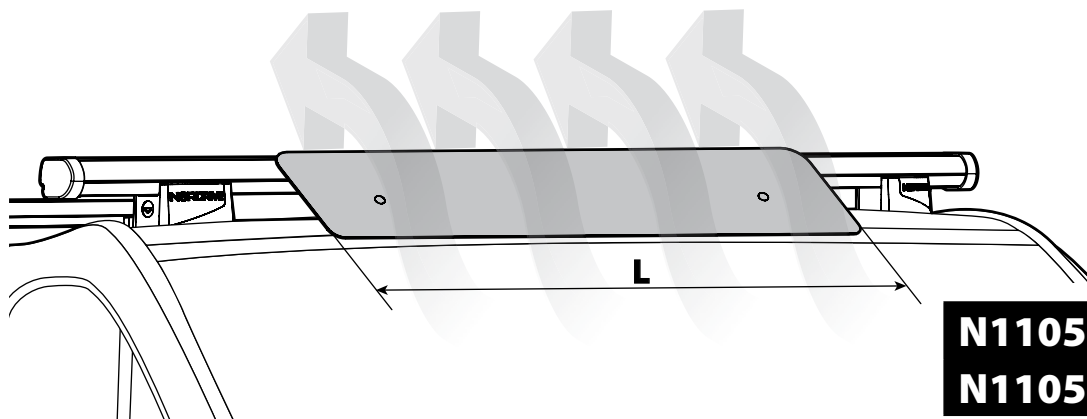

SPOILER

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series

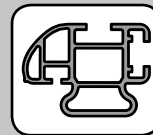

Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

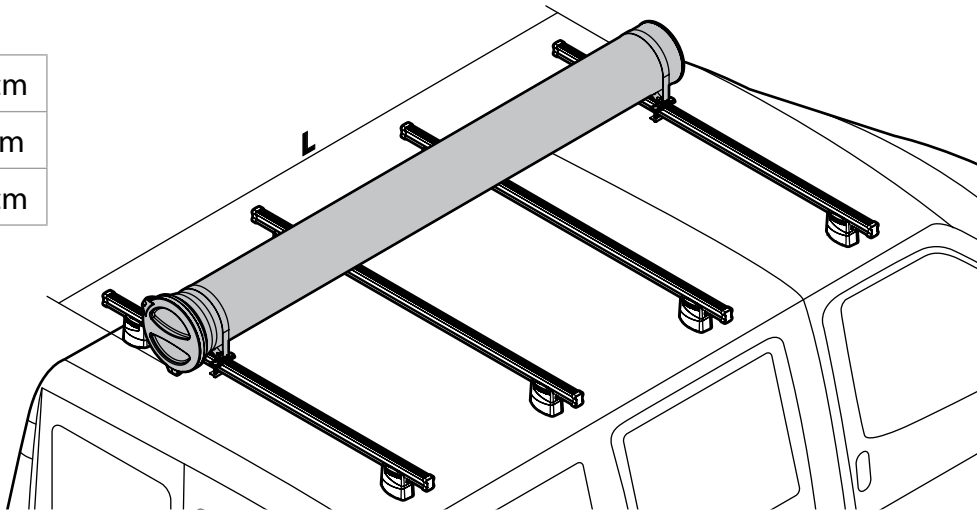


LADDER HOLDER STRAPS

N11065 U-5

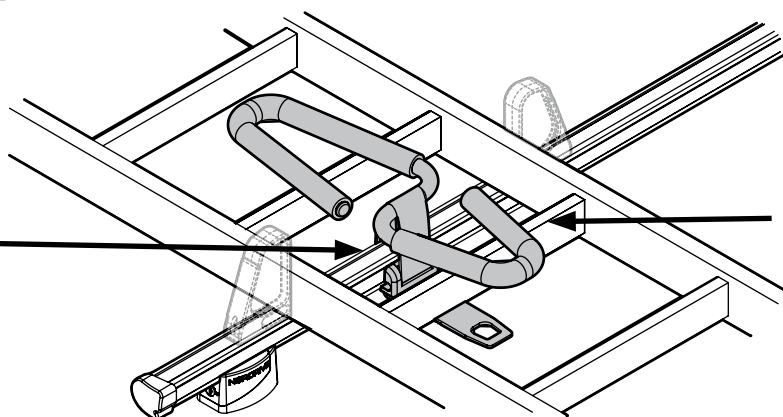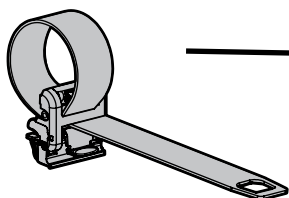


LADDER STEP ADAPTER

N11067 U-6

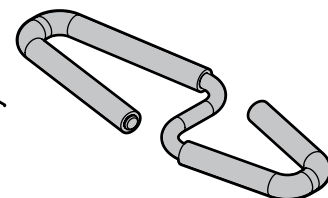

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

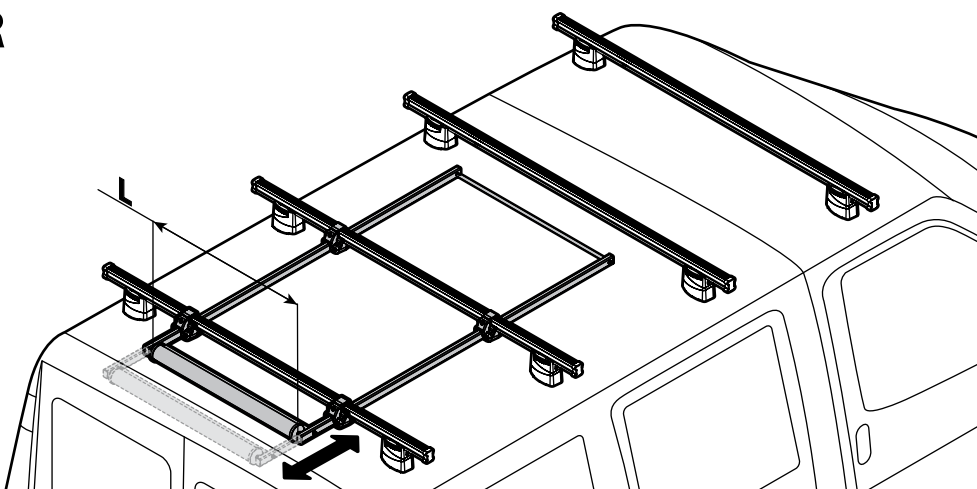

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it