

Art. **N30033**

CITROËN JUMPER

04/06→04/14

05/14→

FIAT DUCATO

07/06→04/14

05/14→

PEUGEOT BOXER

04/06→04/14

05/14→




H1

(L1, L2, L3)



H2



(L2, L3, L4)



H3


(L4)

KIT x6

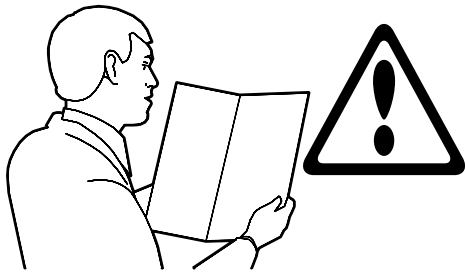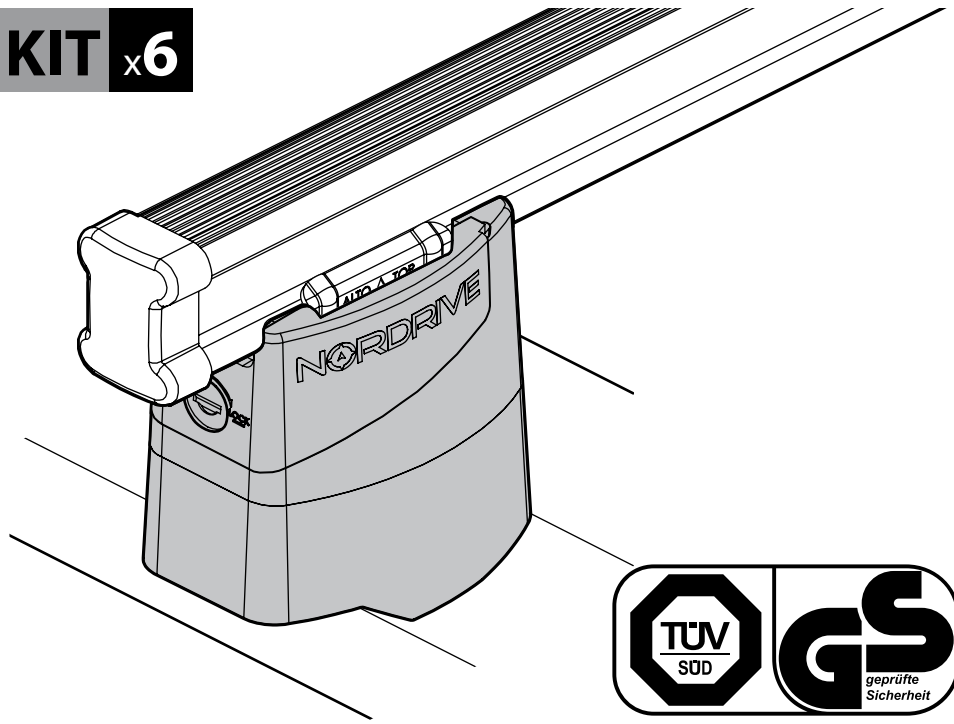

- ① ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

NORDDRIVE KARGO SERIES

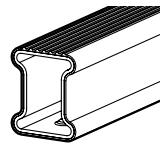


Kargo
ACCIAIO
Steel

- ① BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

180cm

Art. **N10015** x3

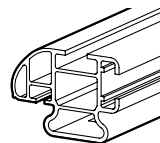


Kargo-Plus
ALLUMINIO
Aluminium

- ① BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS


180cm

Art. **N10045** x3

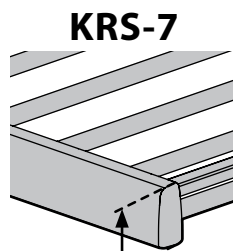

KRS-7

7cm

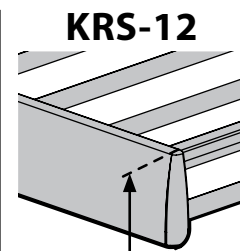

KRS-12


12cm

- ① CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

- ① ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓘ MONTERINGSANVISNING
- Ⓝ ASENNUSOHJE
- Ⓢ PAIGALDUSJUHEND
- Ⓛ AT STIPRINĀŠANAS INSTRUKCIJA
- Ⓛ T PRITVIRTINIMO INSTRUKCIJOS
- Ⓟ INSTRUKCJA MONTAŻU
- Ⓡ Инструкции по установке
- Ⓒ NÁVOD NA MONTÁŽ
- Ⓢ NÁVOD NA MONTÁŽ
- Ⓛ O NAVODILA ZA PRITRJEVANJE
- Ⓗ UPUTA ZA SASTAVLJANJE
- Ⓗ A FELSZERELÉS MÓDJA
- Ⓖ Οδηγίες συναρμολόγησης
- Ⓗ MONTAJ TALIMATLARL
- Ⓖ ИHCTPYKЦИИ 3A MOHTAЖ
- Ⓖ UPUTSTVA ZA MONTAŽU

NORDDRIVE®








TRANSPORT SOLUTIONS

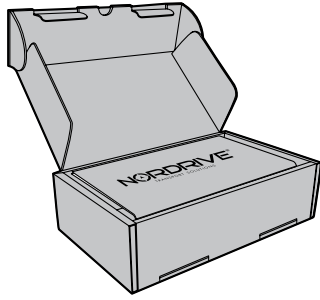


NORDRIVE®

TRANSPORT SOLUTIONS

Art. **N30033**

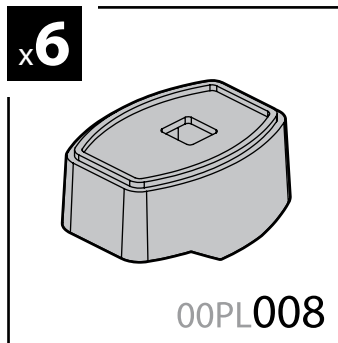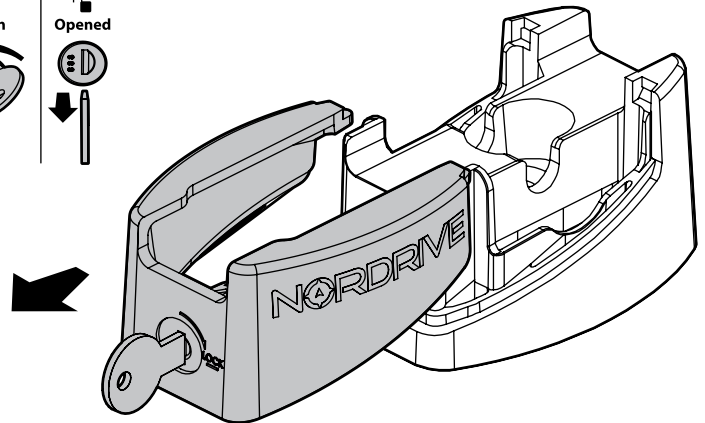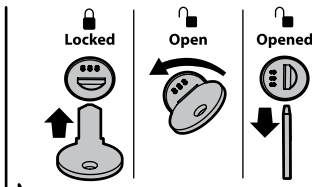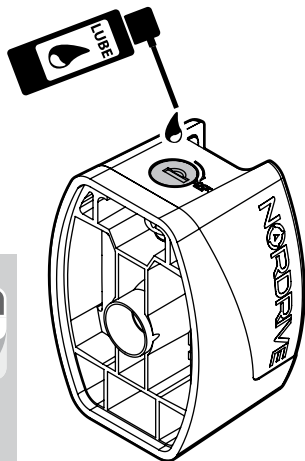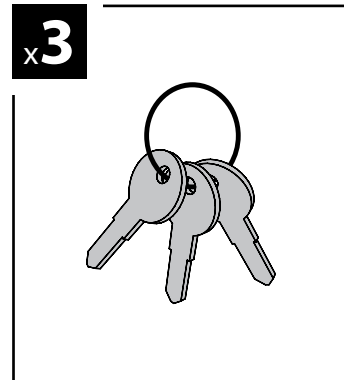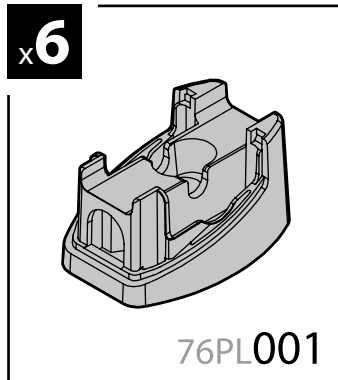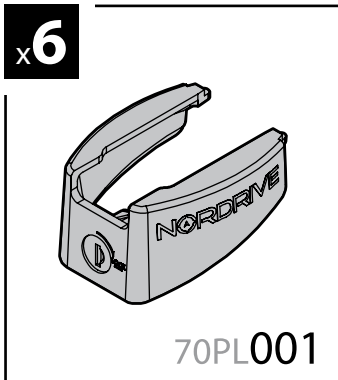


x 12

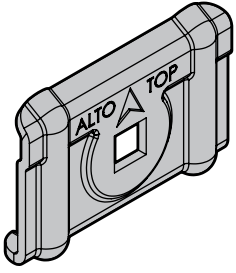


40FE001

x 6

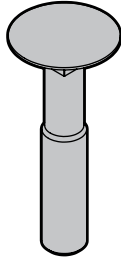


60BQ8045

x 6




62BB0800

x 6

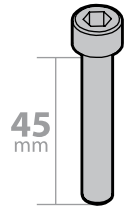

M6x45
60CE6045

x 6

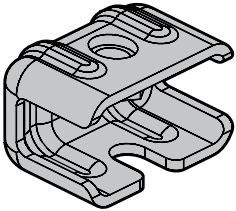


40FE003

x 6




61ED0611

x 6




ø6 - ø15
82FE0001

x 6

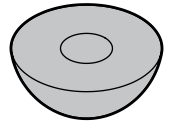


60RO004

x 1






72FE0001

x 1





72FE0002

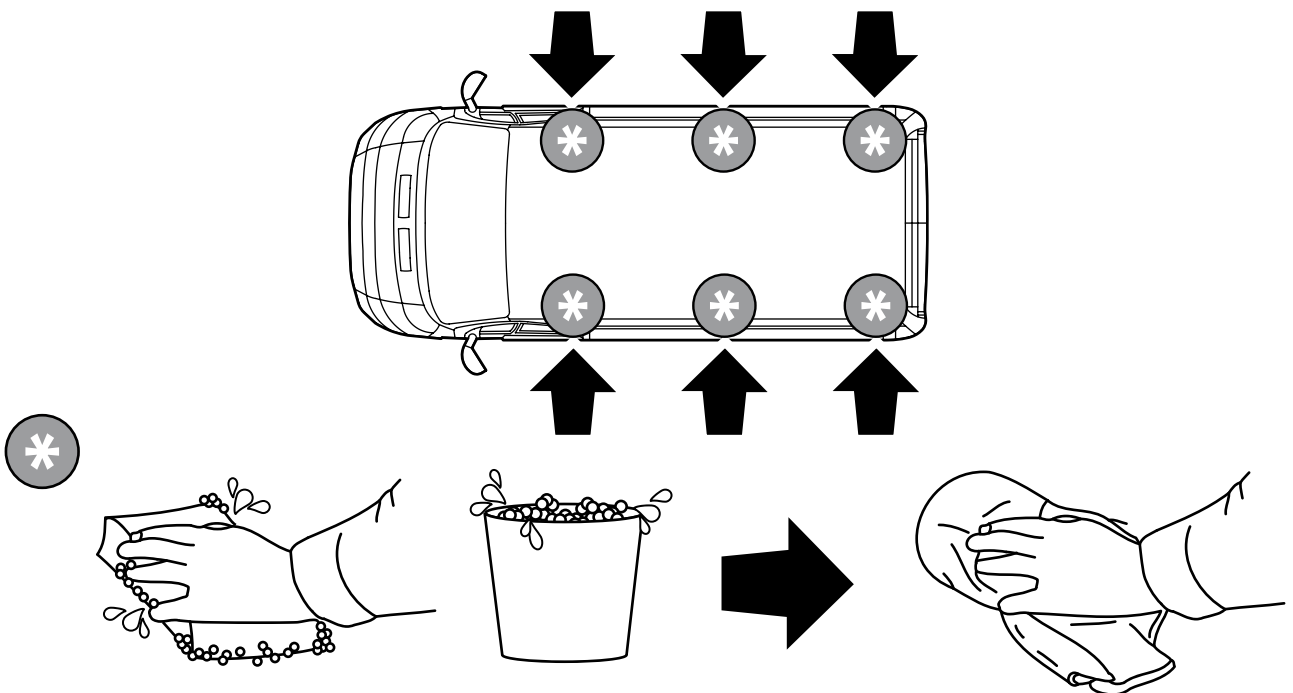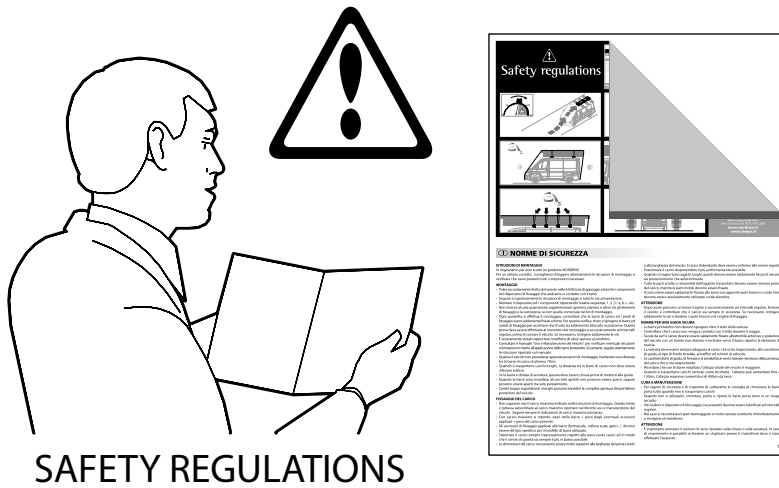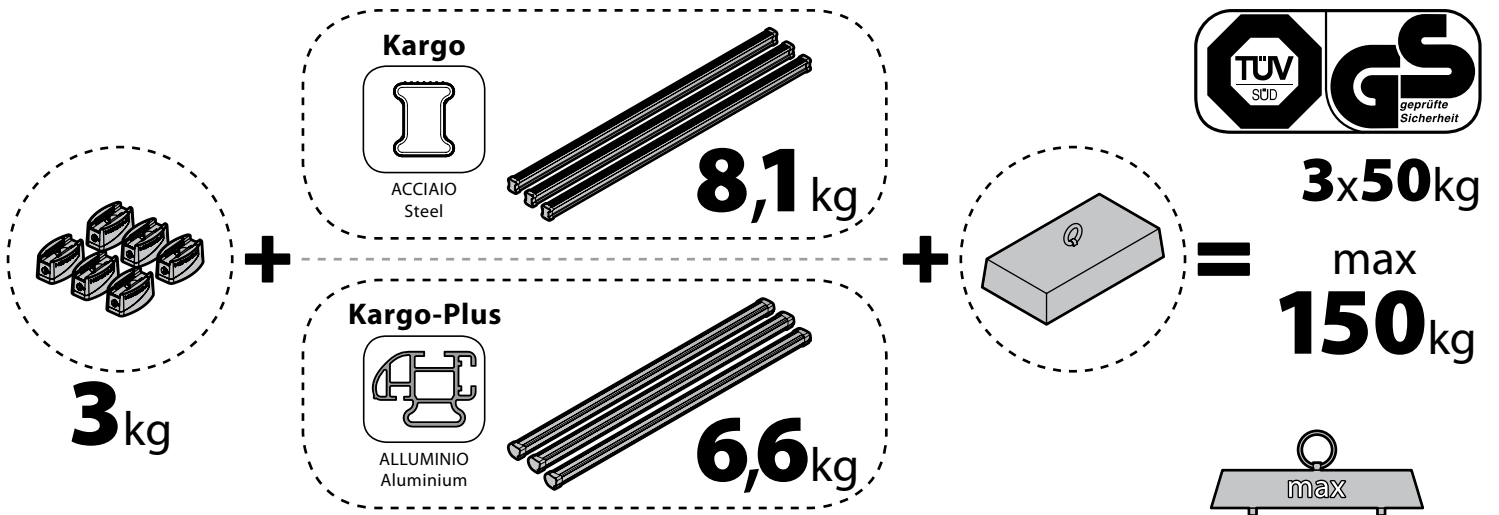






(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRINĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ




(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγίες συναρμολόγησης
 (TR) MONTAJ TALIMATLARL
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

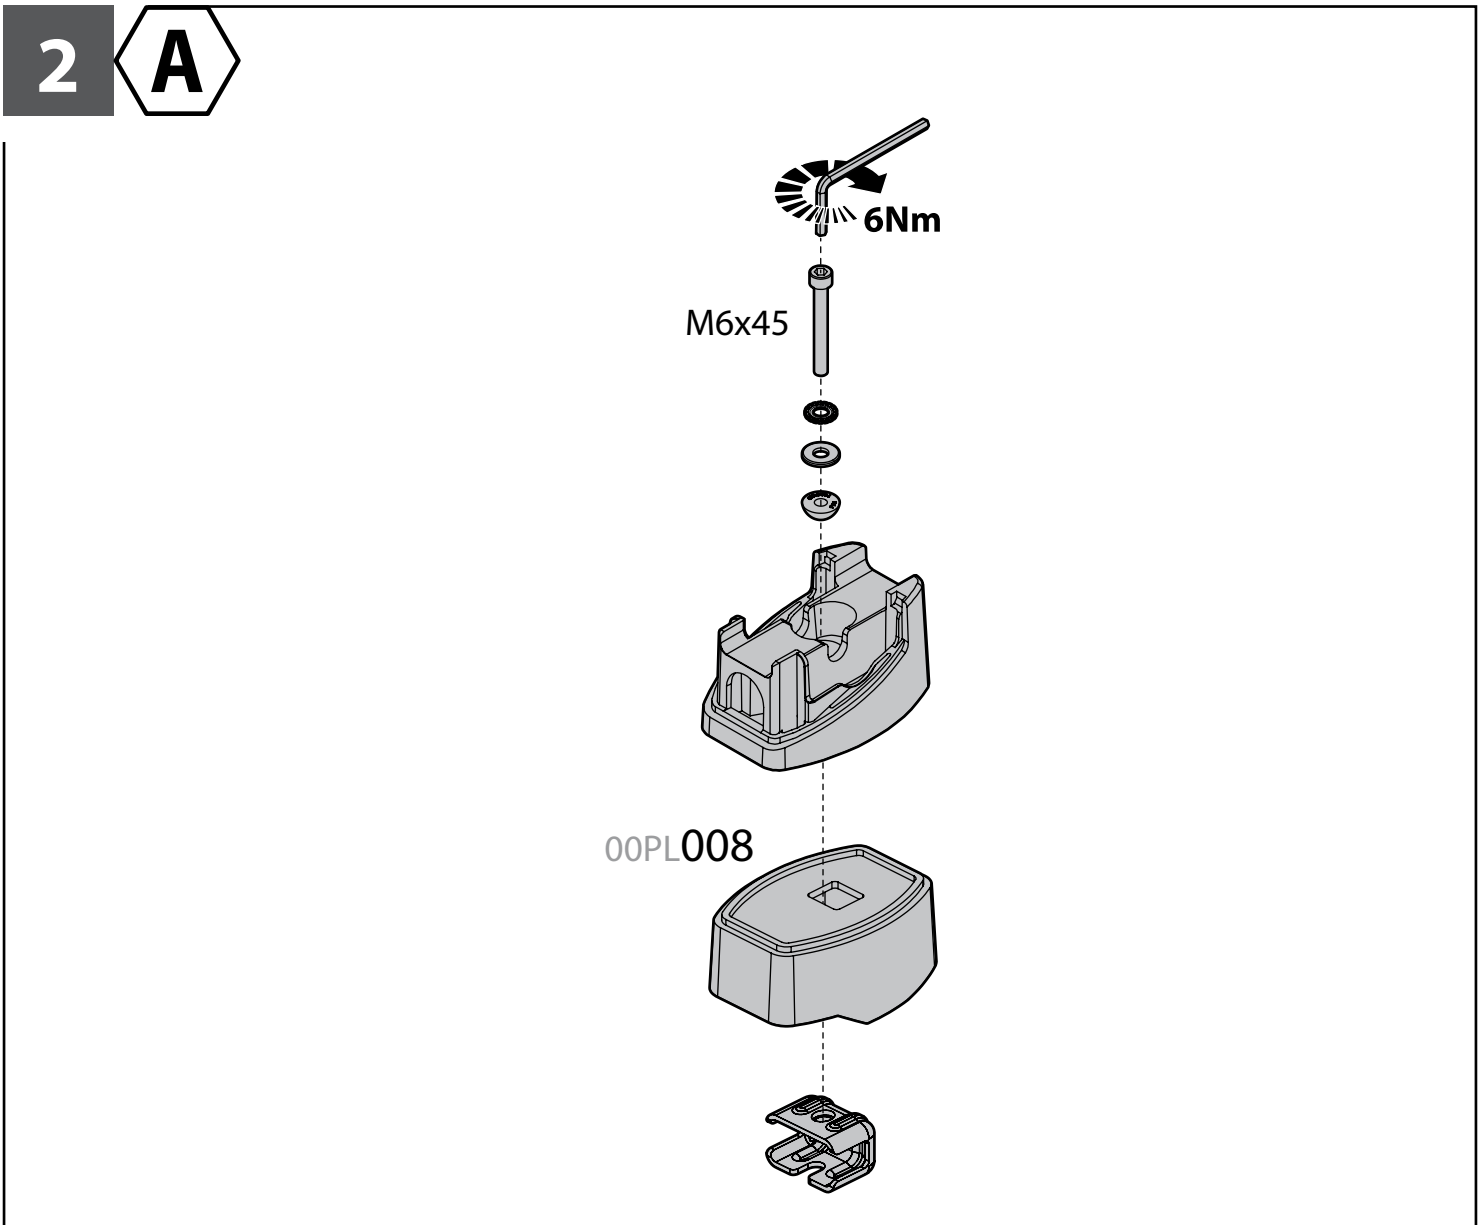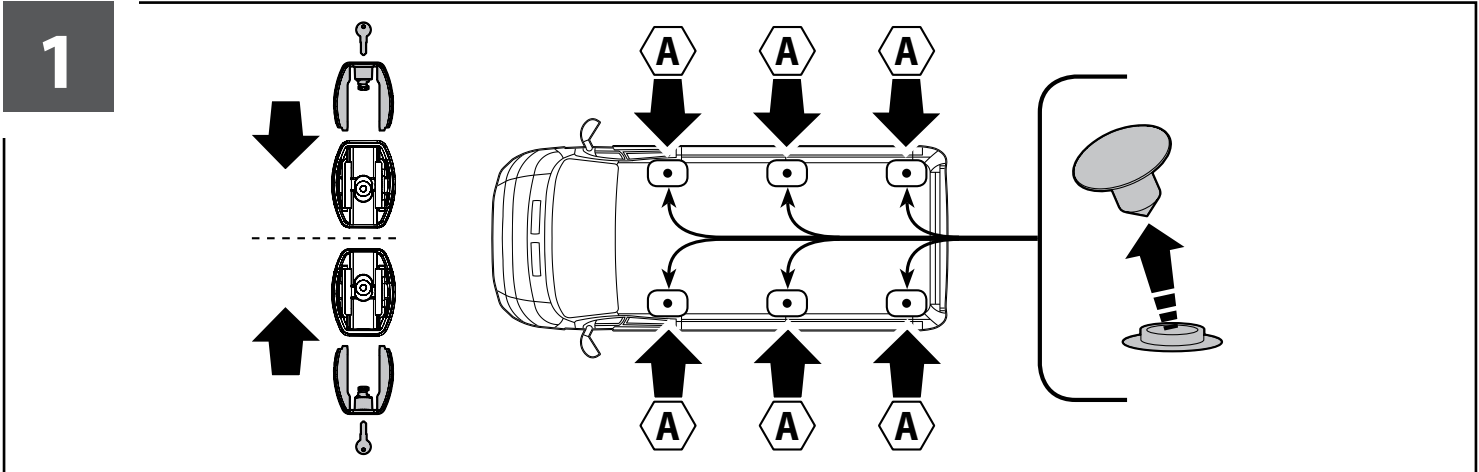

3

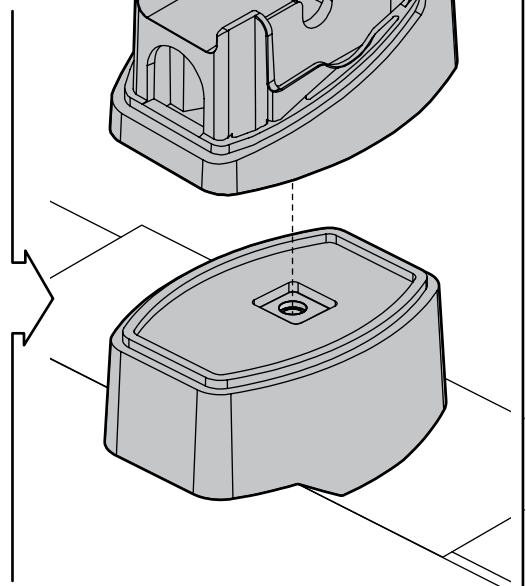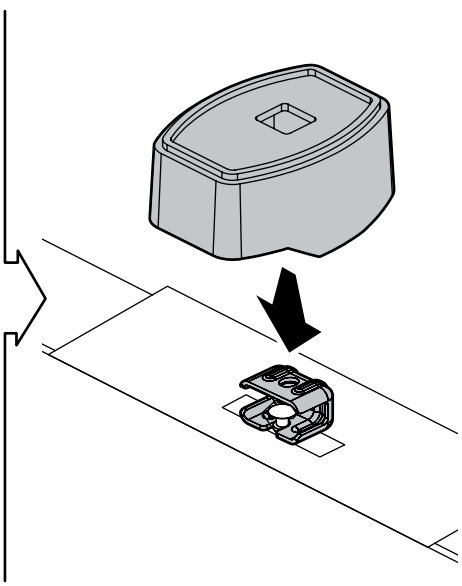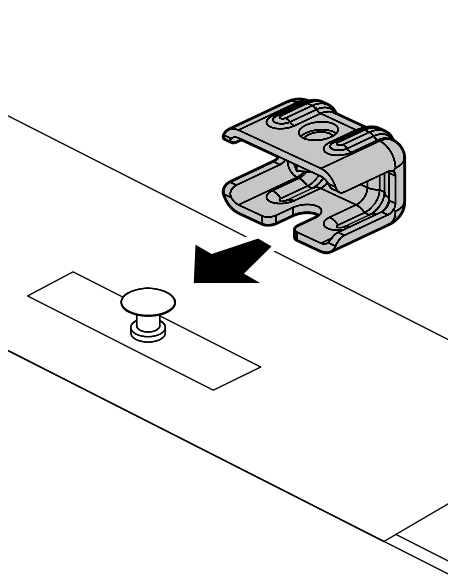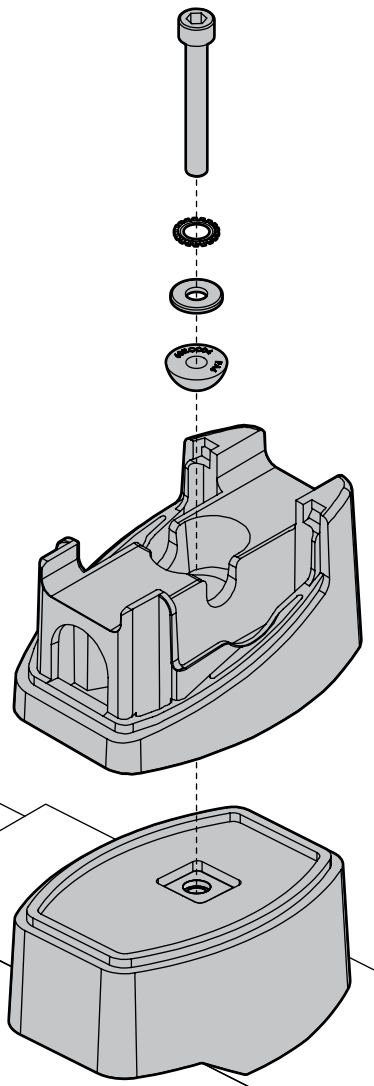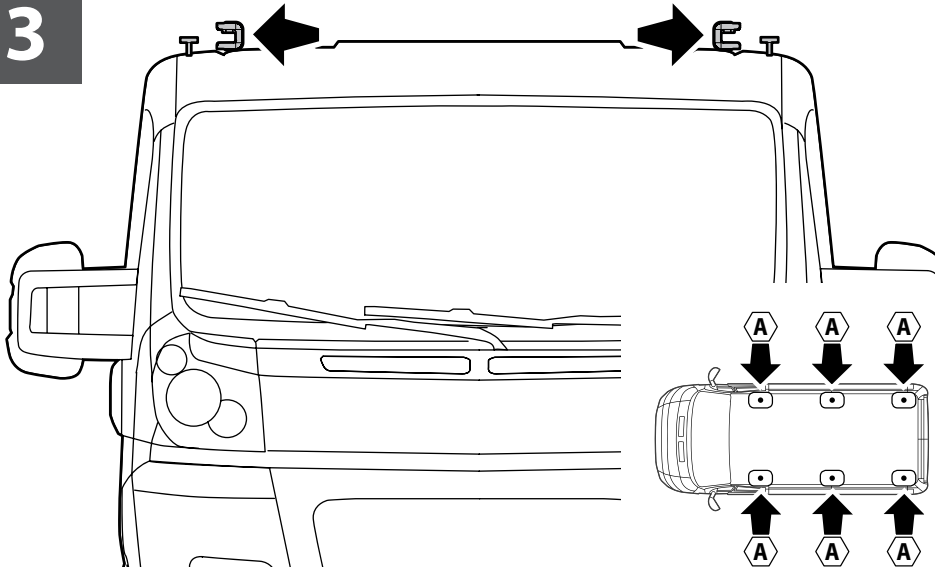

4

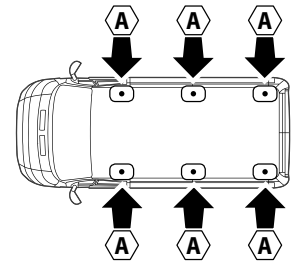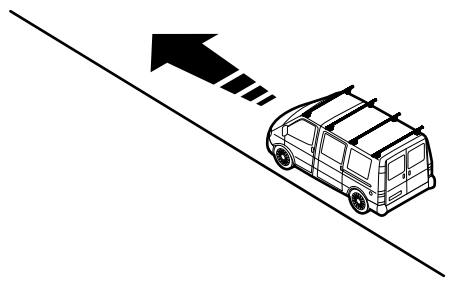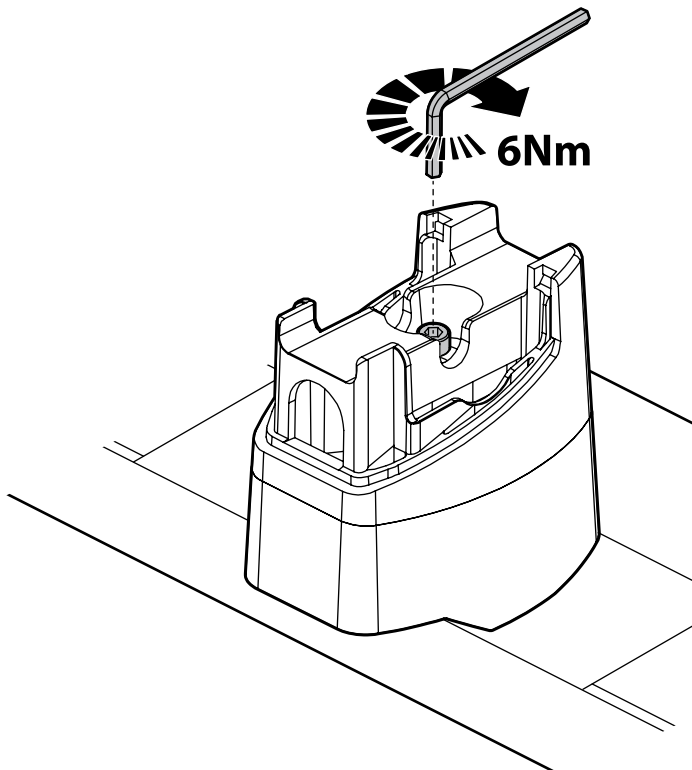




ATTENZIONE WARNING




A Kargo

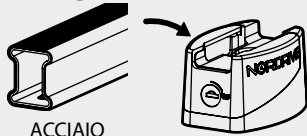

ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

B Kargo-Plus
















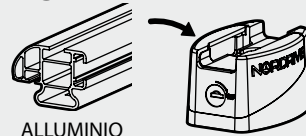


ALLUMINIO
Aluminium

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE


A

B

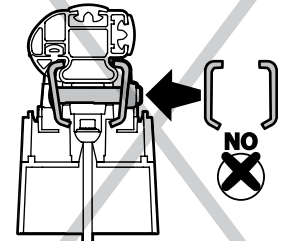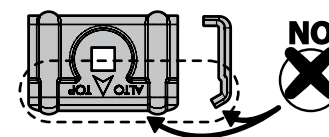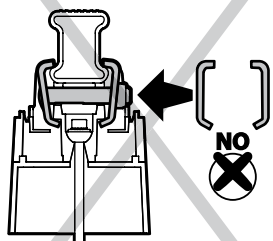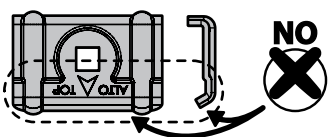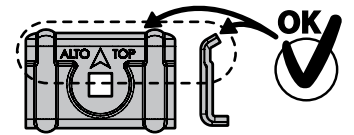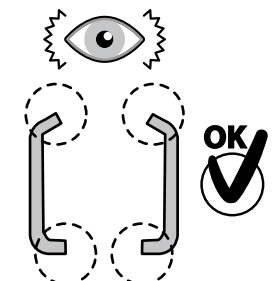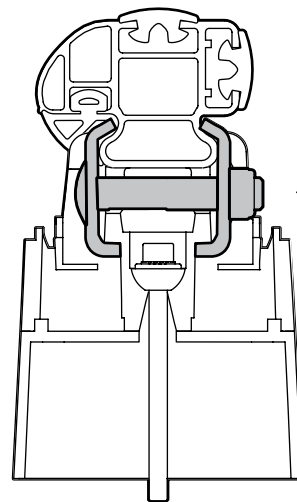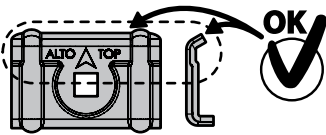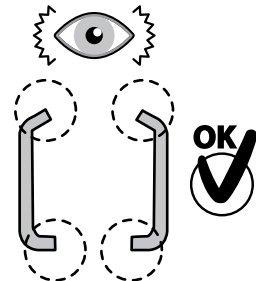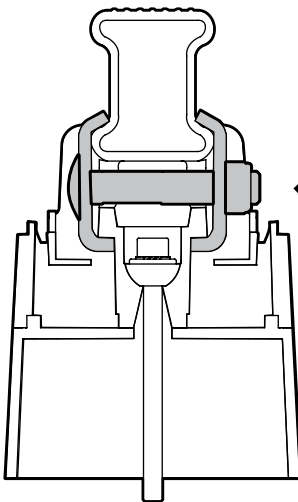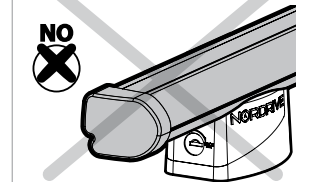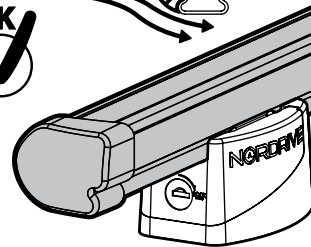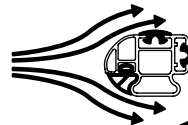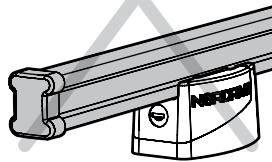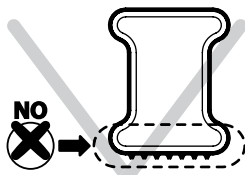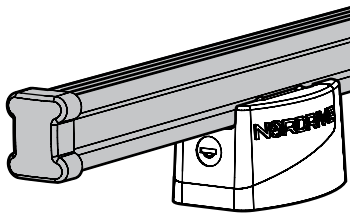

5


A

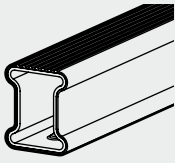


Kargo



ACCIAIO
Steel

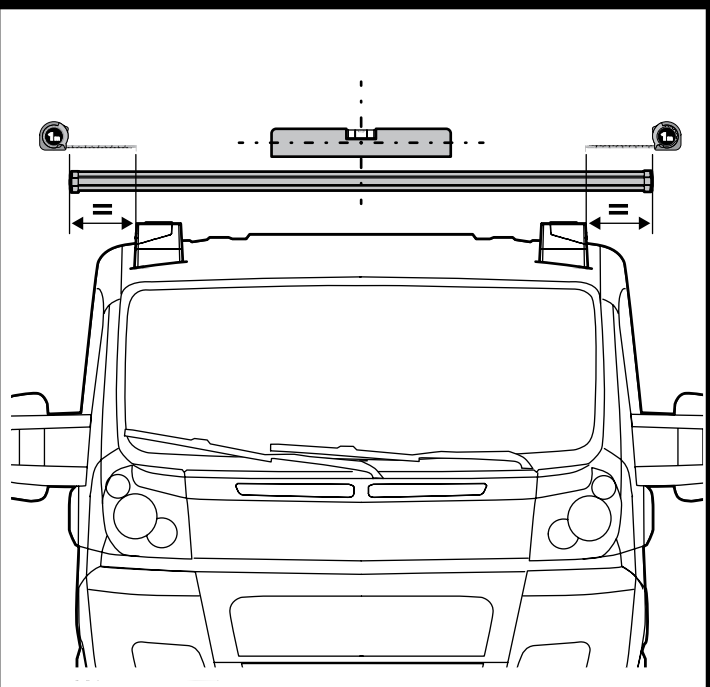


B

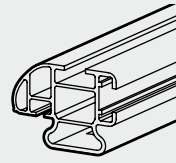




Kargo-Plus




ALLUMINIO
Aluminium

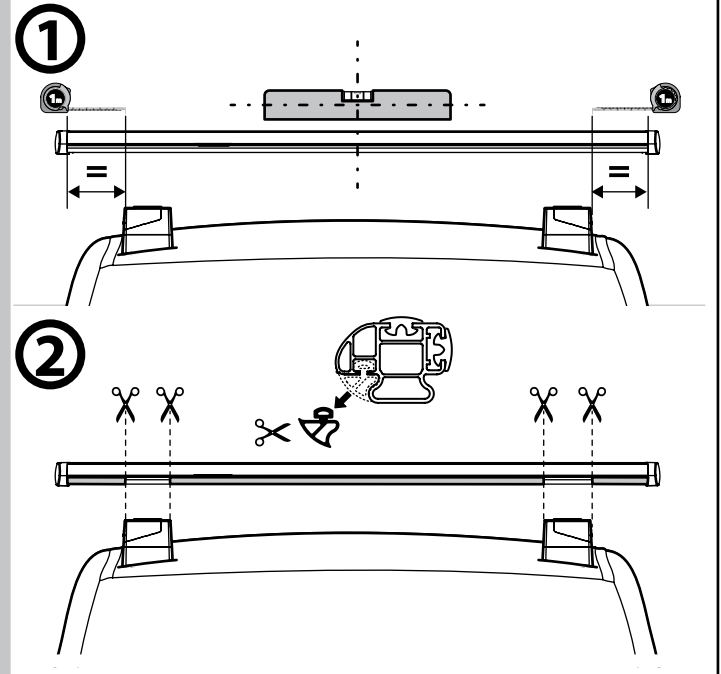


6

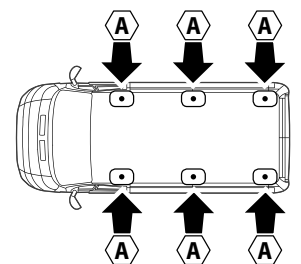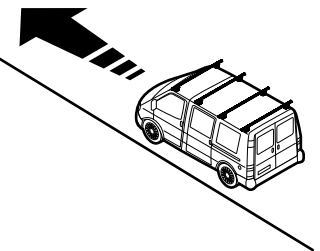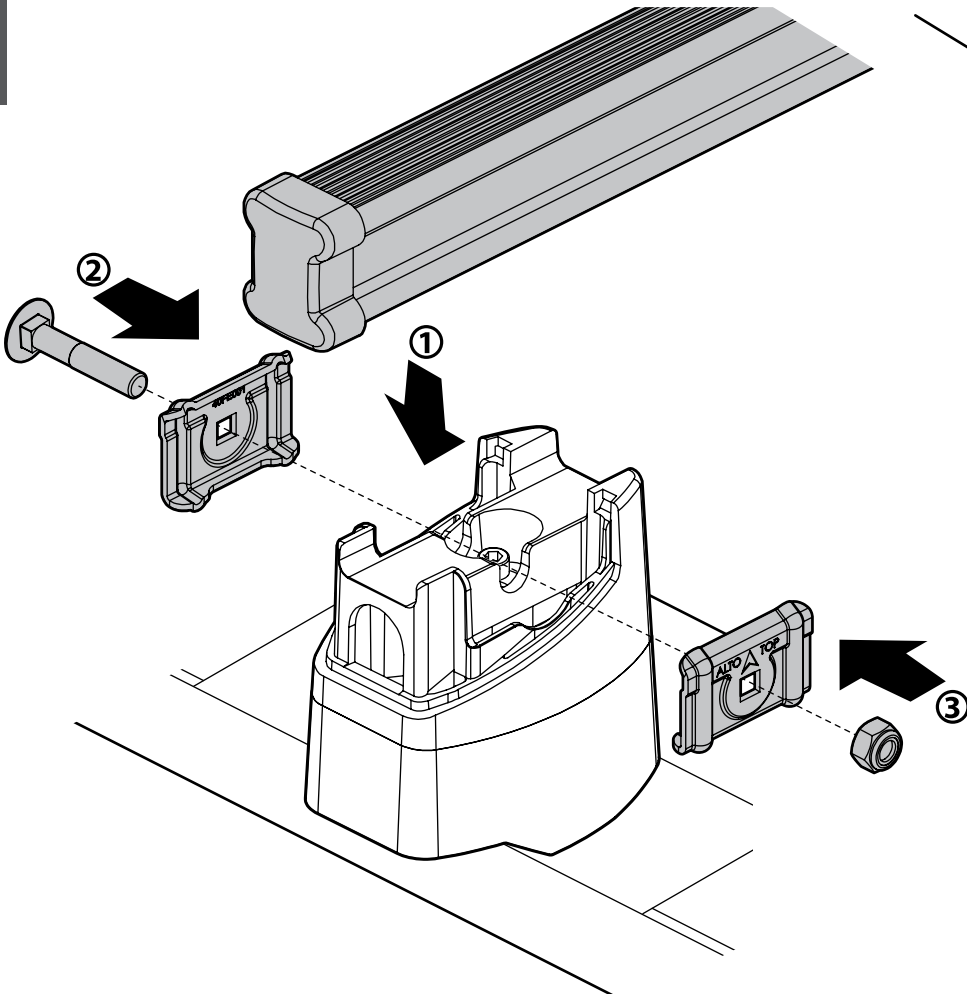


7

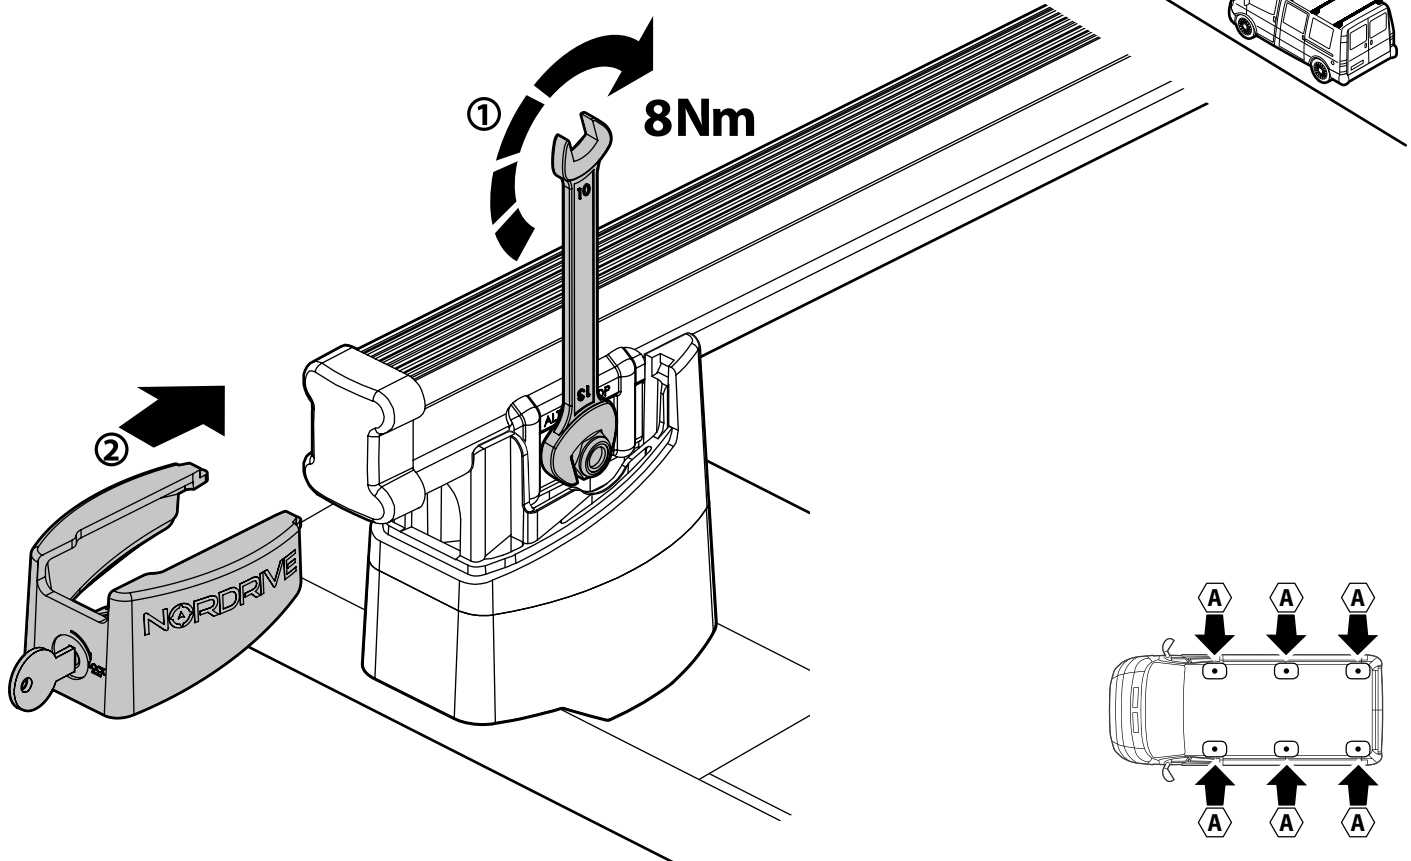


8

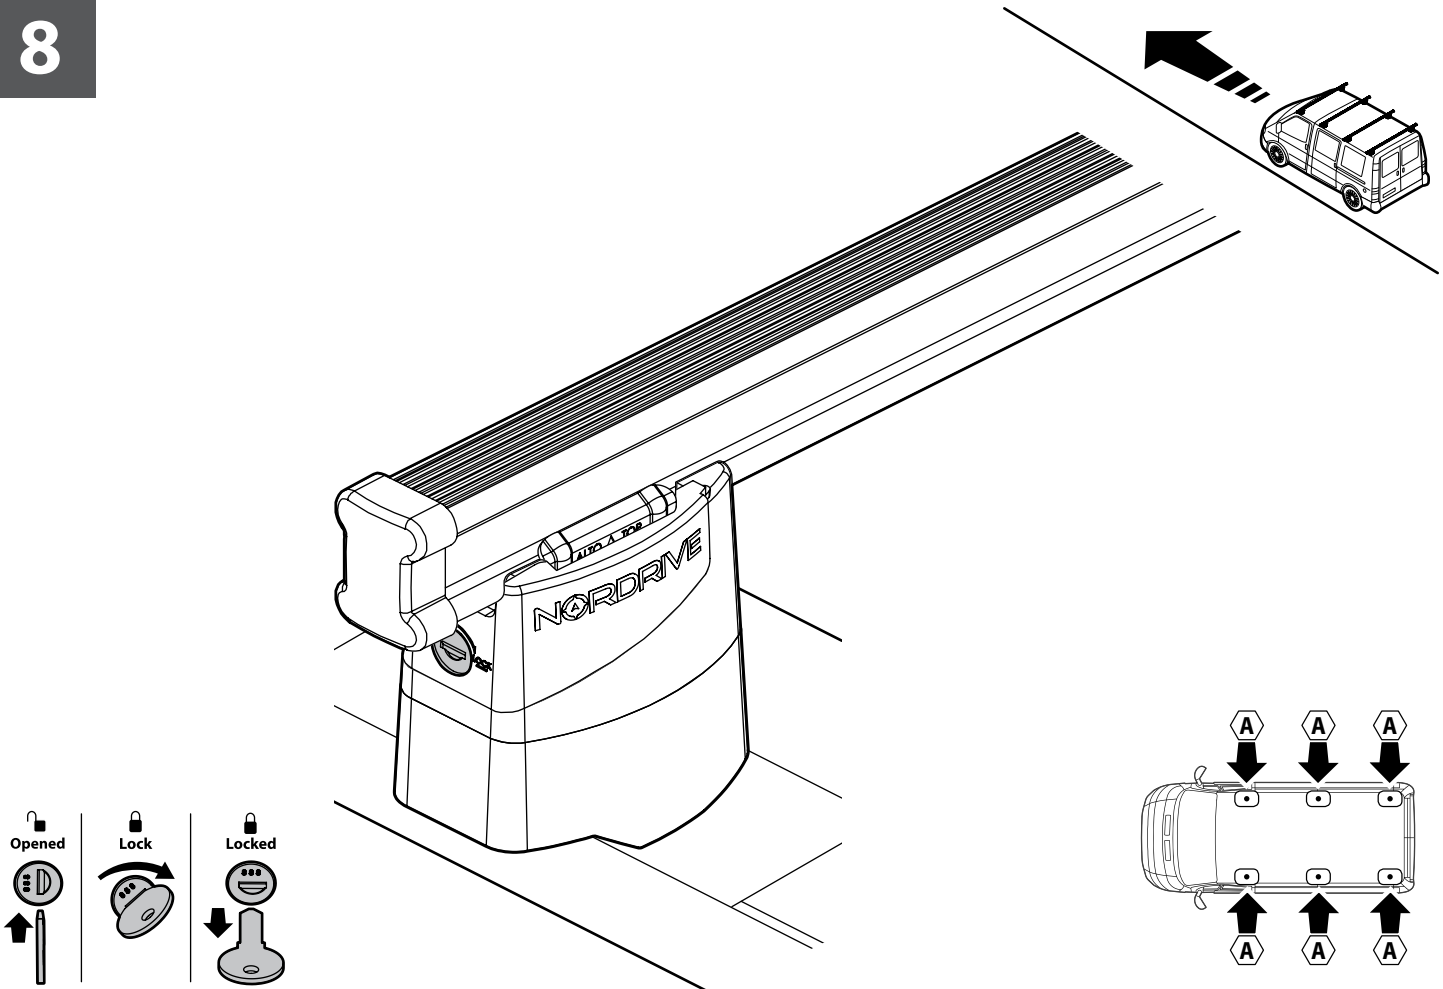

Kargo series

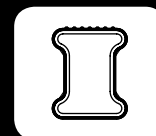

Acciaio / Steel

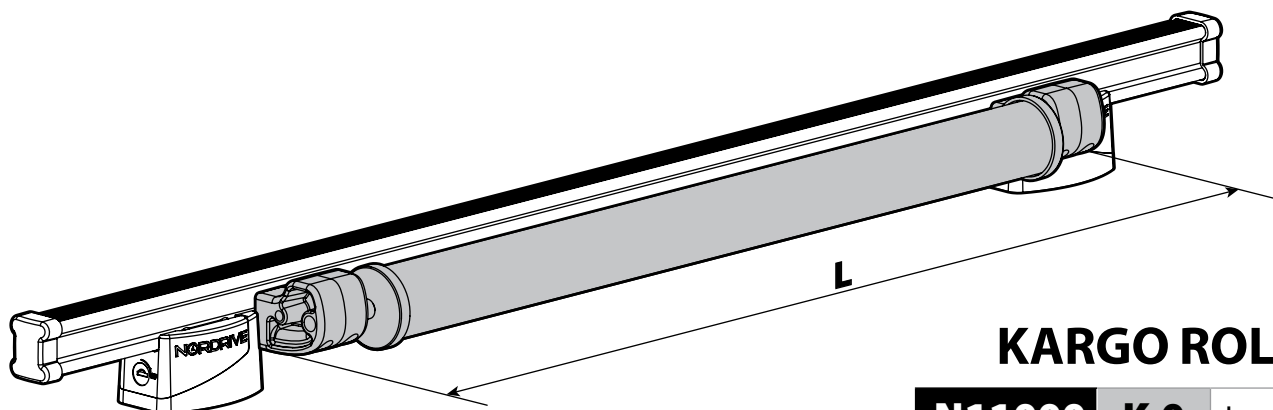

KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm




LOAD STOPS

N11001 K-1



LOAD STOPS

N11002 K-2

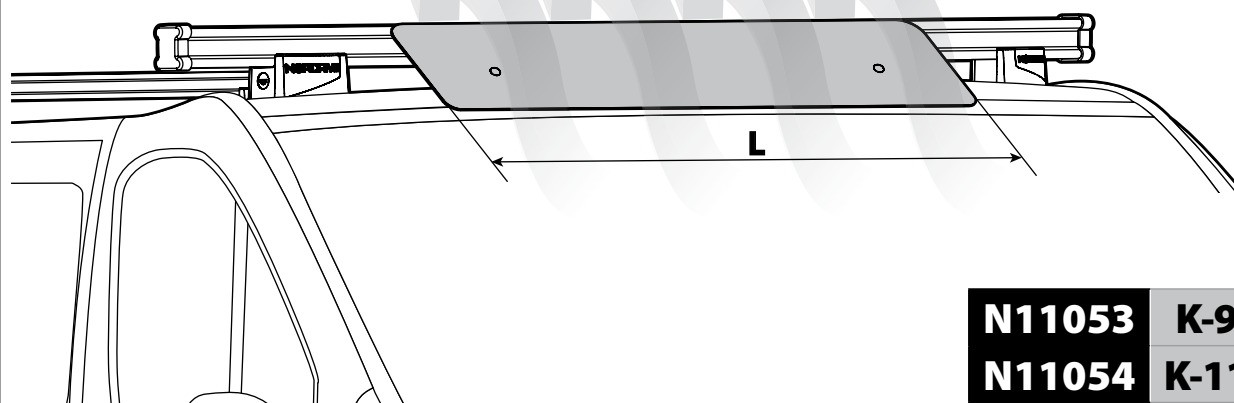


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series

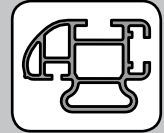


Alluminio / Aluminium

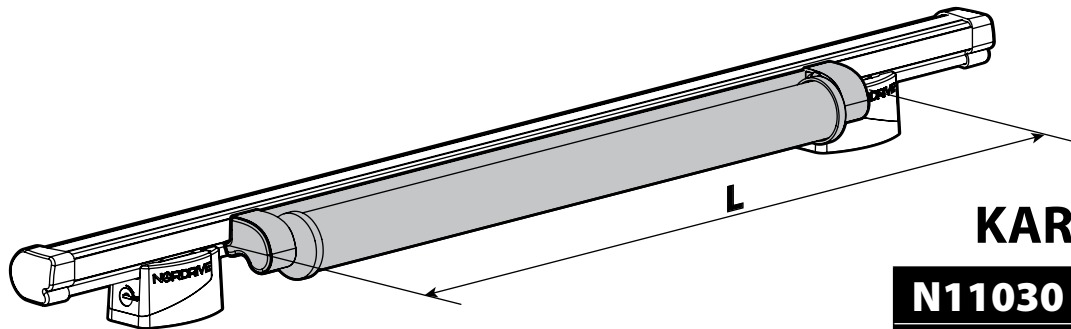


KARGO ROLLER

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

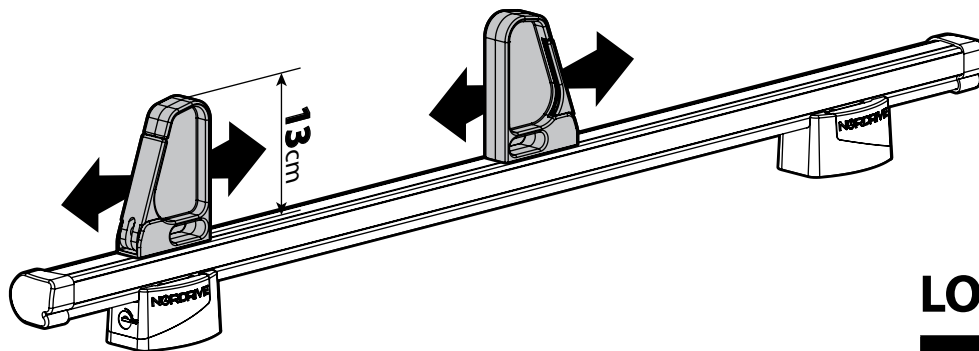


LOAD STOPS

N11031 KP-1

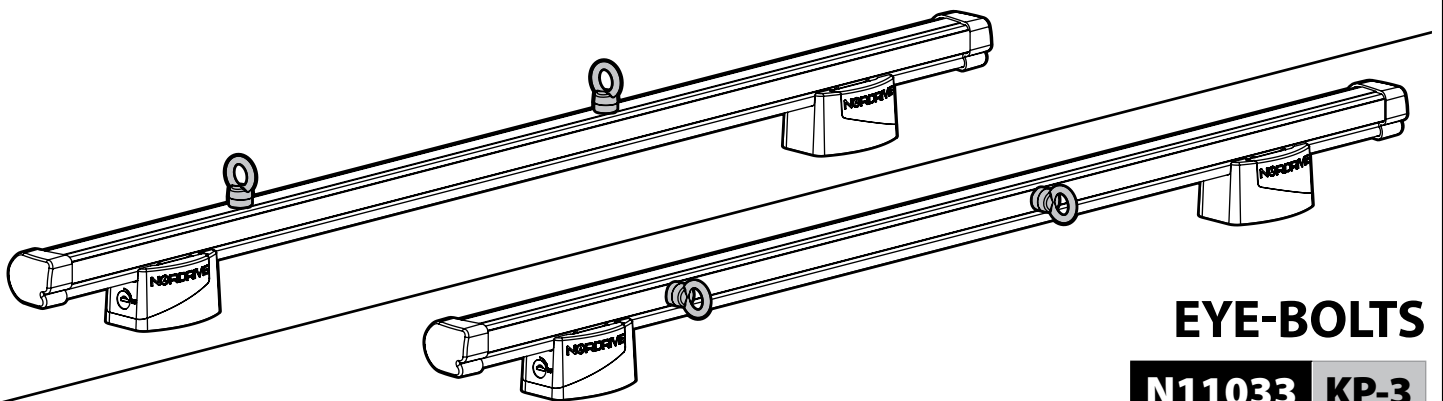

EYE-BOLTS

N11033 KP-3

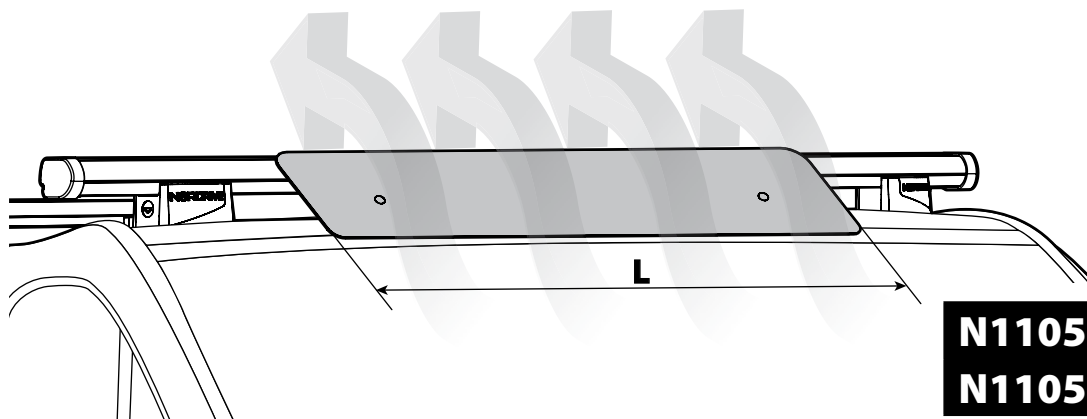

SPOILER

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel

Kargo-Plus
series

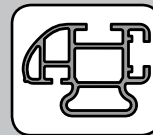


Alluminio / Aluminium

KARGO-TUBE

N11050 T200 L = 205 cm



N11051 T300 L = 305 cm

N11052 T400 L = 405 cm

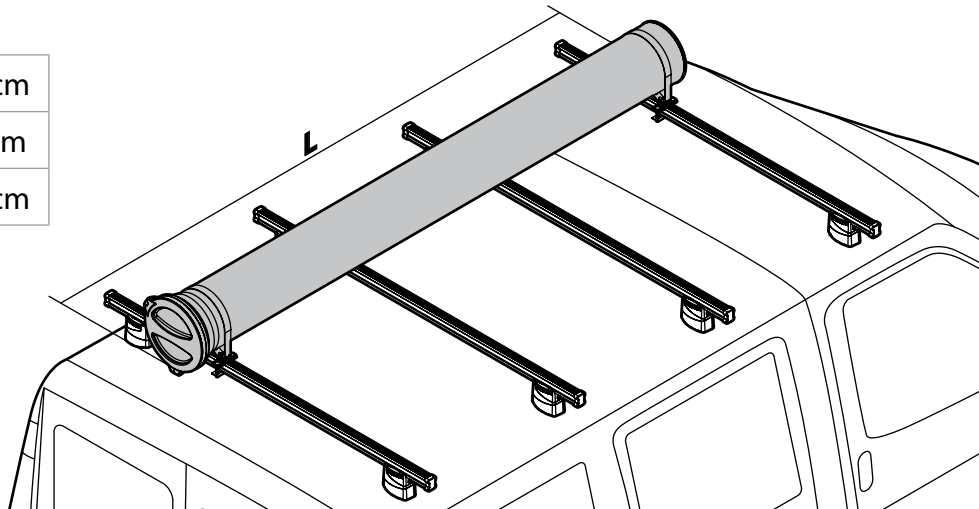


LADDER HOLDER STRAPS

N11065 U-5

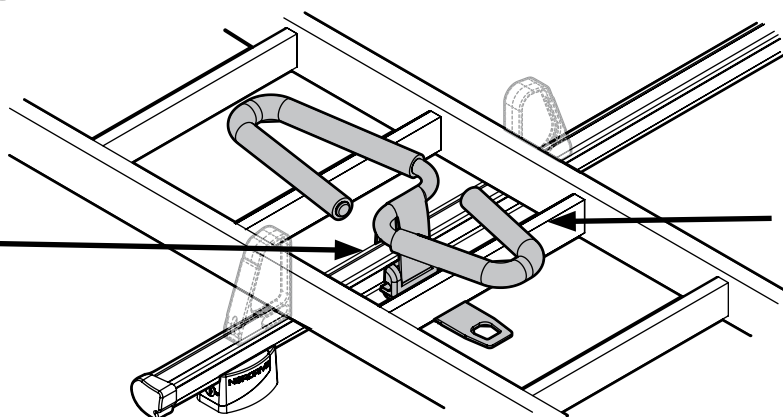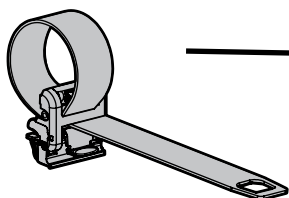

LADDER STEP ADAPTER


N11067 U-6

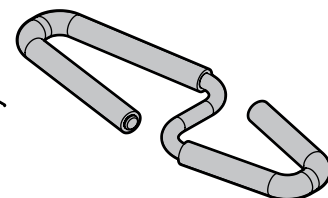

EXTENSION ROLLER

N11020 U-0 L = 64 cm

N11021 U-7 L = 96 cm

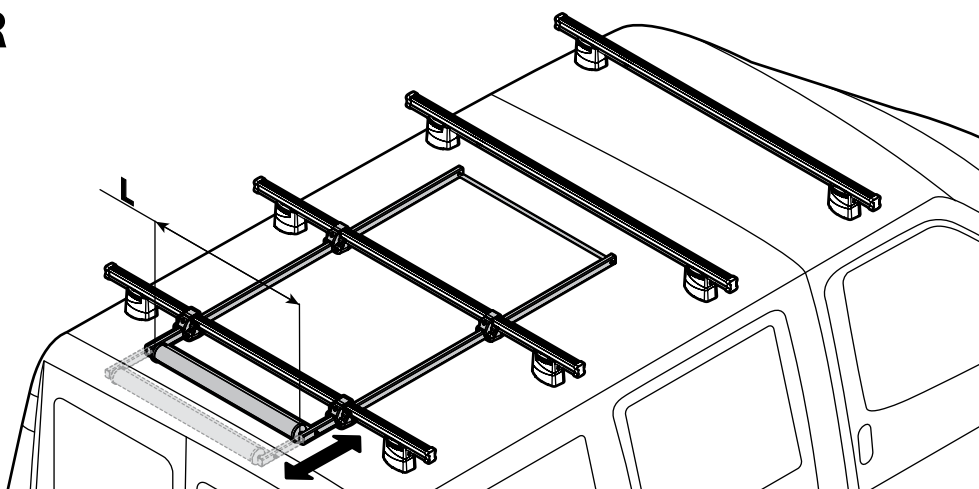

NORDRIVE[®]
TRANSPORT SOLUTIONS

NORDRIVE[®] is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it