

Art. **N30183**

**CITROËN NEMO**

12/08→03/14

**CITROËN NEMO VAN**

12/08→

**FIAT FIORINO**

09/08→

**FIAT QUBO**


09/08→

**PEUGEOT BIPPER**



05/08→



Senza Modanatura  
Without Roof Trim

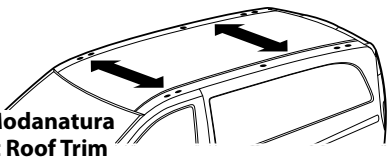


Con Modanatura  
With Roof Trim

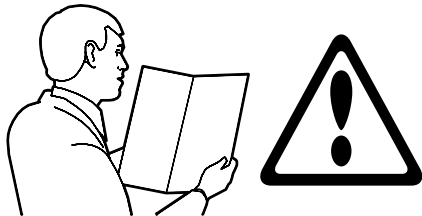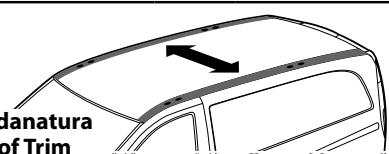

- Ⓢ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓜ MONTERINGSANVISNING
- Ⓕ ASENUSOHJE
- Ⓔ PAIGALDUSJUHEND
- Ⓕ STIPRIŃAŠANAS INSTRUKCIJA
- Ⓕ PRITVIRTINIMO INSTRUKCIJOS
- Ⓕ INSTRUKCJA MONTAŻU
- Ⓕ Инструкции по установке
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓕ NAVODILA ZA PRITRJEVANJE
- Ⓕ UPUTA ZA SASTAVLJANJE
- Ⓕ A FELSZERELÉS MÓDJA
- Ⓕ Οδηγίες συναρμολόγησης
- Ⓕ MONTAJ TALIMATLARL
- Ⓕ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓕ UPUTSTVA ZA MONTAŽU

**KIT x6**

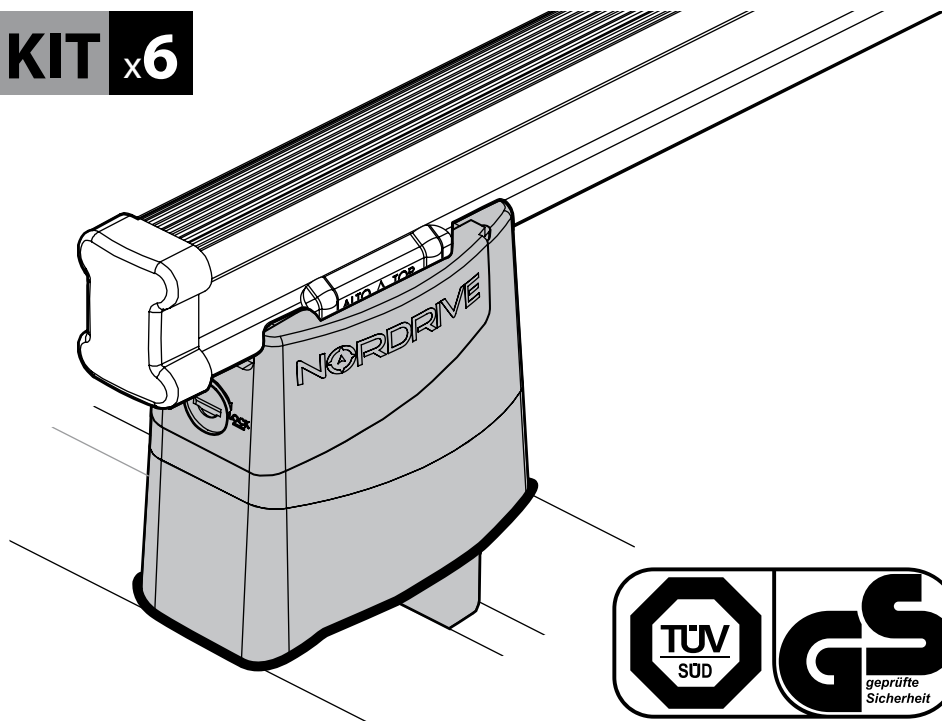


- Ⓢ ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE  
KARGO SERIES**





**A**

**Kargo**

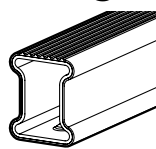

ACCIAIO  
Steel

- Ⓢ BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

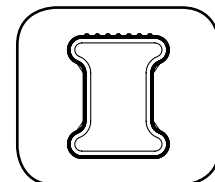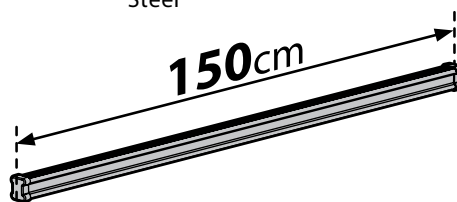


Art. **N10010** x3





**B**

**Kargo-Plus**

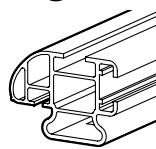

ALLUMINIO  
Aluminium


- Ⓢ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS

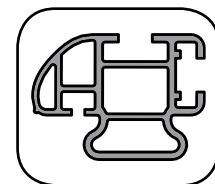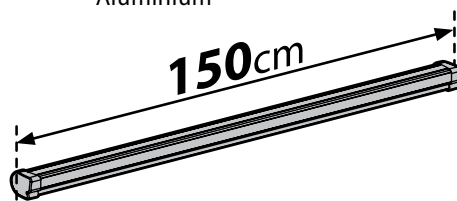

Art. **N10040** x3

**NORDRIVE®**











TRANSPORT SOLUTIONS











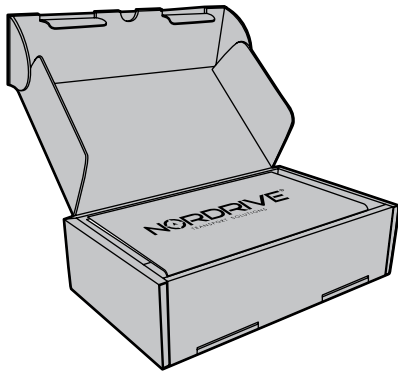


# NORDRIVE<sup>®</sup>

TRANSPORT SOLUTIONS

Art. **N30183**

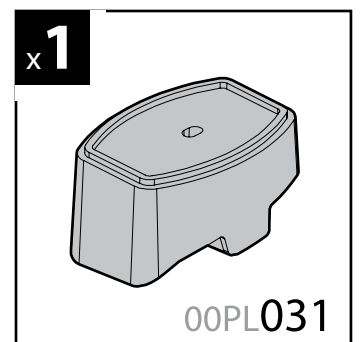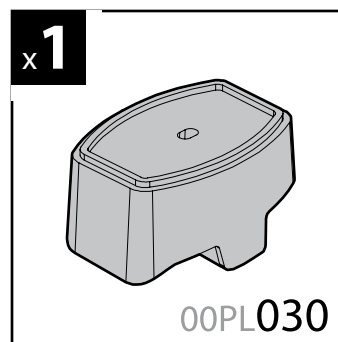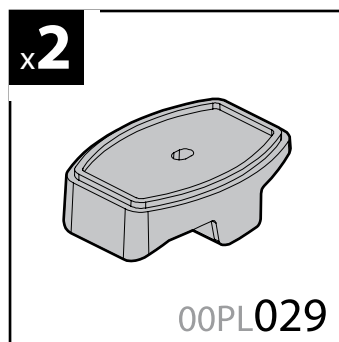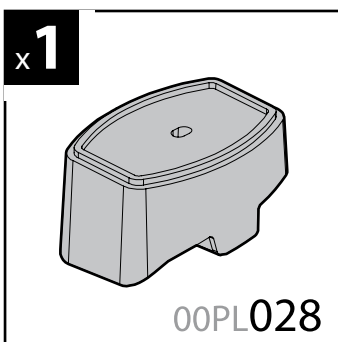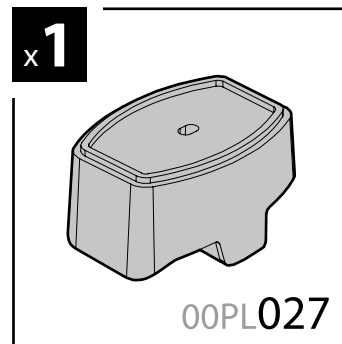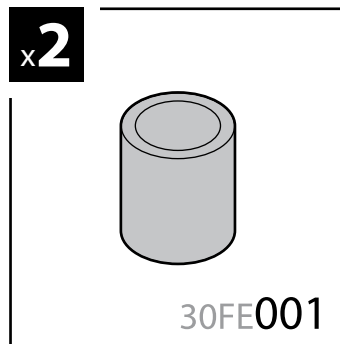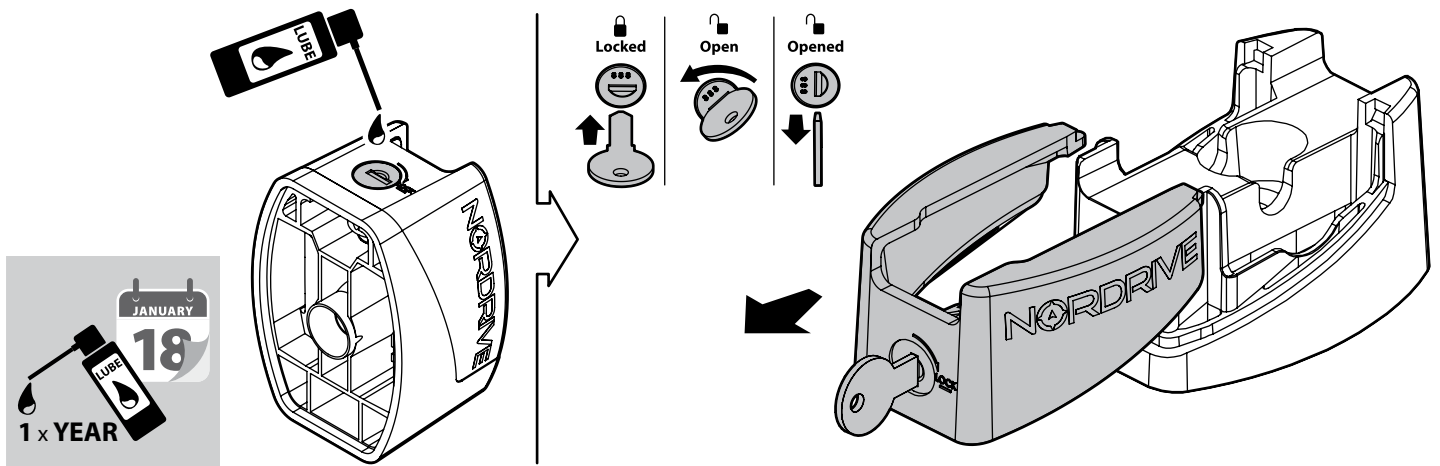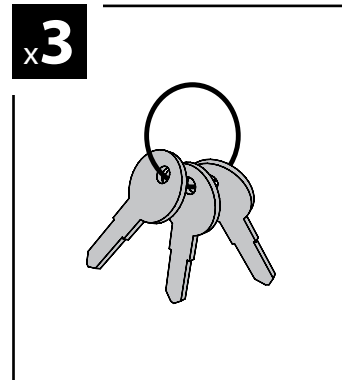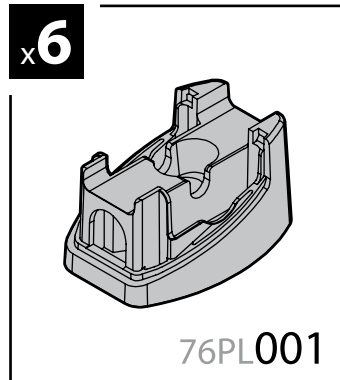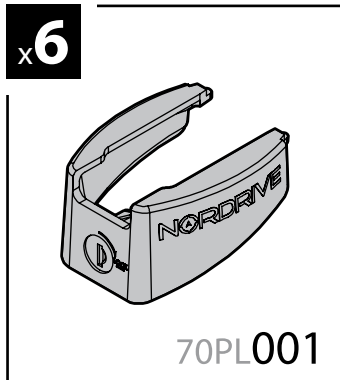

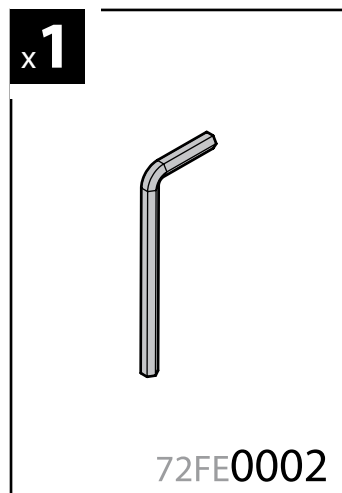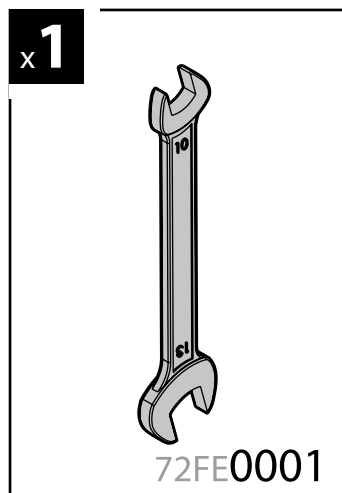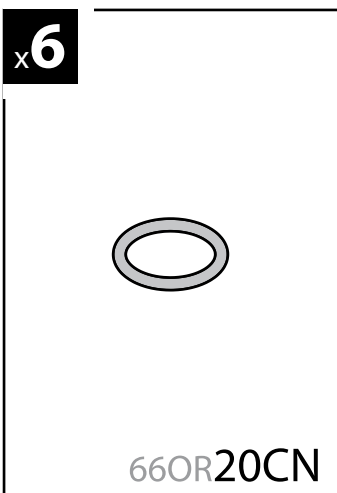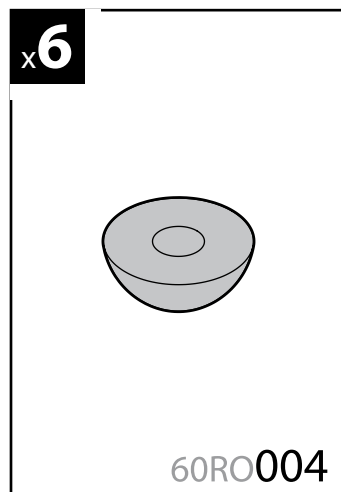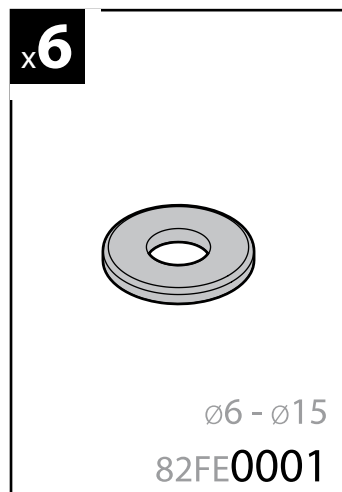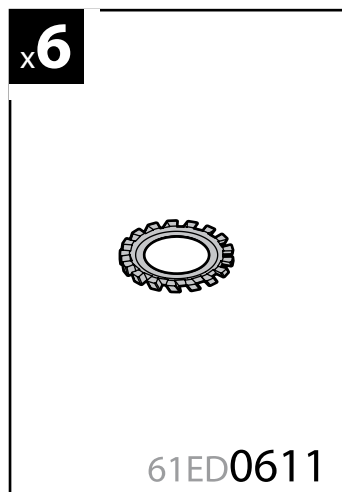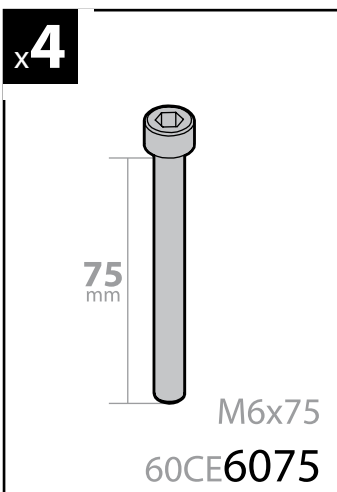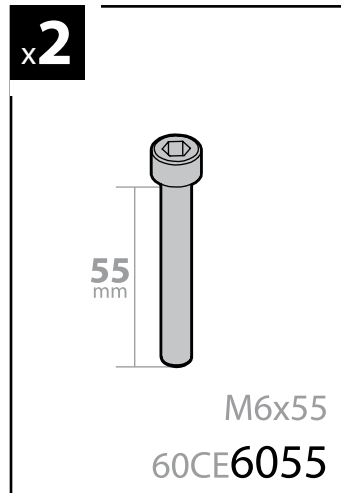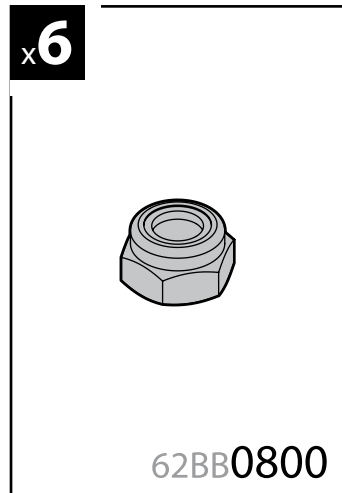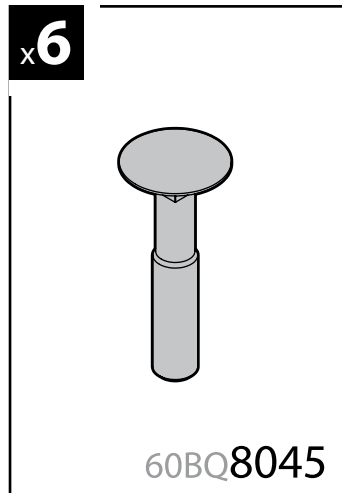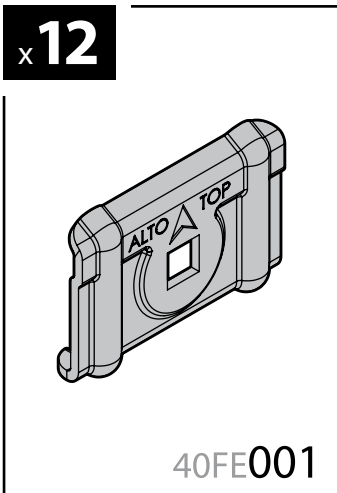



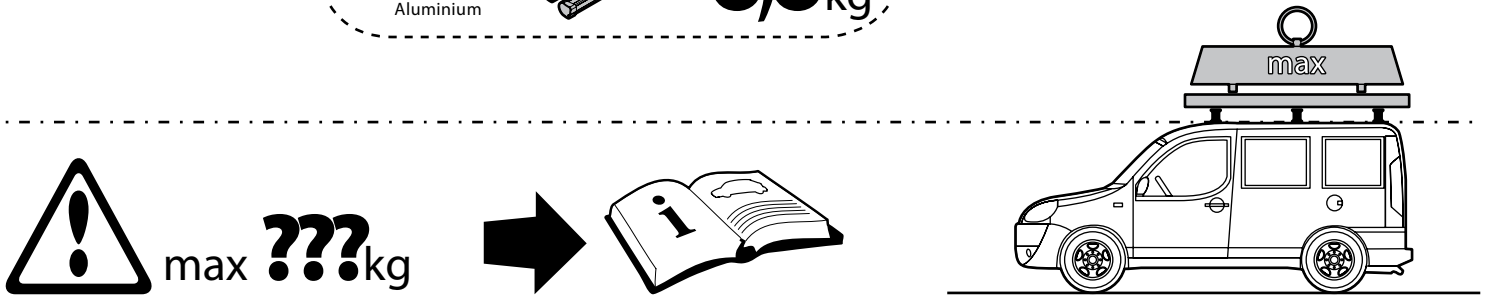


Illustration of a person reading a manual. A warning sign (exclamation mark in a triangle) is positioned above the person. To the right, there is a document titled **Safety regulations** with the heading **NORME DI SICUREZZA**. The document contains detailed text and diagrams related to safety regulations.

**SAFETY REGULATIONS**

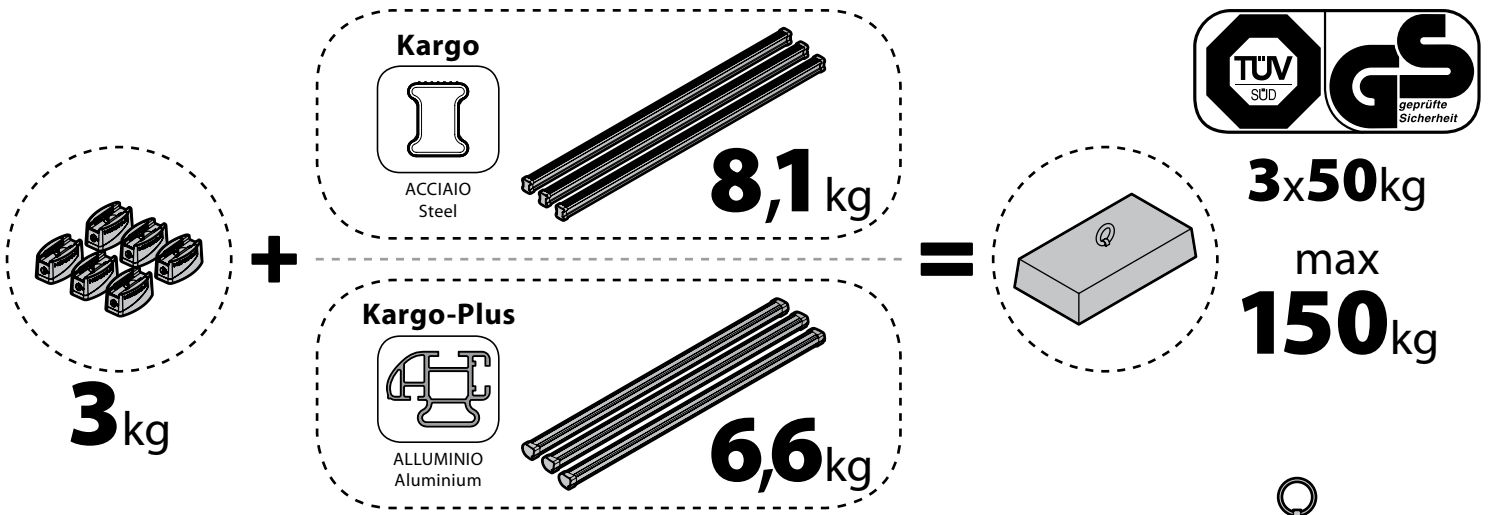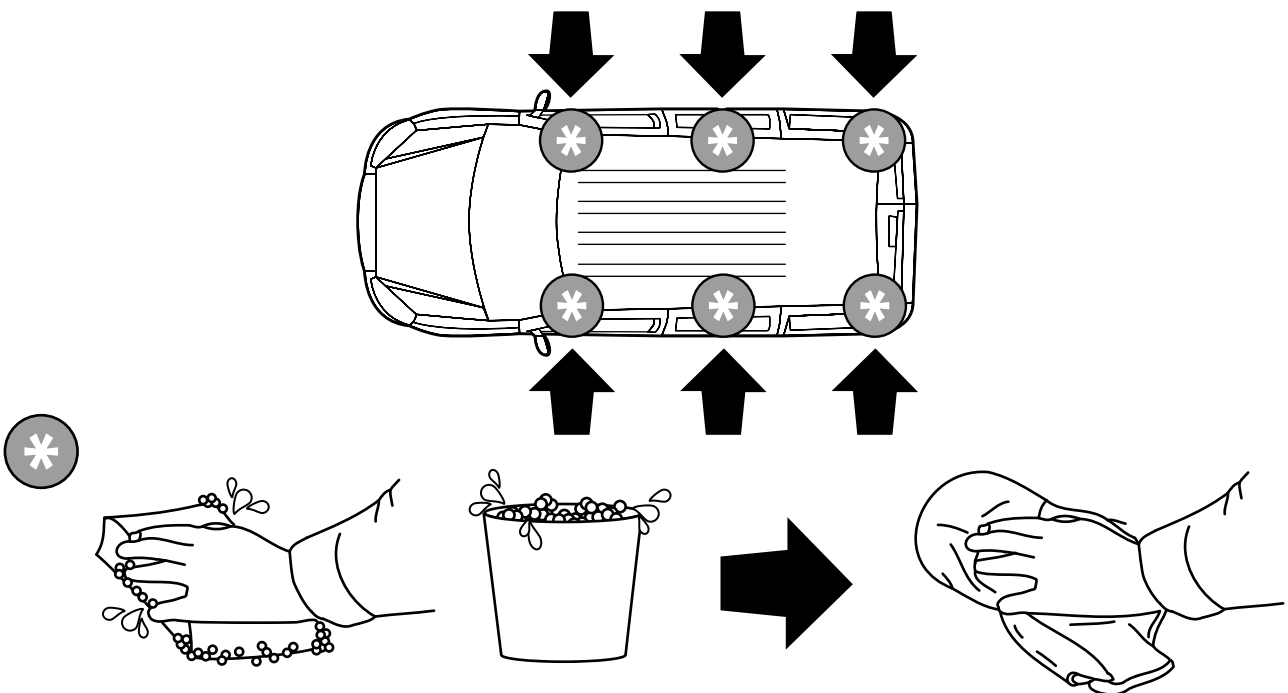


(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) INSTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγίες συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

1

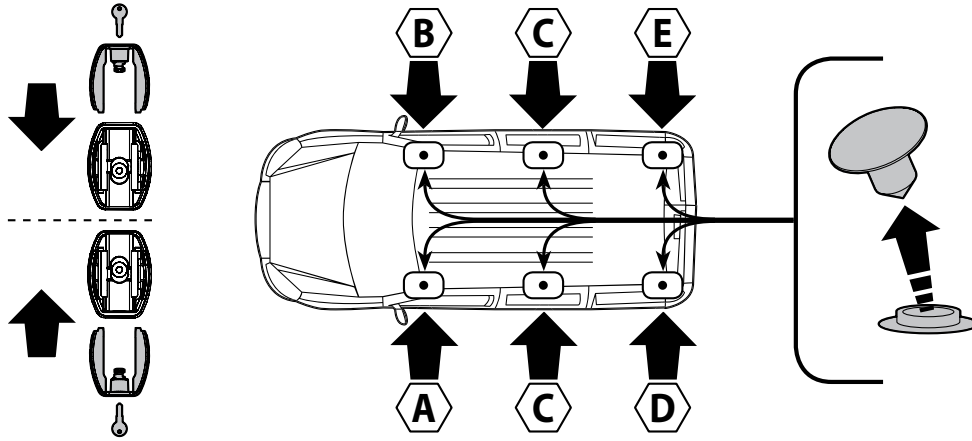


2





A

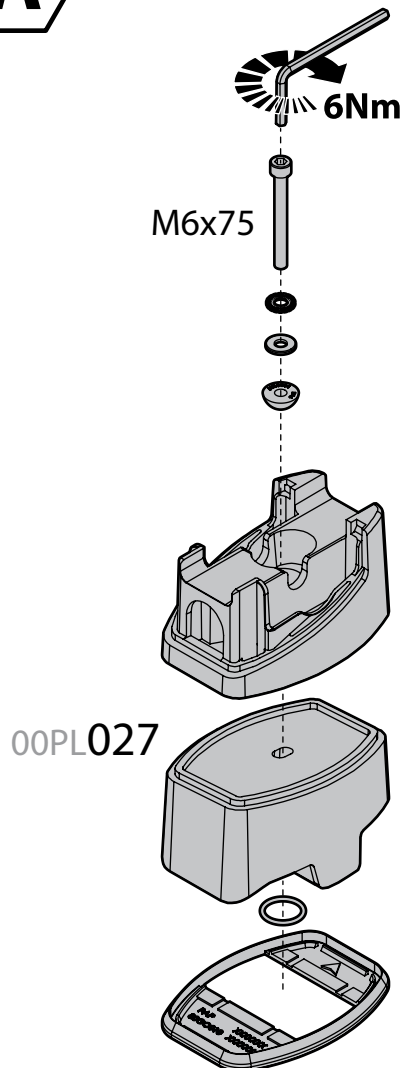

2

B

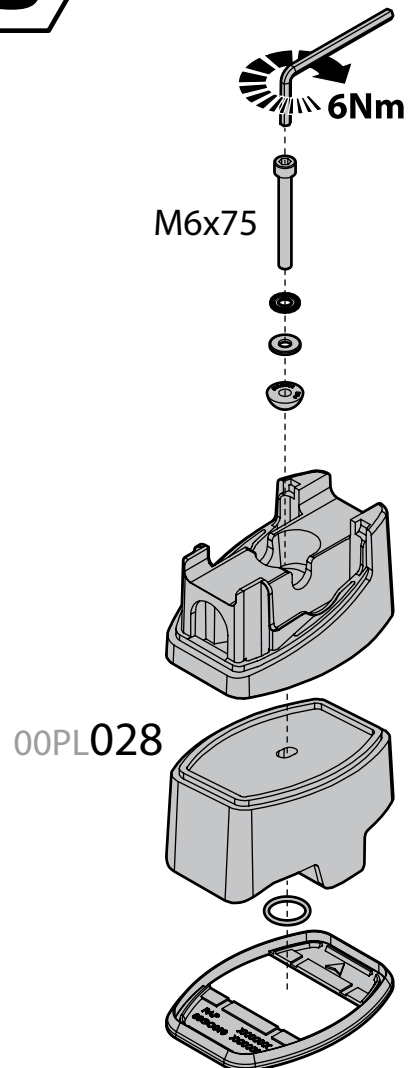

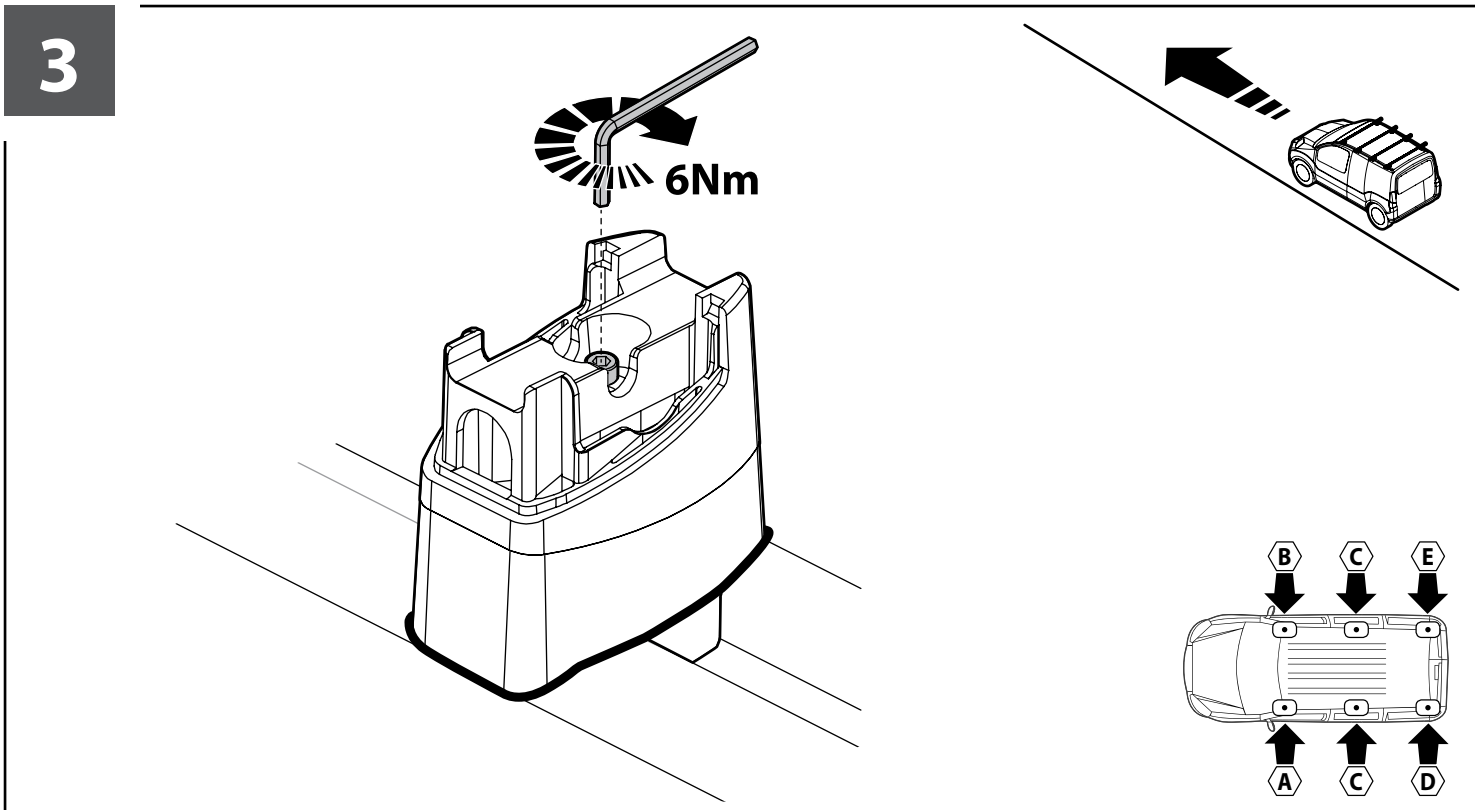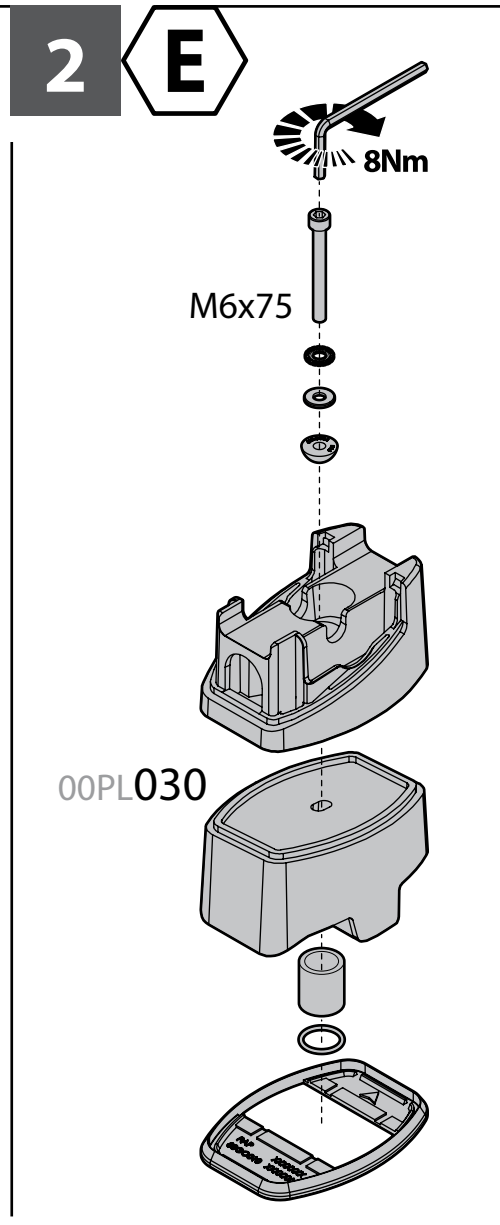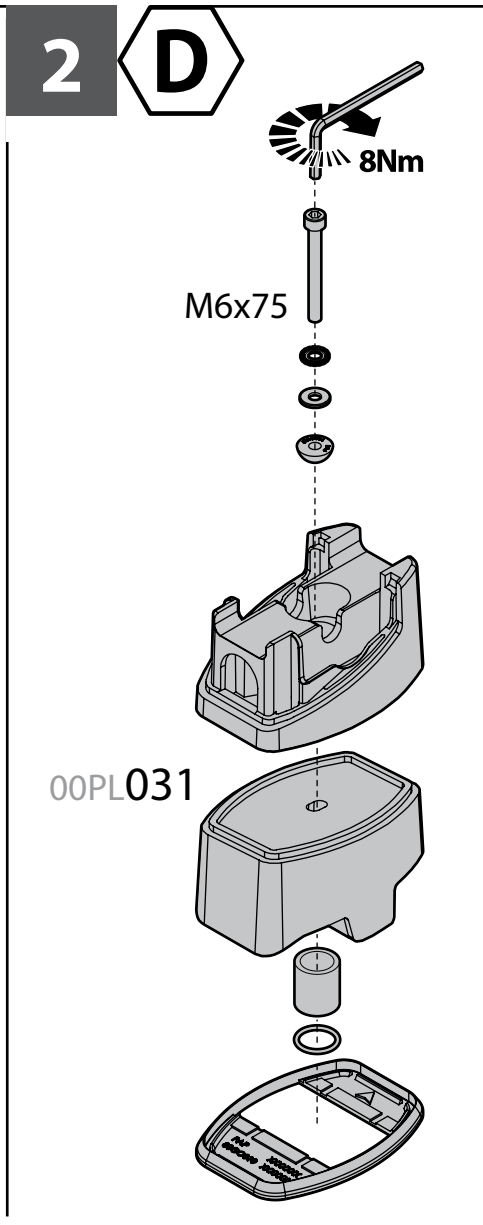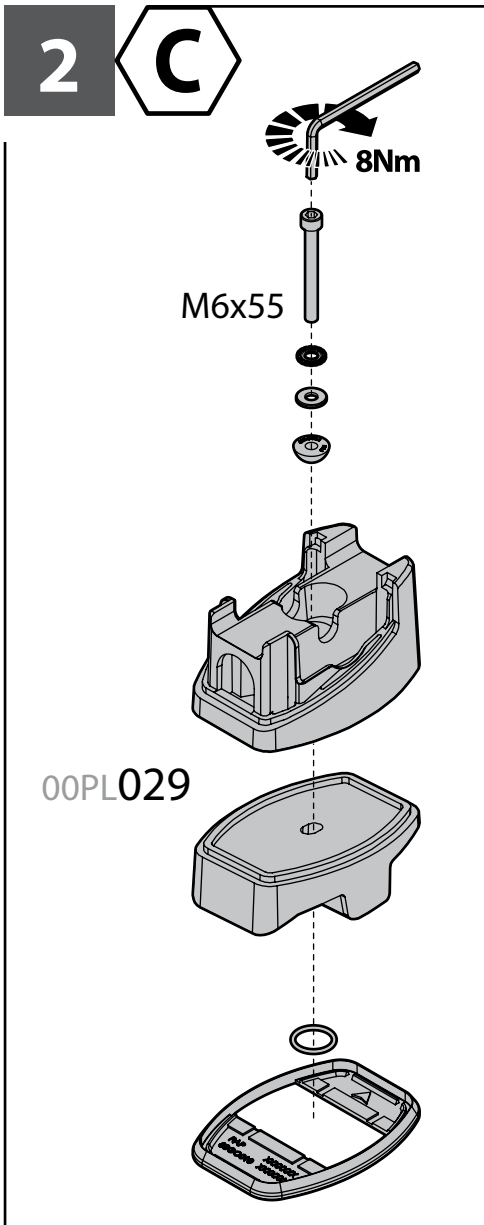




# ATTENZIONE WARNING



## A Kargo

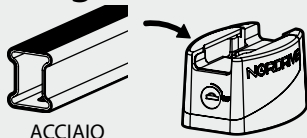


ACCIAIO  
Steel

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

# A




















## B Kargo-Plus

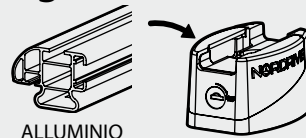

ALLUMINIO  
Aluminium


MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

# B

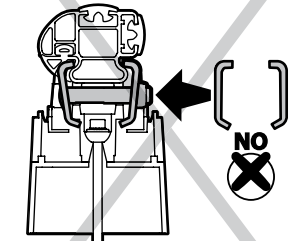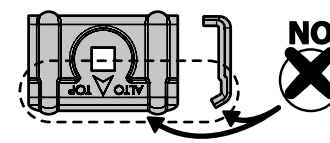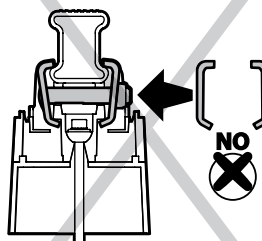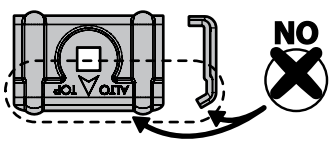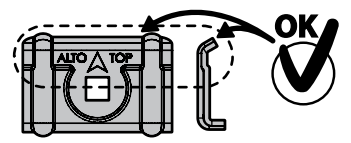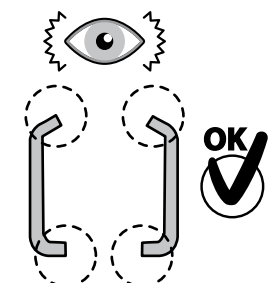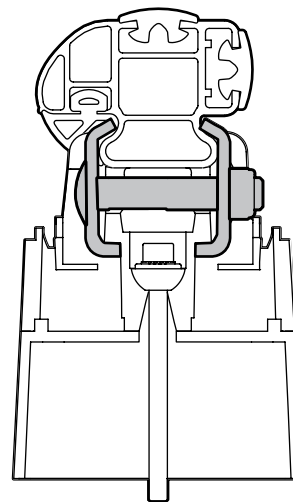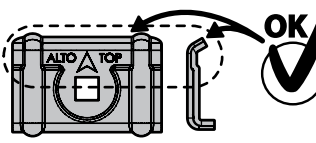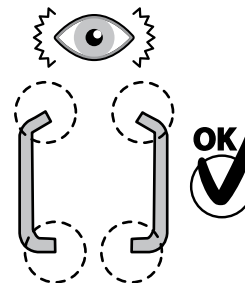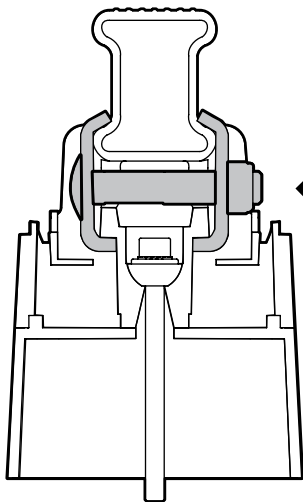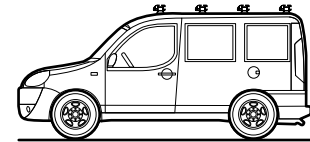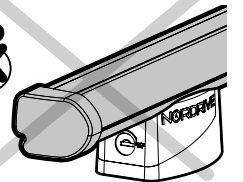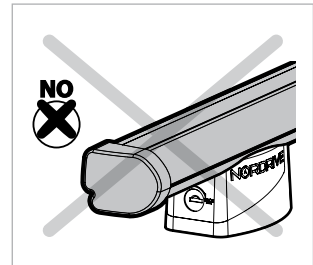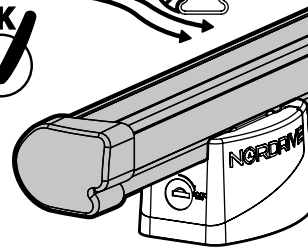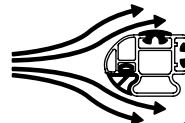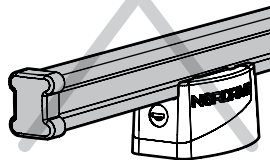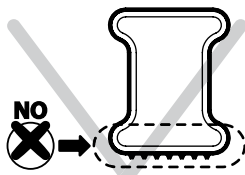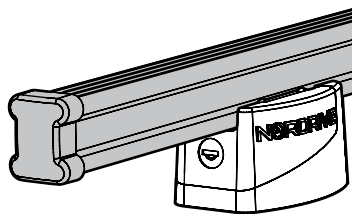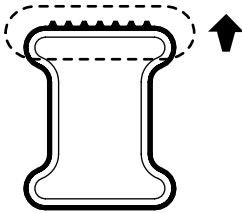

4


A

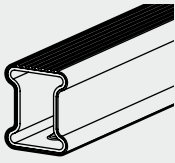


### Kargo



ACCIAIO  
Steel

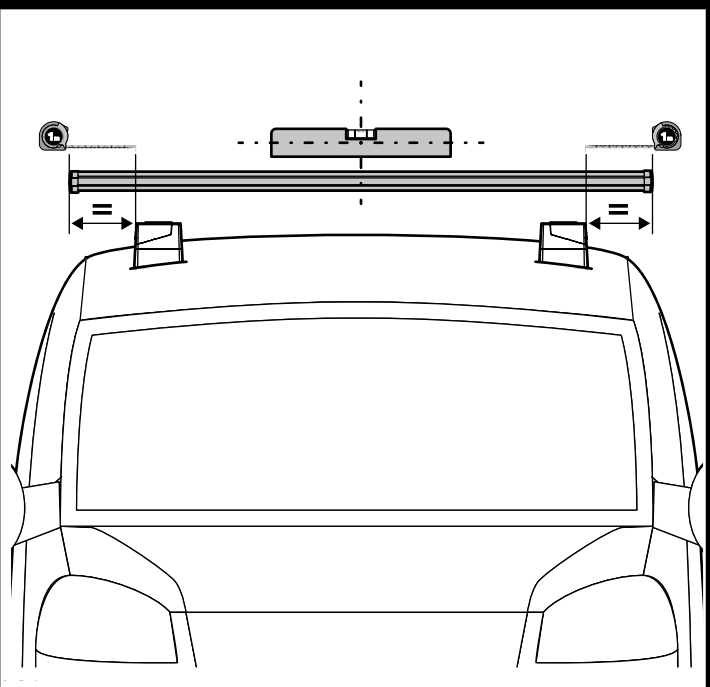


B

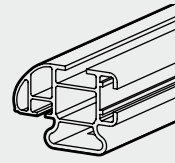


### Kargo-Plus



ALLUMINIO  
Aluminium

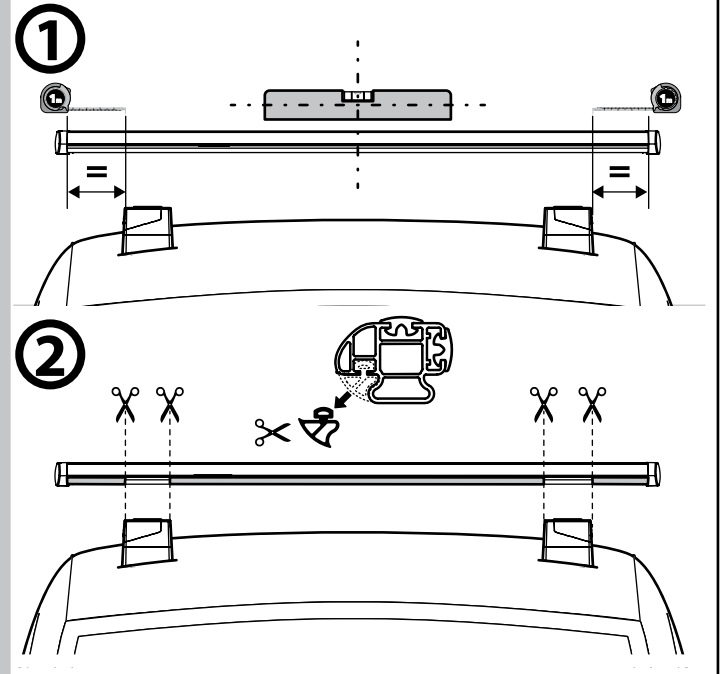


5

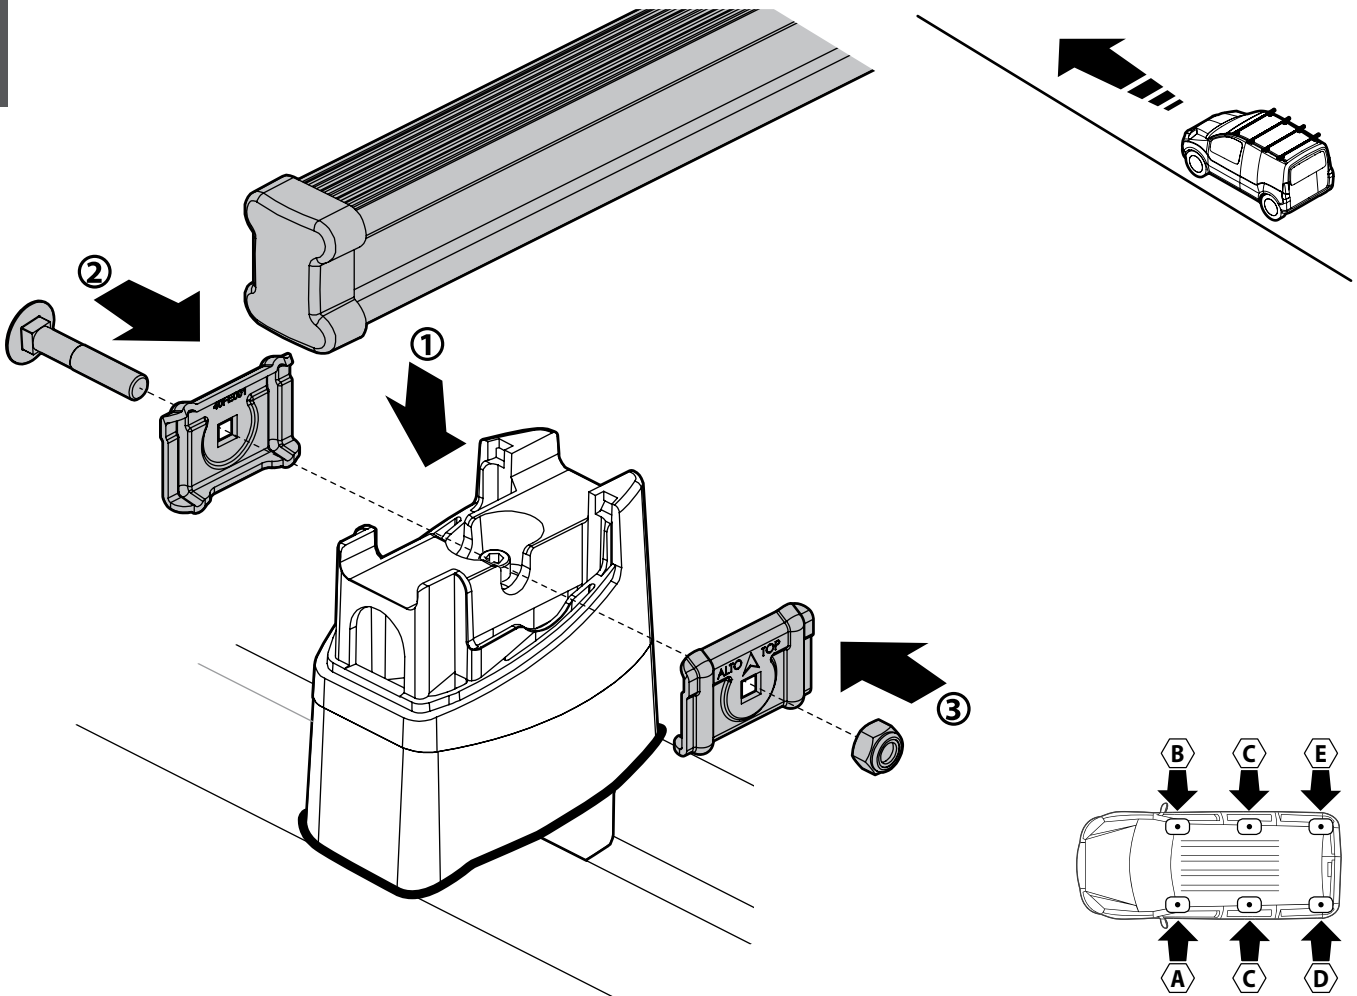




6

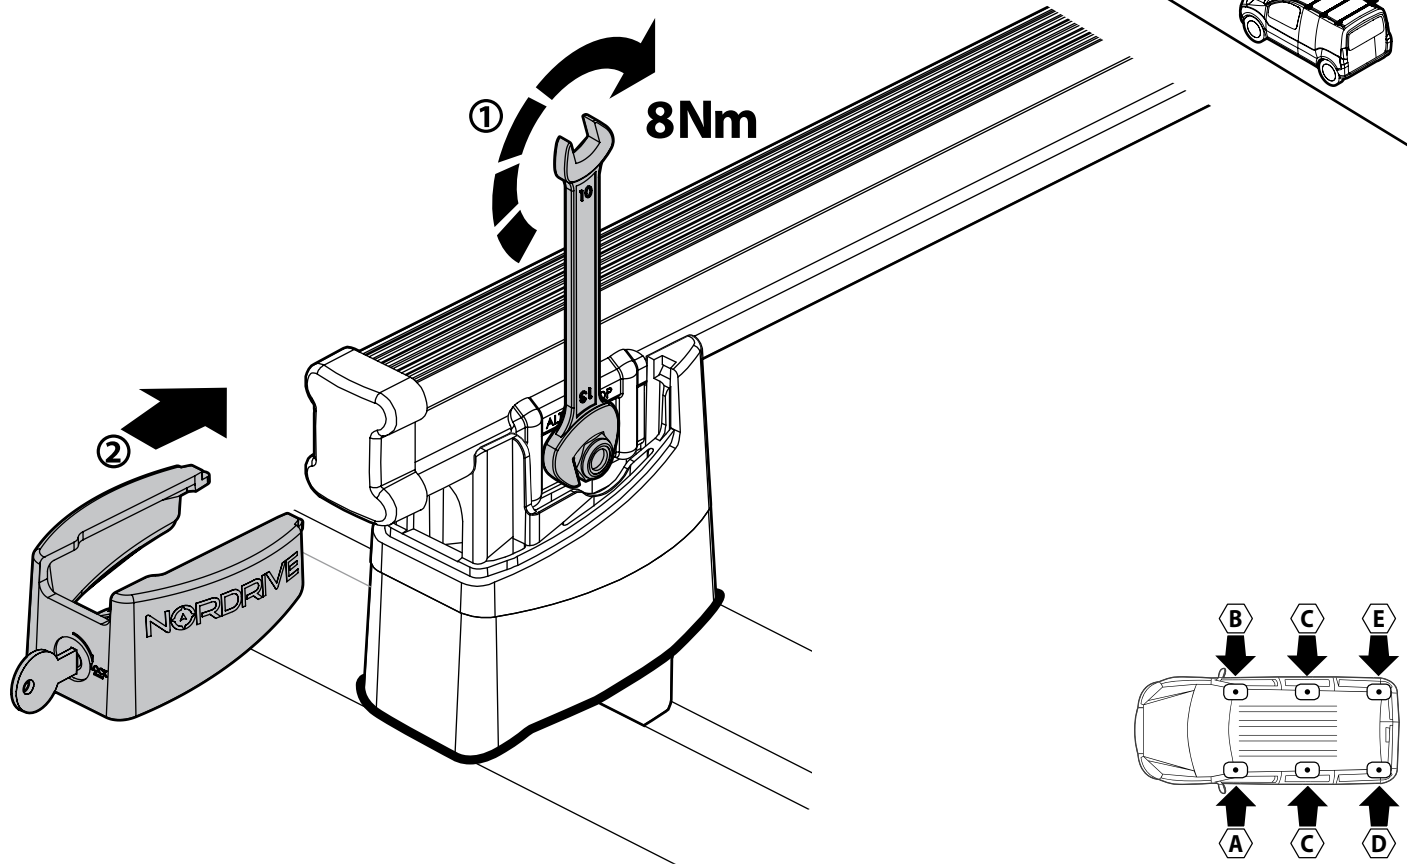


7

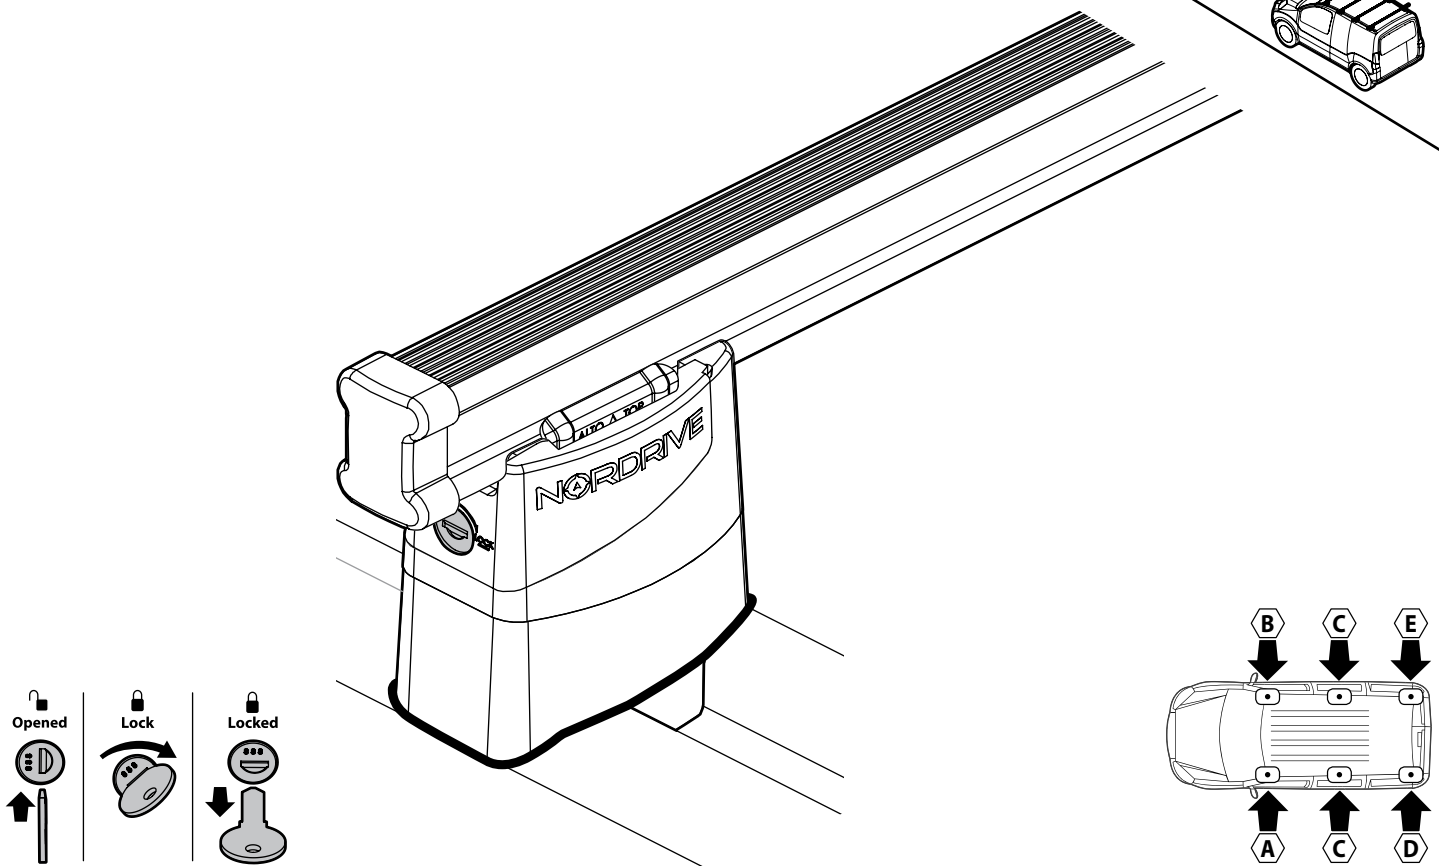

# Kargo series




Acciaio / Steel

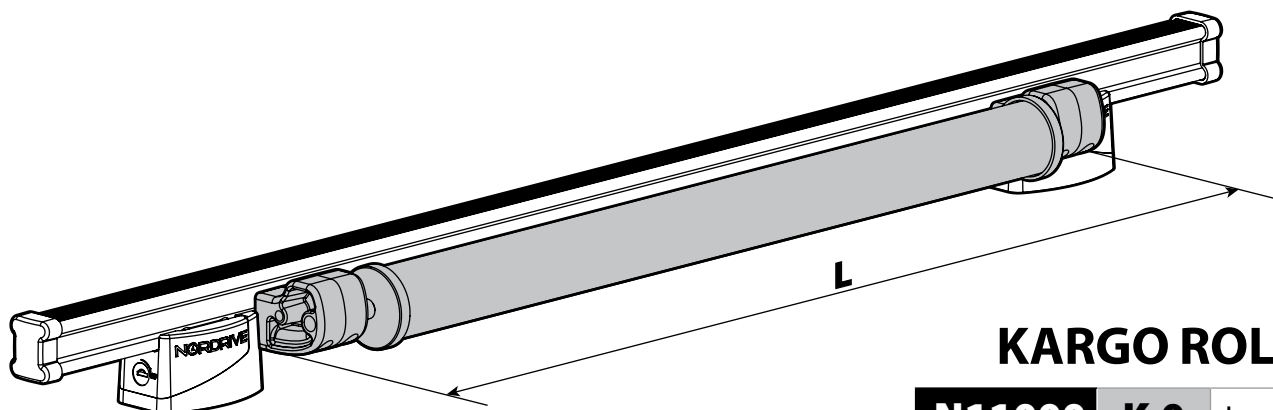


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

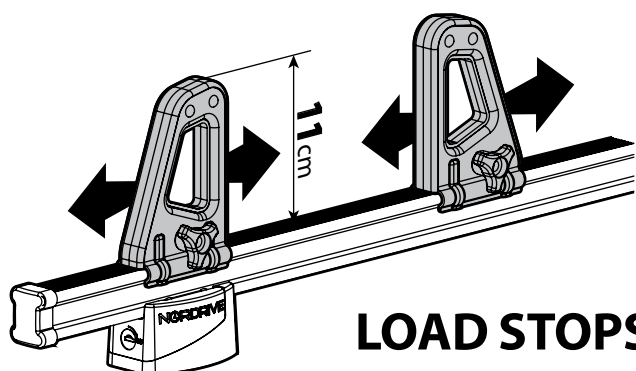


## LOAD STOPS

**N11001** K-1

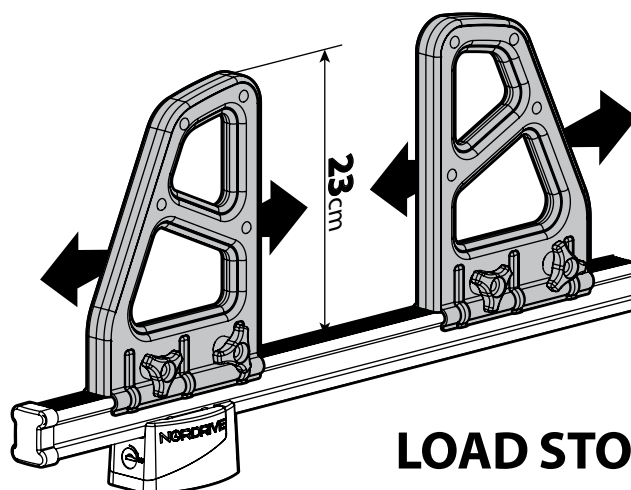

## LOAD STOPS

**N11002** K-2

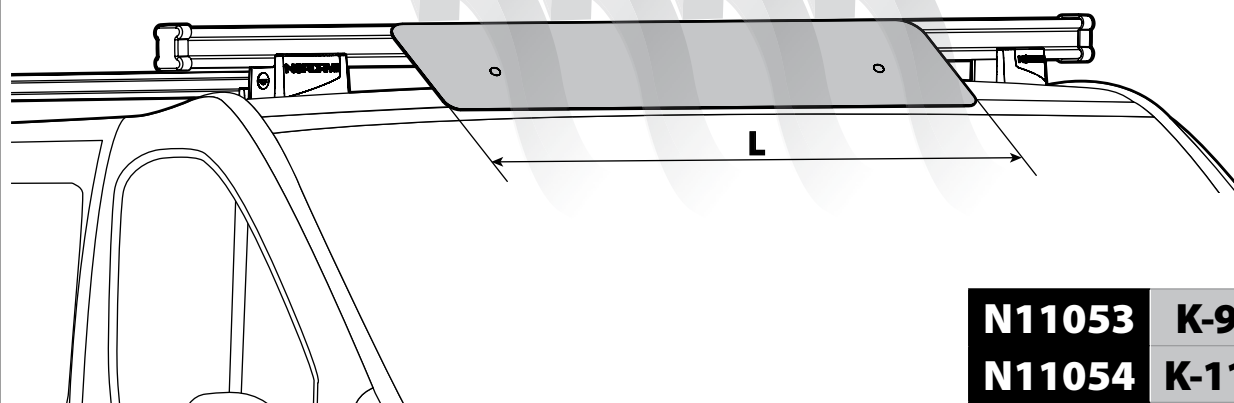


## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series

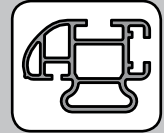


Alluminio / Aluminium

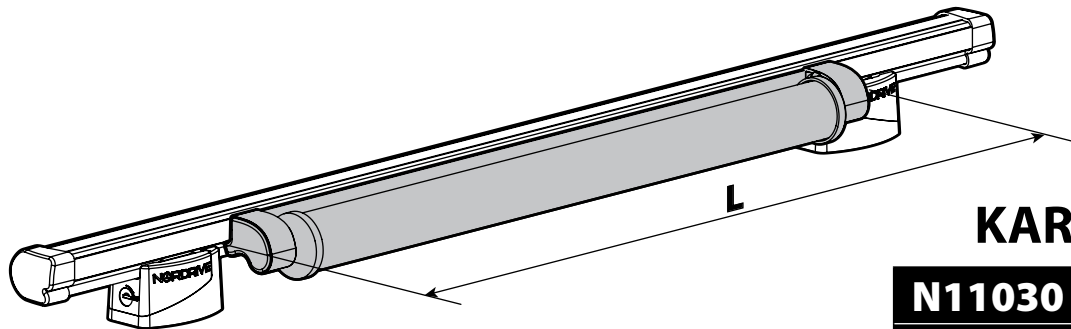


## KARGO ROLLER

<b>N11030</b>	<b>KP-0</b>	L = 64 cm
<b>N11034</b>	<b>KP-7</b>	L = 96 cm

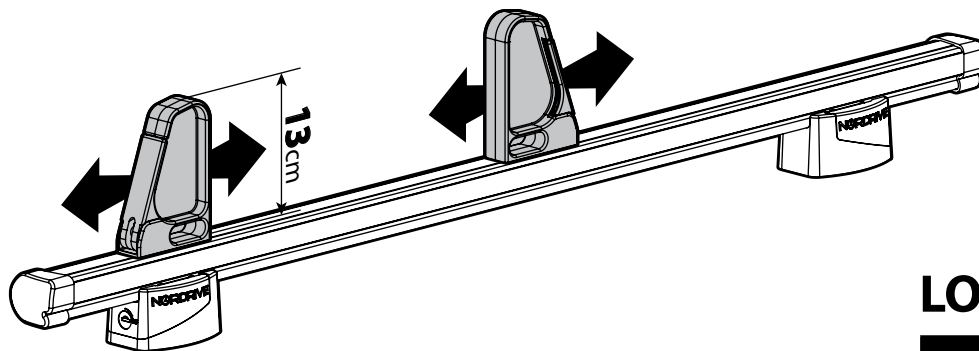


## LOAD STOPS

**N11031** KP-1

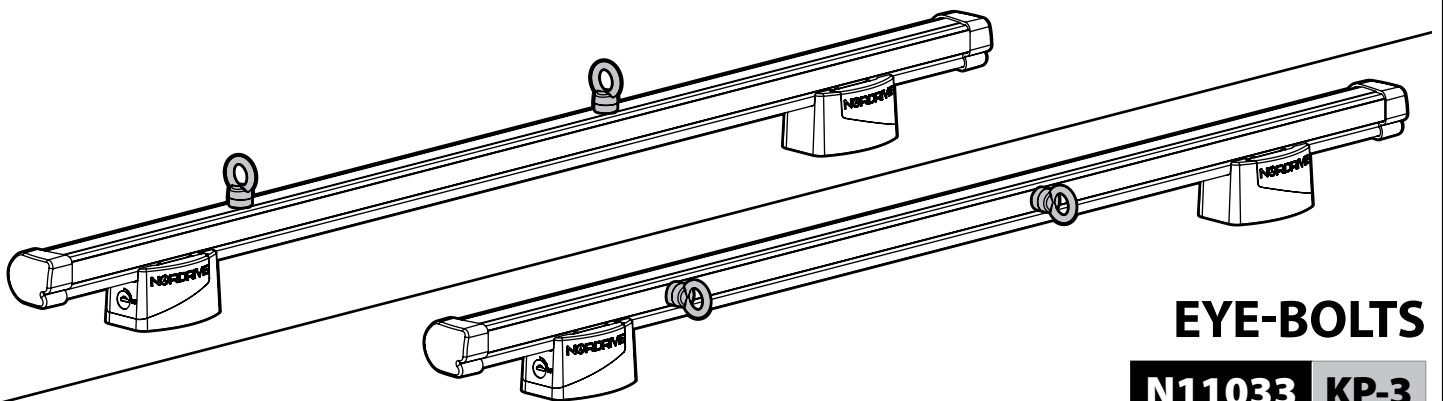

## EYE-BOLTS

**N11033** KP-3

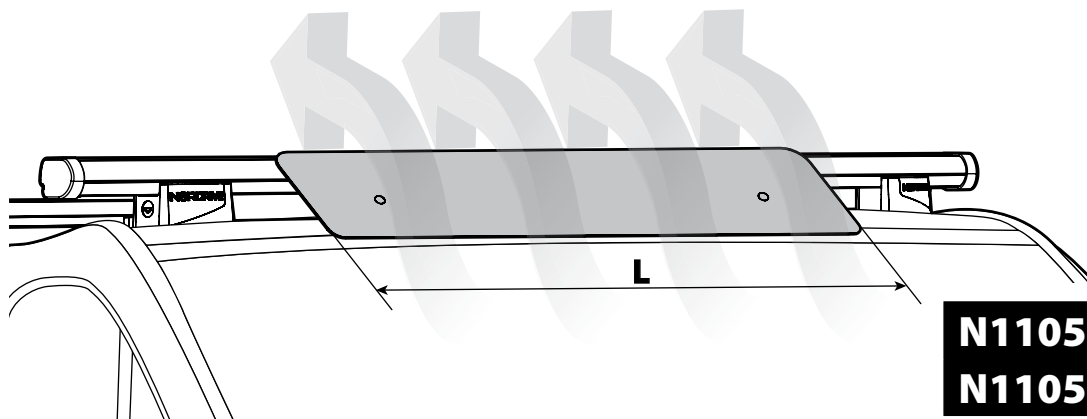

## SPOILER

<b>N11057</b>	<b>KP-9</b>	L = 95 cm
<b>N11058</b>	<b>KP-11</b>	L = 110 cm


OPTIONALS PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel


**Kargo-Plus**  
series

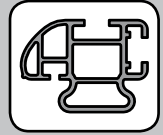

Alluminio / Aluminium



### KARGO-TUBE

<b>N11050</b>	<b>T200</b>	L = 205 cm
<b>N11051</b>	<b>T300</b>	L = 305 cm
<b>N11052</b>	<b>T400</b>	L = 405 cm

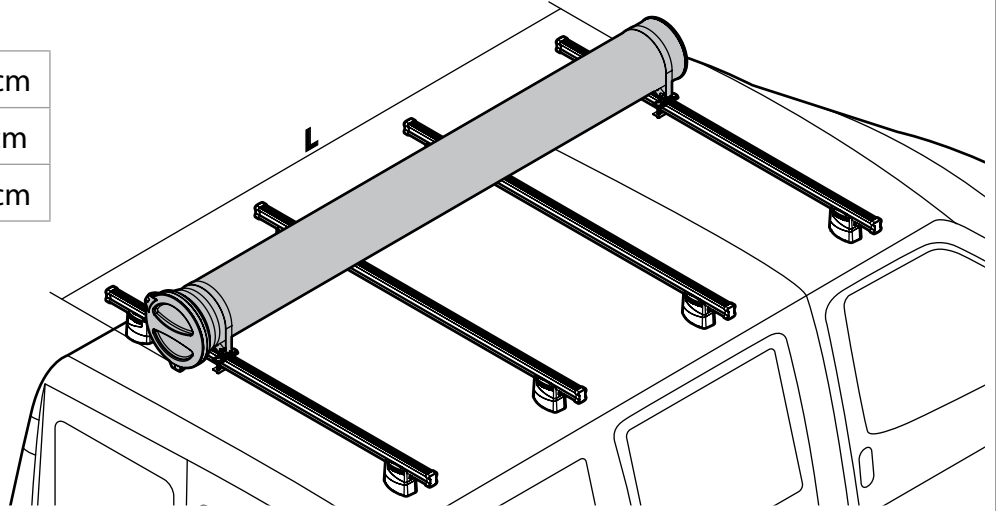


### LADDER HOLDER STRAPS

**N11065** U-5

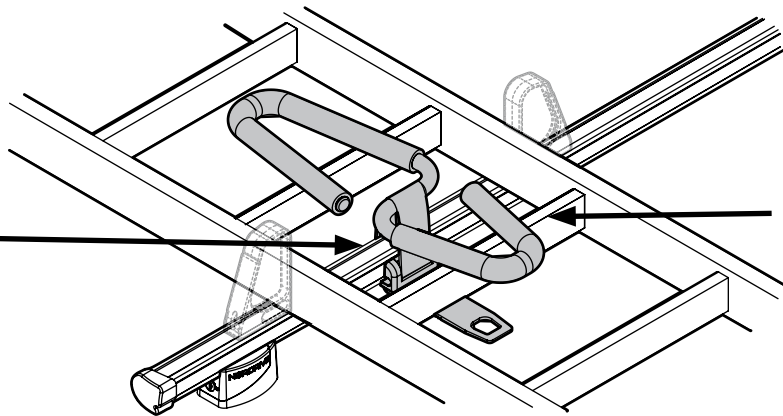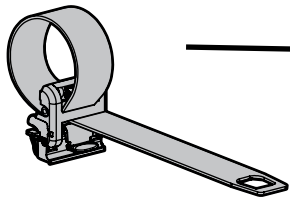


### LADDER STEP ADAPTER

**N11067** U-6

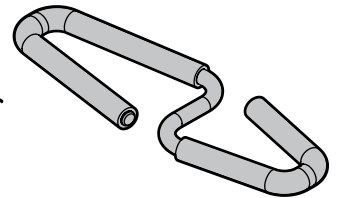

### EXTENSION ROLLER

<b>N11020</b>	<b>U-0</b>	L = 64 cm
<b>N11021</b>	<b>U-7</b>	L = 96 cm

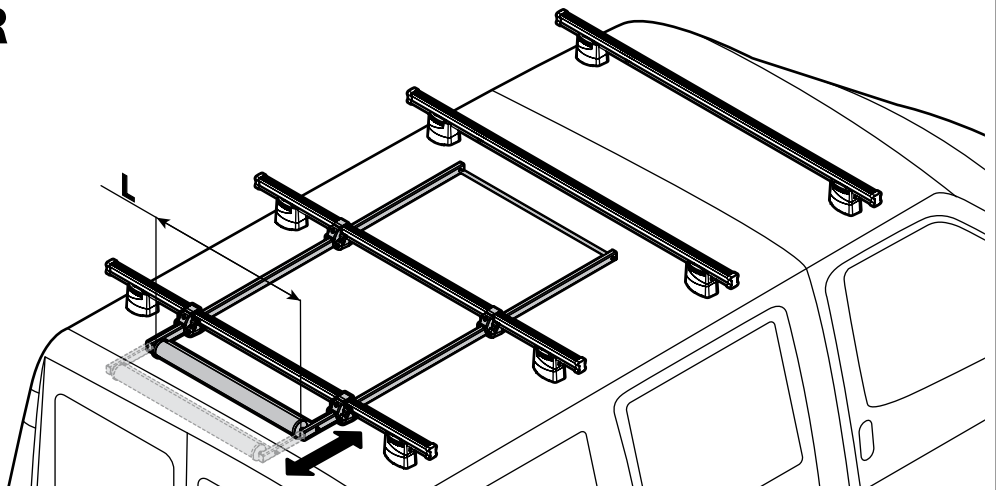

**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS

NORDRIVE<sup>®</sup> is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)

91CA0329 r05