

Art. **N30192**

CITROËN JUMPY

2000
01/07→03/16

FIAT SCUDO

2000
01/07→04/16

PEUGEOT EXPERT

2000
01/07→03/16


PEUGEOT EXPERT TEPEE

2000
01/07→05/16


TOYOTA PROACE

2000
12/13→05/16

KIT x4

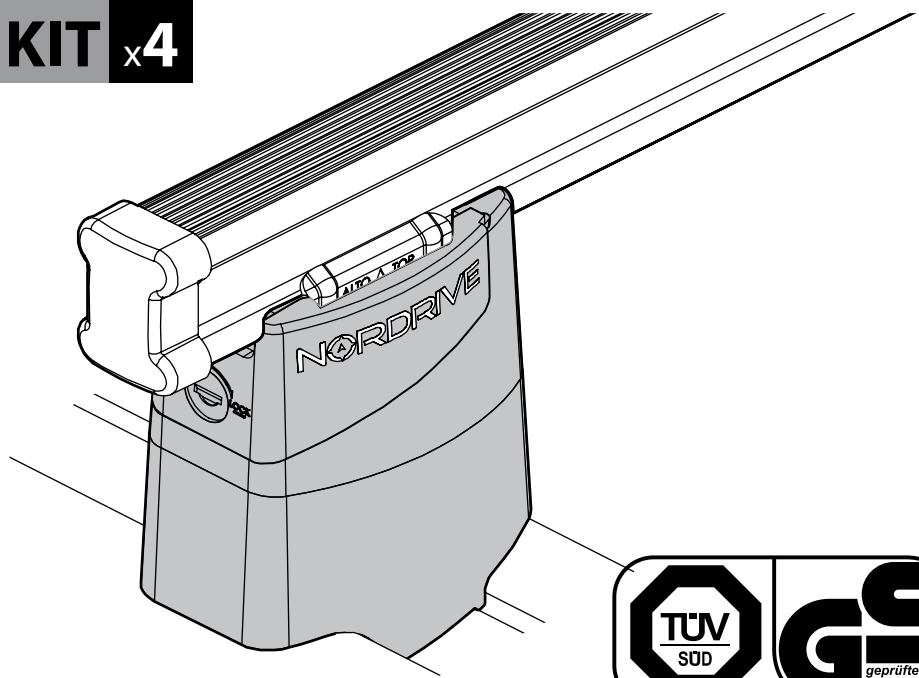

 <input checked="" type="checkbox"/> H = 1980mm L = 3000mm	 <input checked="" type="checkbox"/> H = 1980mm L = 3122mm
	 <input type="checkbox"/> H = 2204mm L = 3122mm

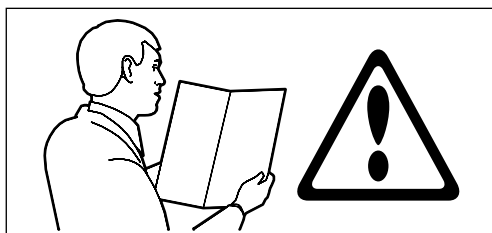

- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- ⓓ MONTAGEANLEITUNG
- ⓕ INSTRUCTIONS DE MONTAGE
- ⓔ ISTRUCCIONES DE MONTAJE
- ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓝ MONTAGE-INSTRUCTIES
- Ⓢ MONTERINGSANVISNING
- ⓕ ASENUSOHJE
- ⓔ PAIGALDUSJUHEND
- ⓐ STIPRINÁŠANAS INSTRUKCIJA
- Ⓛ PRITVIRTINIMO INSTRUKCIJOS
- ⓖ INSTRUKCJA MONTAŻU
- Ⓡ Инструкции по установке
- Ⓒ NÁVOD NA MONTÁŽ
- Ⓢ NÁVOD NA MONTÁŽ
- Ⓛ NAVODILA ZA PRITRJEVANJE
- Ⓡ UPUTA ZA SASTAVLJANJE
- Ⓡ A FELSZERELÉS MÓDJA
- Ⓡ Οδηγίες συναρμολόγησης
- Ⓡ MONTAJ TALIMATLARL
- Ⓡ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓡ UPUTSTVA ZA MONTAŽU


- ⓘ ADATTO PER
- Ⓒ SUITABLE FOR
- ⓕ INDIQUÉ POUR
- ⓓ GEEIGNET FÜR
- ⓔ ADECUADA PARA

**NORDRIVE
KARGO SERIES**




Kargo
ACCIAIO
Steel

- ⓘ BARRE KARGO
- Ⓒ KARGO BARS
- ⓕ BARRES KARGO
- ⓓ DACH-LASTENTRÄGER KARGO
- ⓔ BARRES KARGO

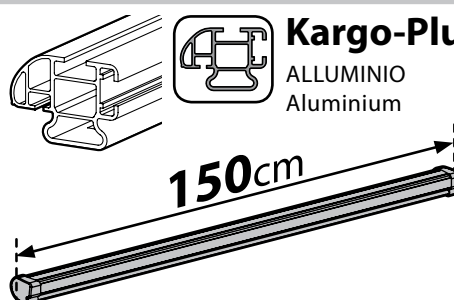

Kargo-Plus
ALLUMINIO
Aluminium

- ⓘ BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- ⓕ BARRES KARGO-PLUS
- ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- ⓔ BARRES KARGO-PLUS

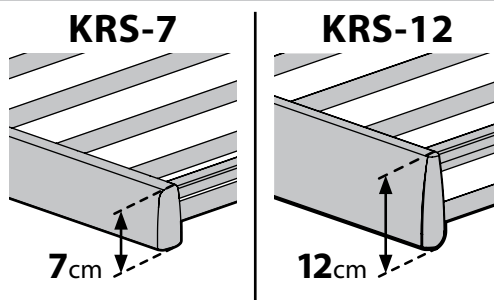

KRS-7

KRS-12


- ⓘ CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- ⓕ GALERIE KRS-7 / KRS-12
- ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- ⓔ BACAS KRS-7 / KRS-12

Art. **N10010** x2

Art. **N10040** x2

NORDRIVE®









TRANSPORT SOLUTIONS

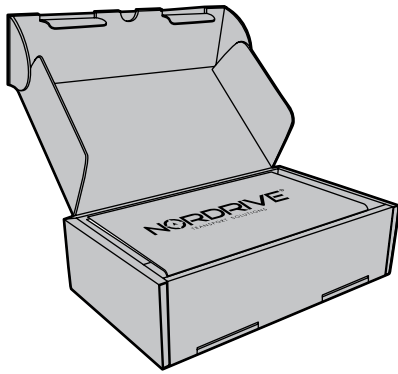


NORDRIVE[®]

TRANSPORT SOLUTIONS

Art. **N30192**

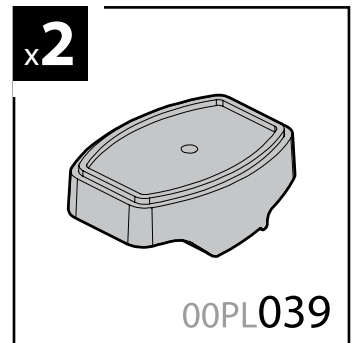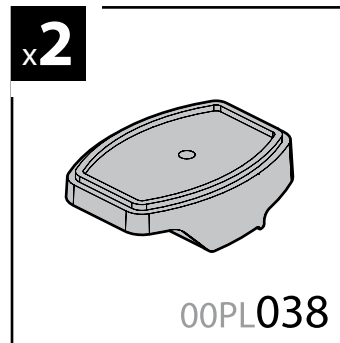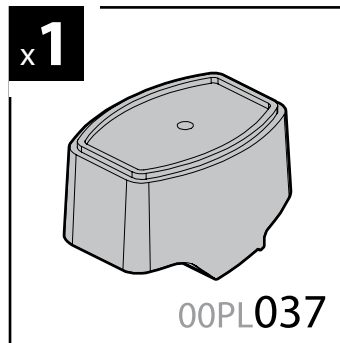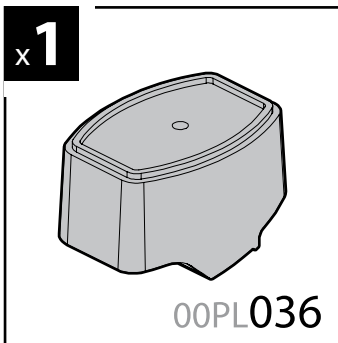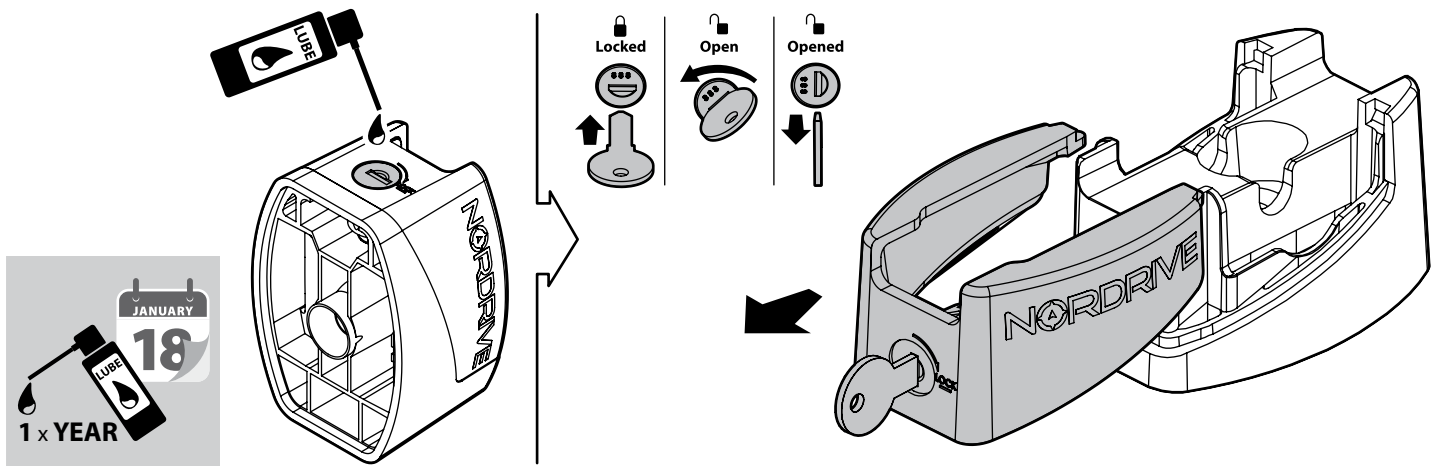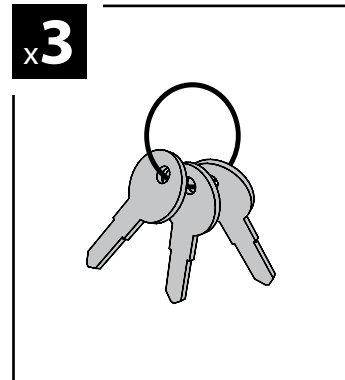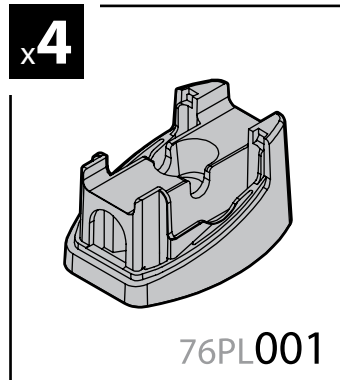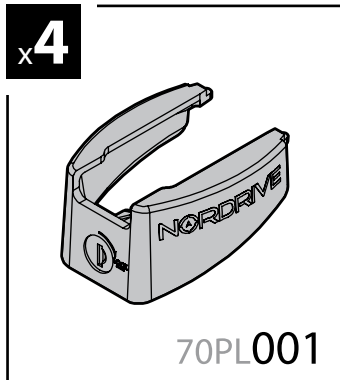


x8

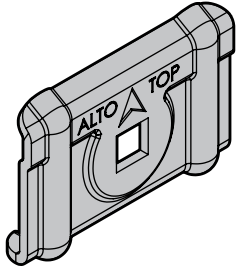


40FE001

x4

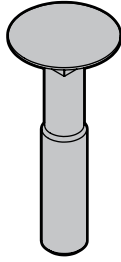


60BQ8045

x4




62BB0800

x2

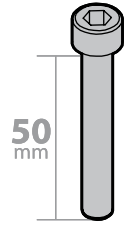


M6x50
60CE6050

x2



M6x55
60CE6055

x2

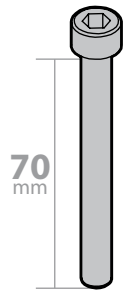


M6x70
60CE6070

x4




61ED0611

x4




ø6 - ø15
82FE0001

x4

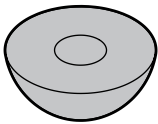


60RO004

x4

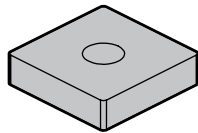


83FE0002

x4

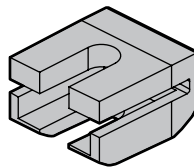


30PL010

x1





72FE0001

x1



72FE0002



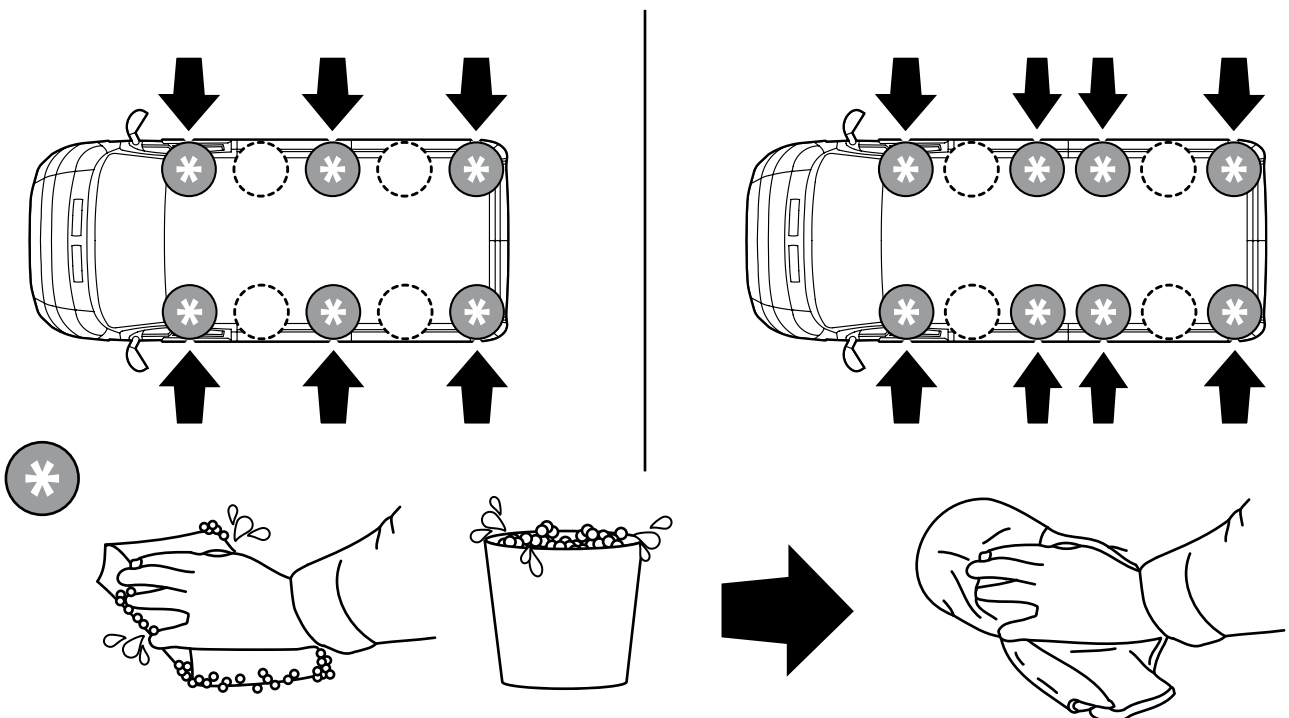
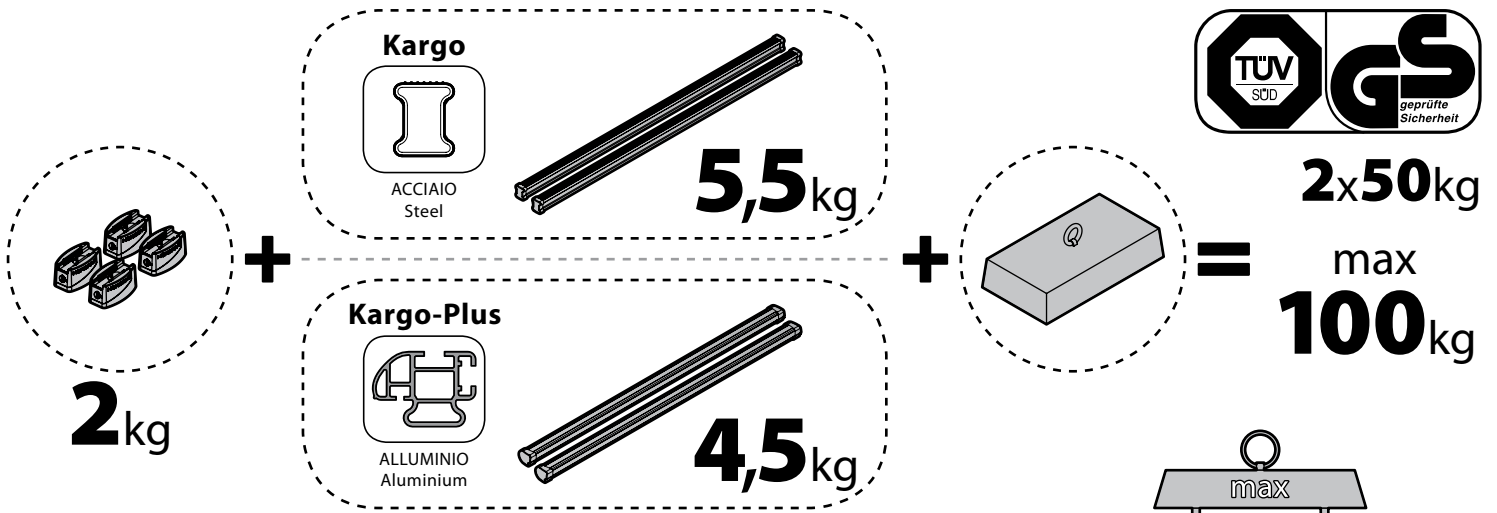


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) ISTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING



(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRINĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ



(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγίες συναρμολόγησης
 (TR) MONTAJ TALIMATLARI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

1

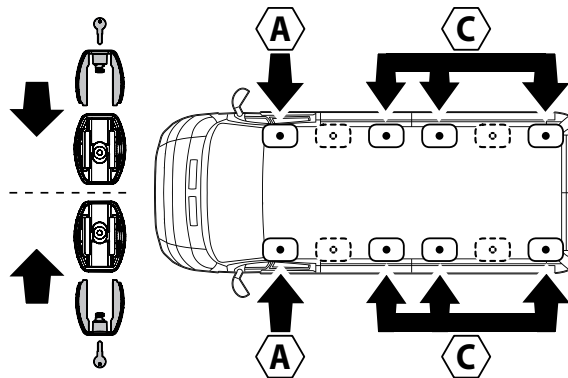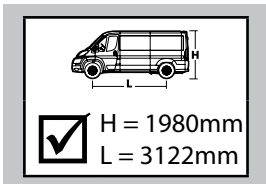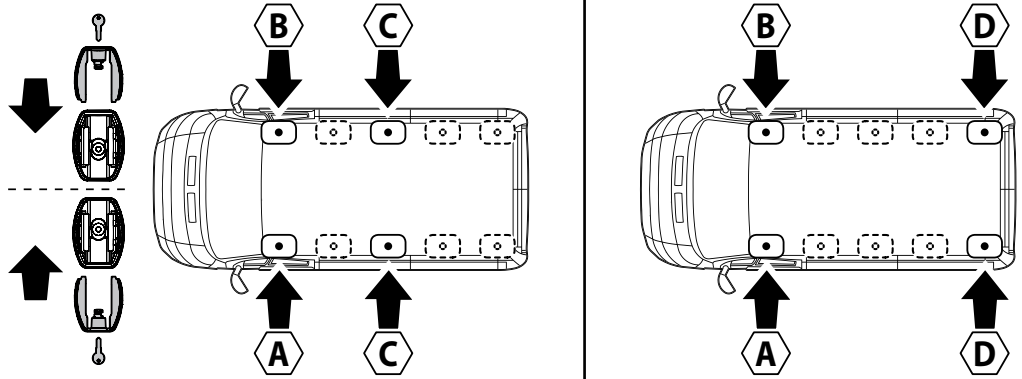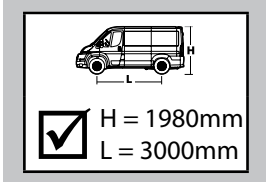

2

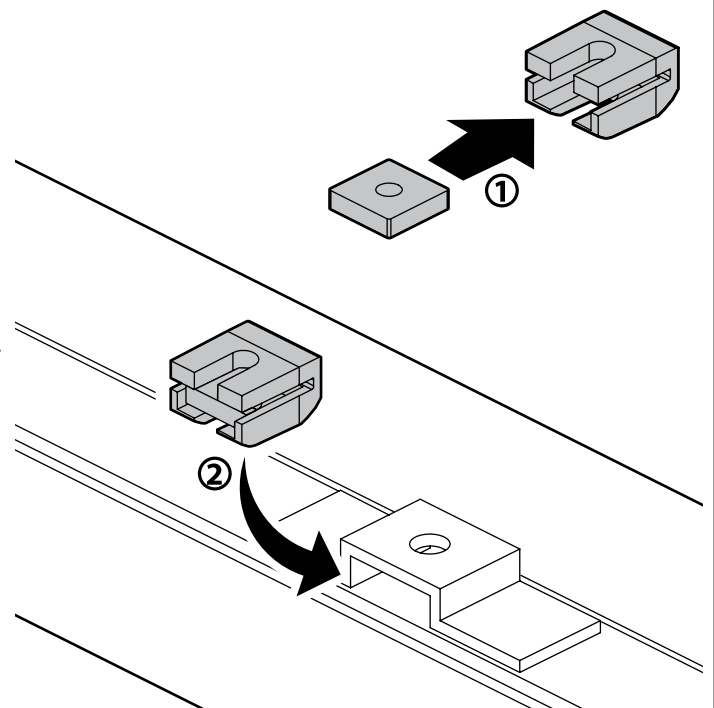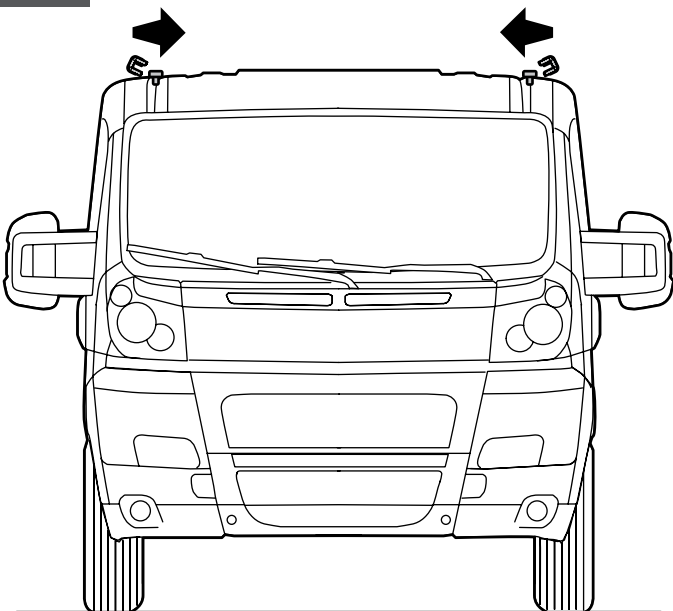

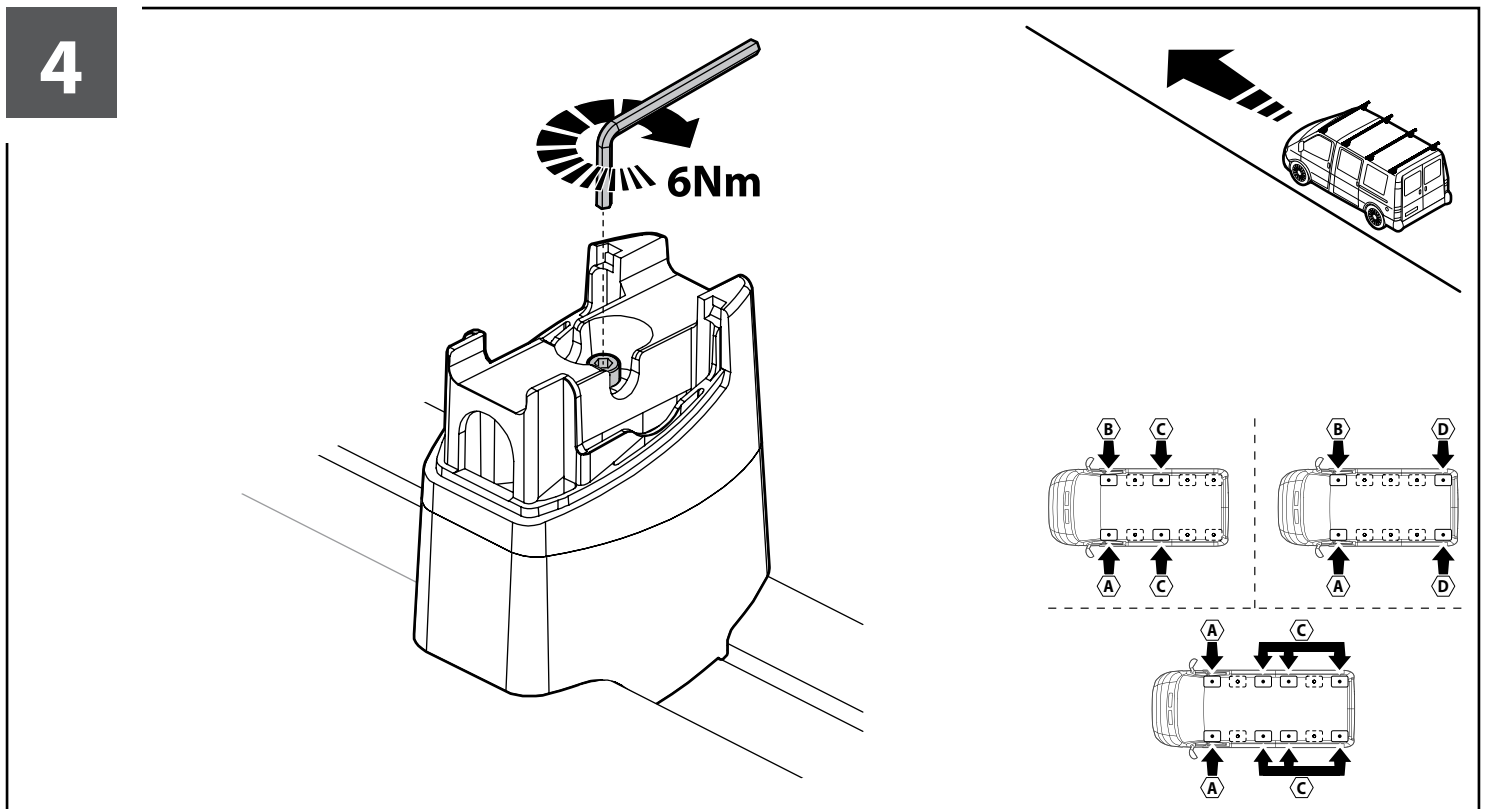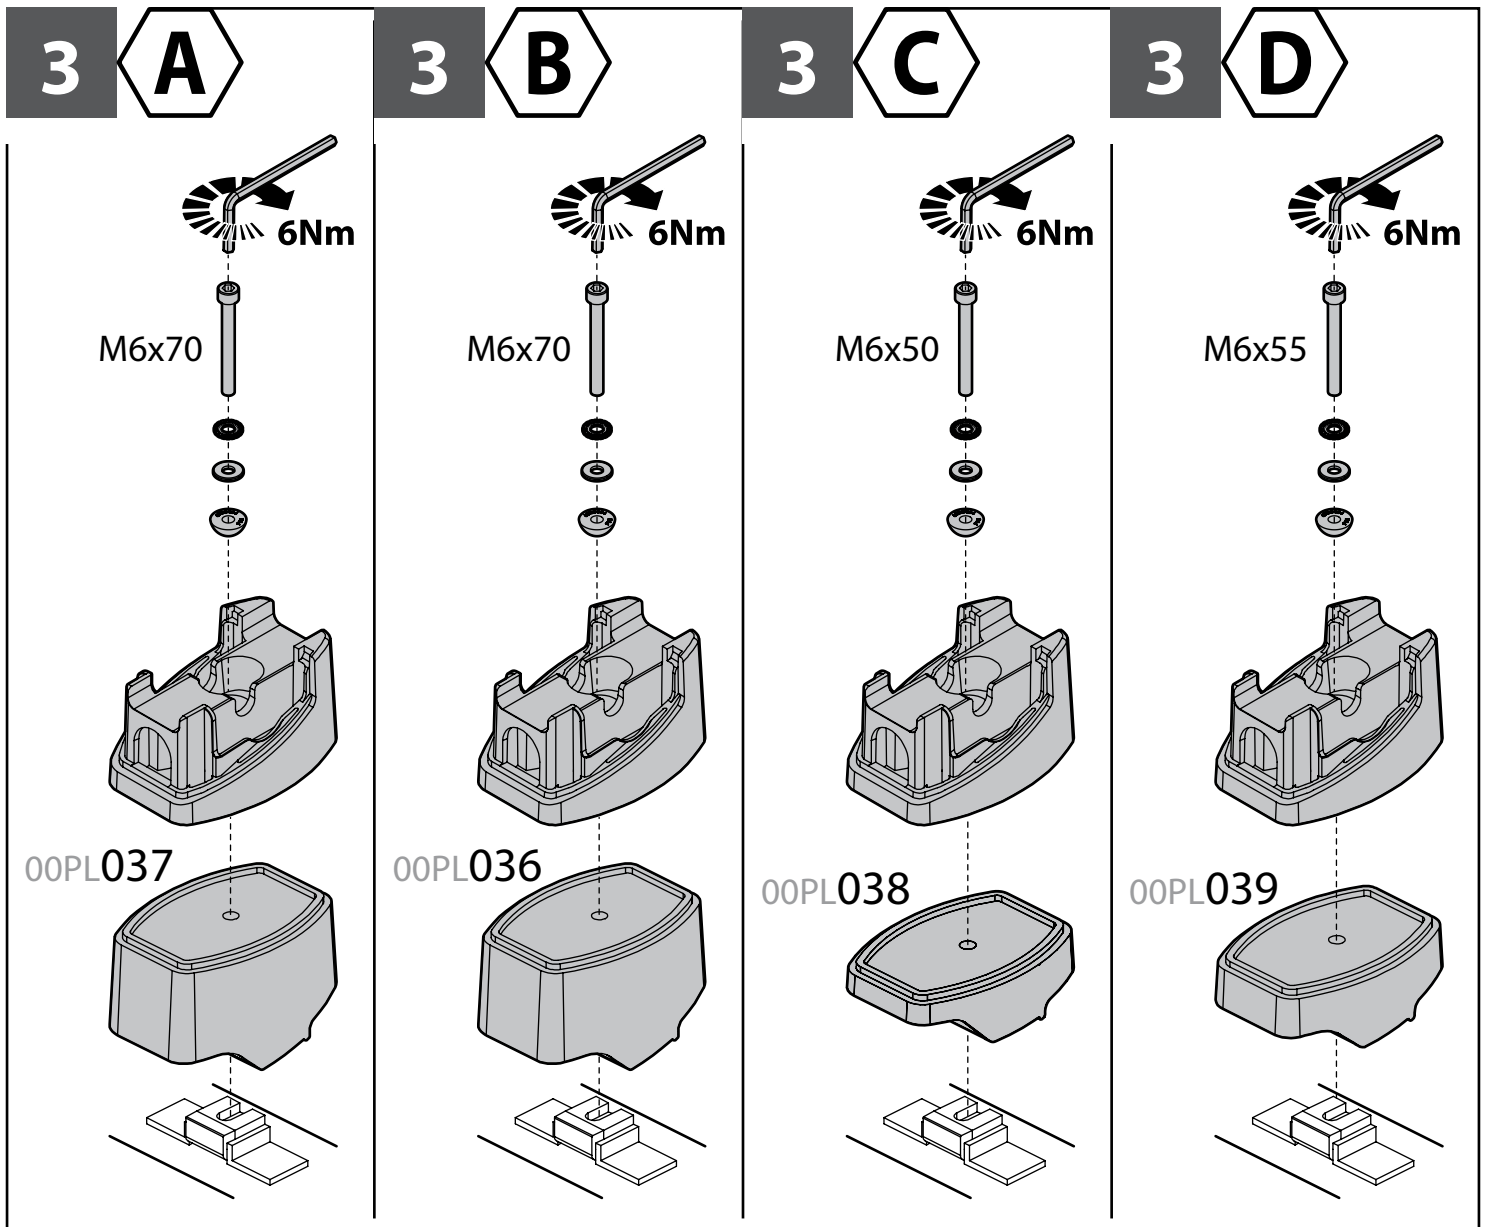




ATTENZIONE WARNING




A Kargo

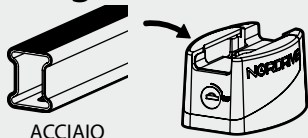

ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

B Kargo-Plus


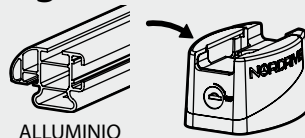


ALLUMINIO
Aluminium





MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

A












B

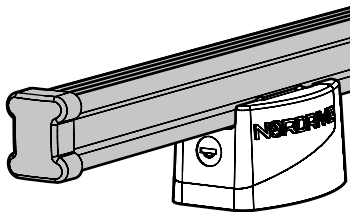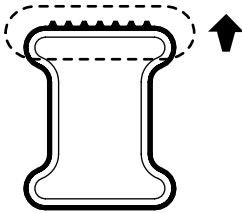

NO

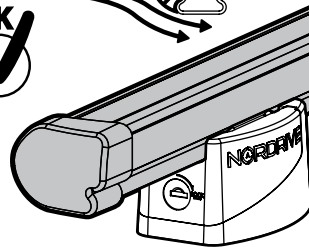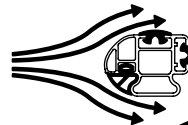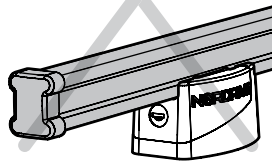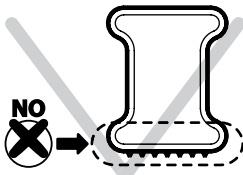


NO

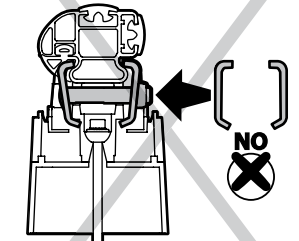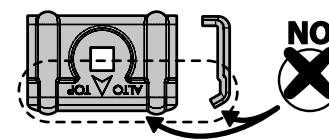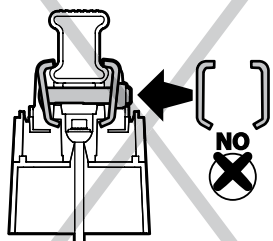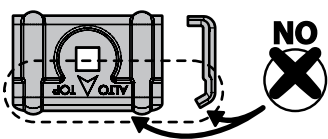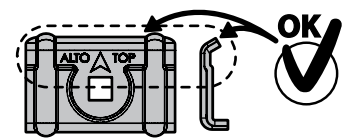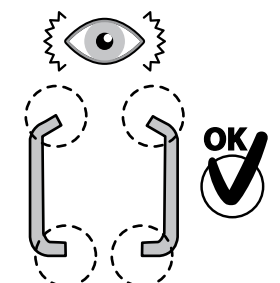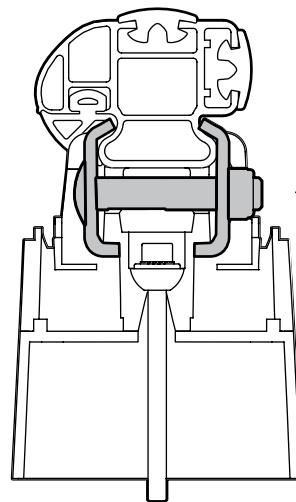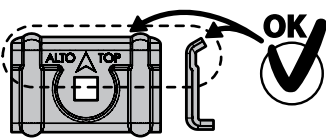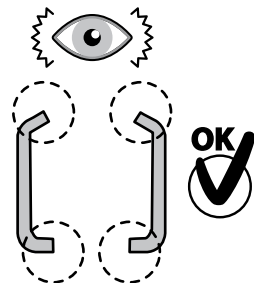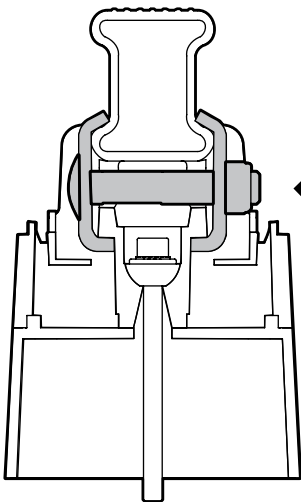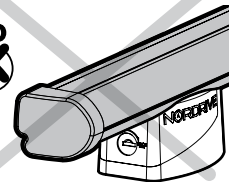

5


A

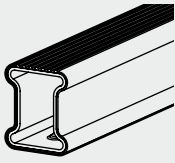


Kargo



ACCIAIO
Steel

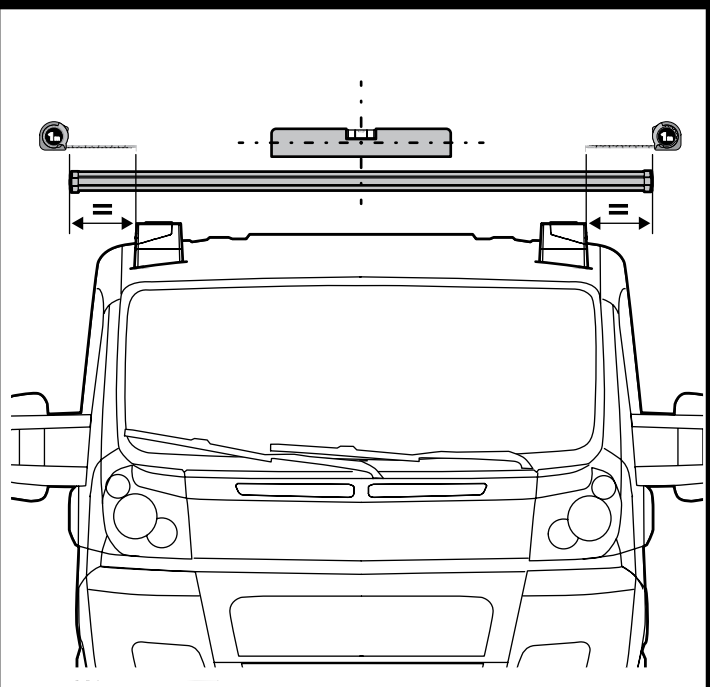


B

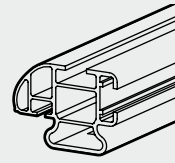



Kargo-Plus





ALLUMINIO
Aluminium

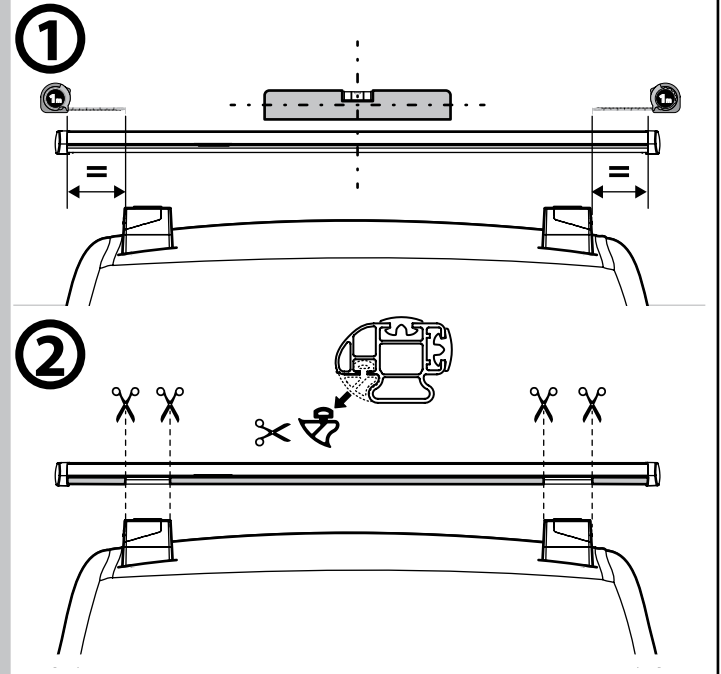




6

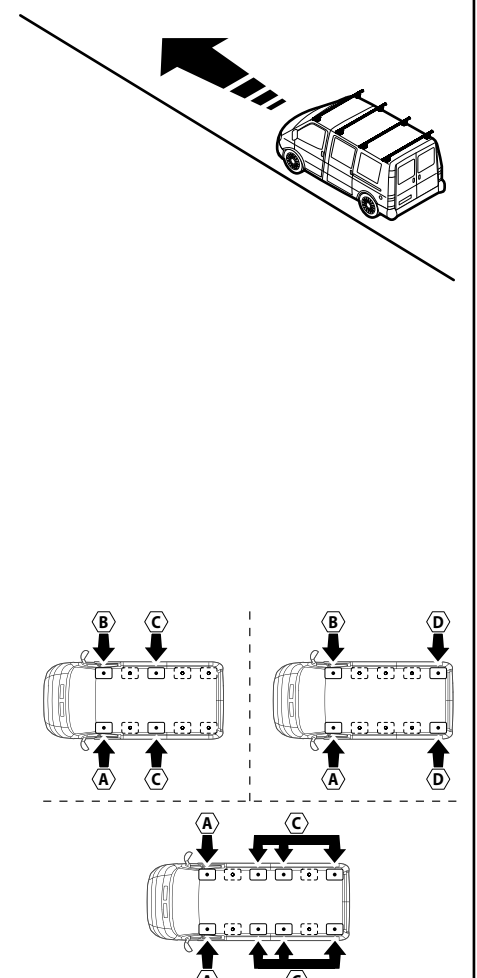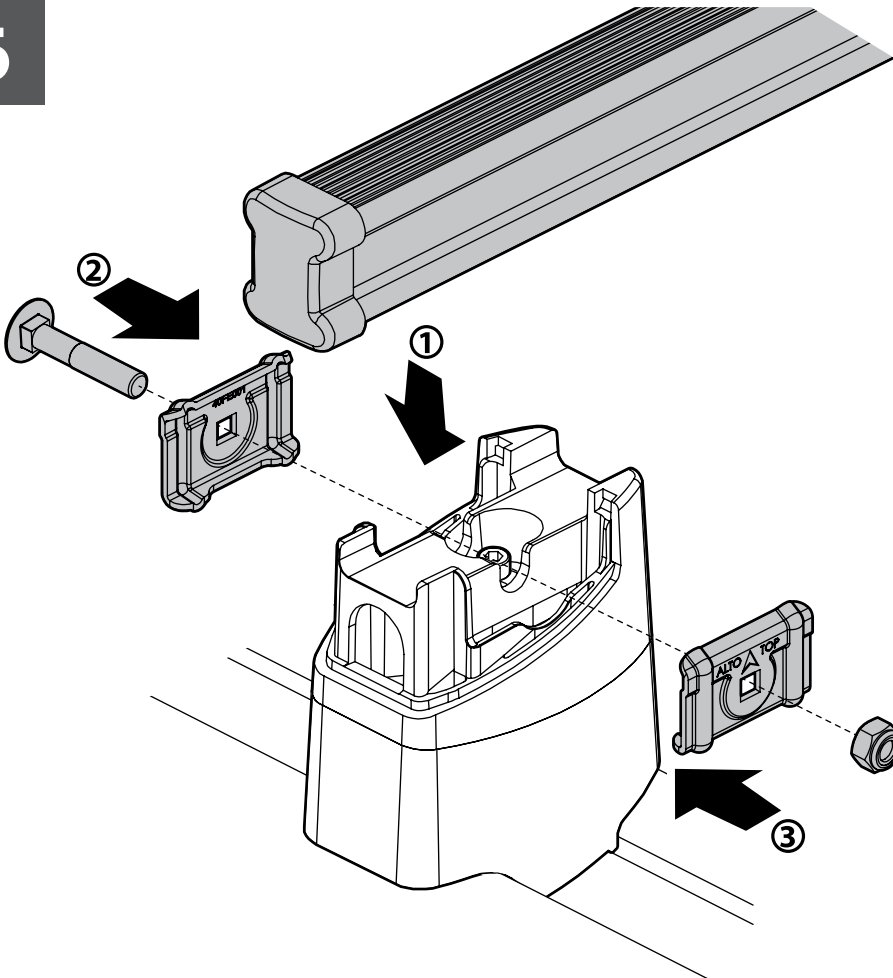

7

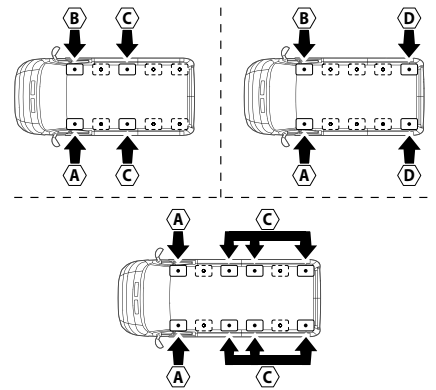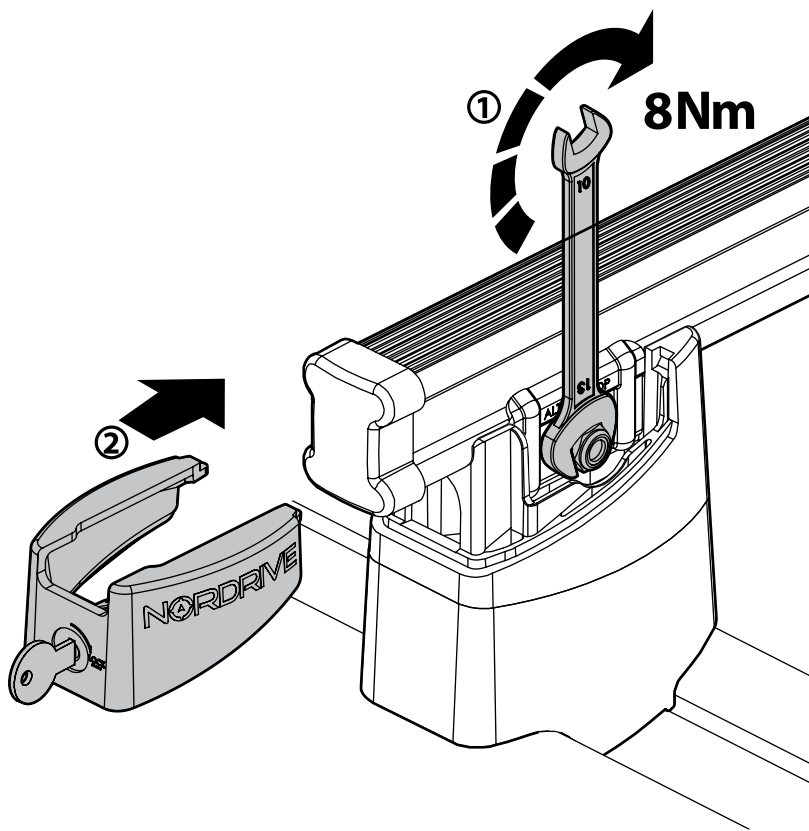


8

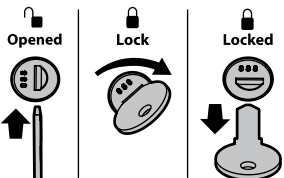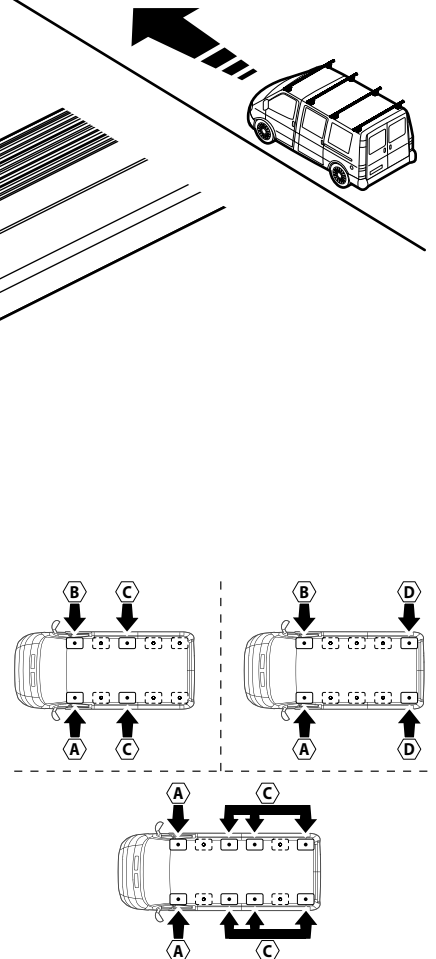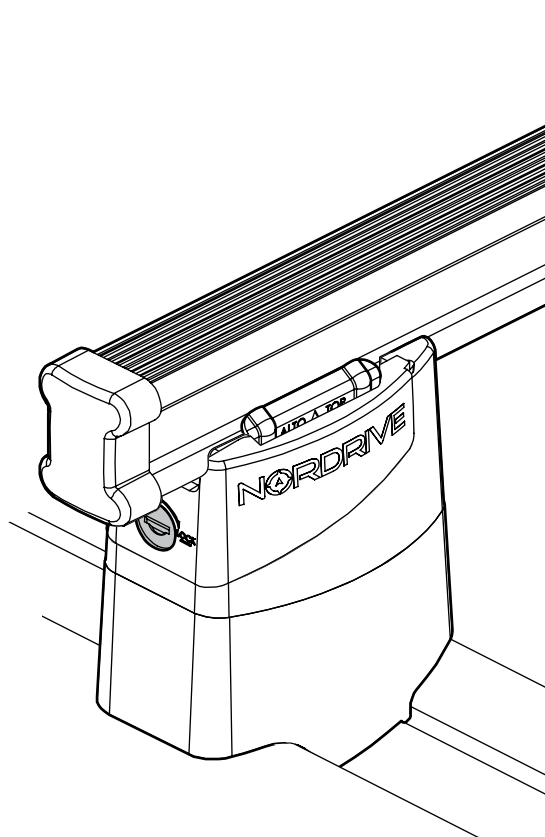

Kargo series




Acciaio / Steel

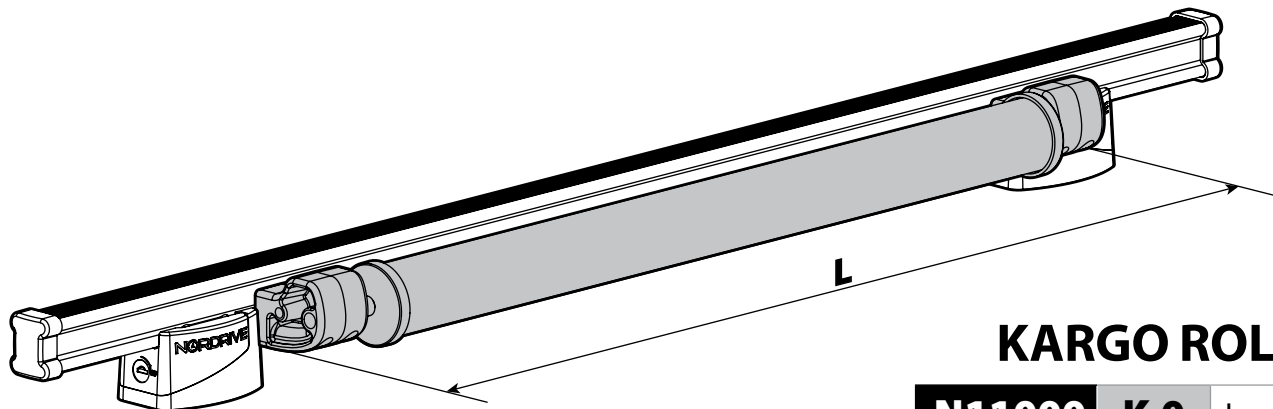


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

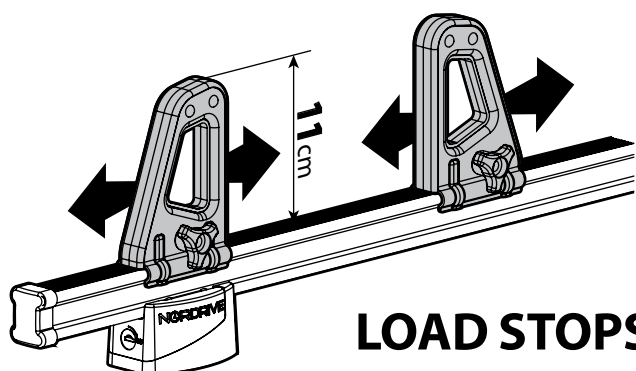


LOAD STOPS

N11001 K-1

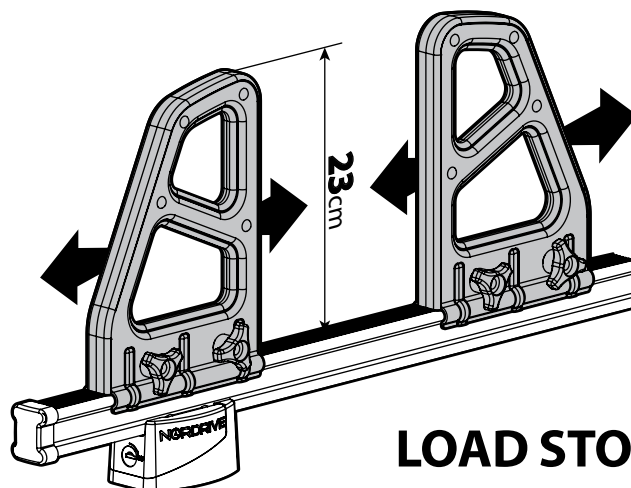

LOAD STOPS

N11002 K-2

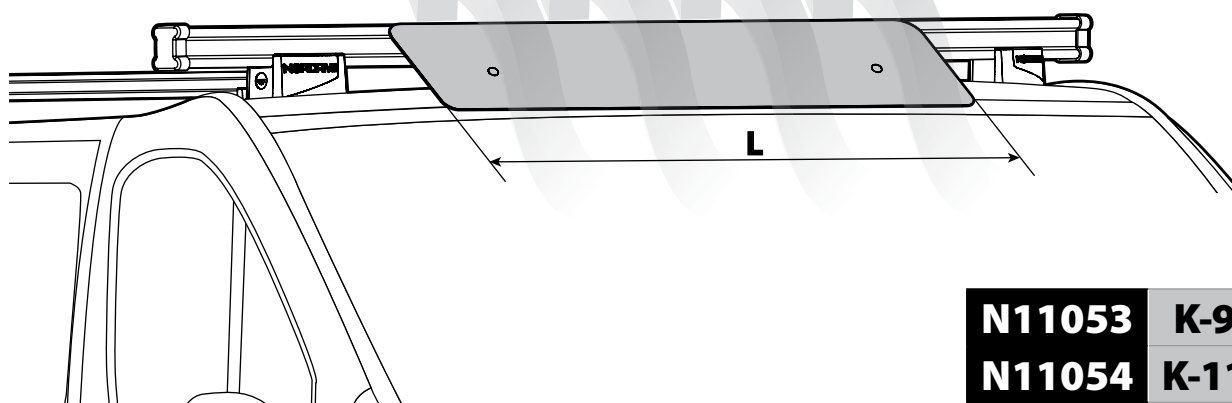


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series

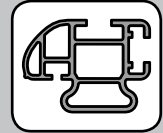


Alluminio / Aluminium

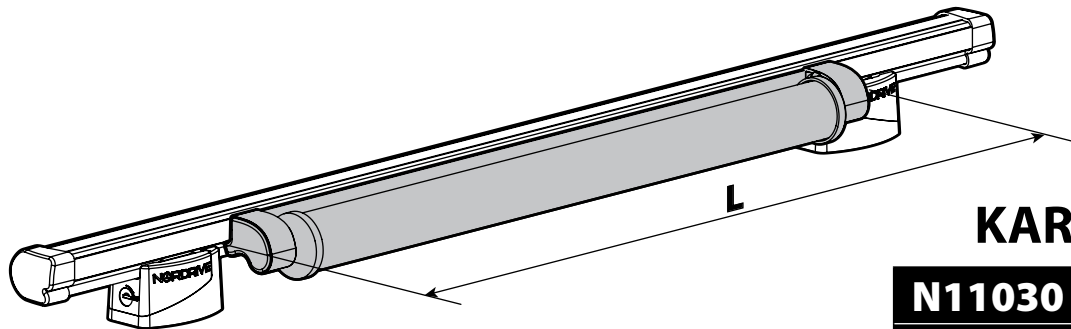


KARGO ROLLER

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

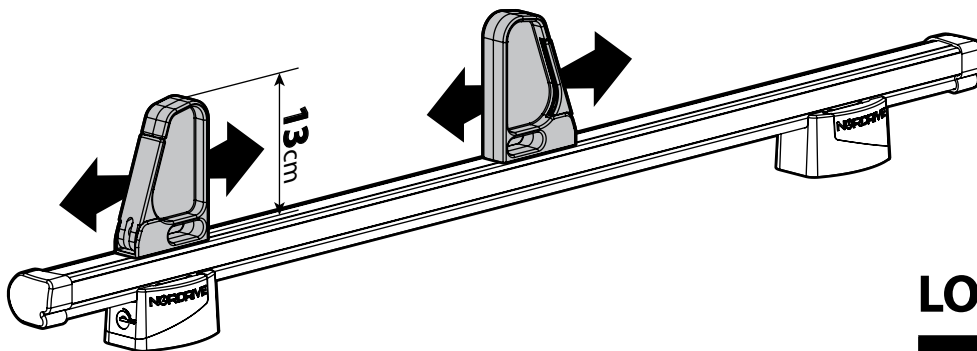


LOAD STOPS

N11031	KP-1
---------------	-------------

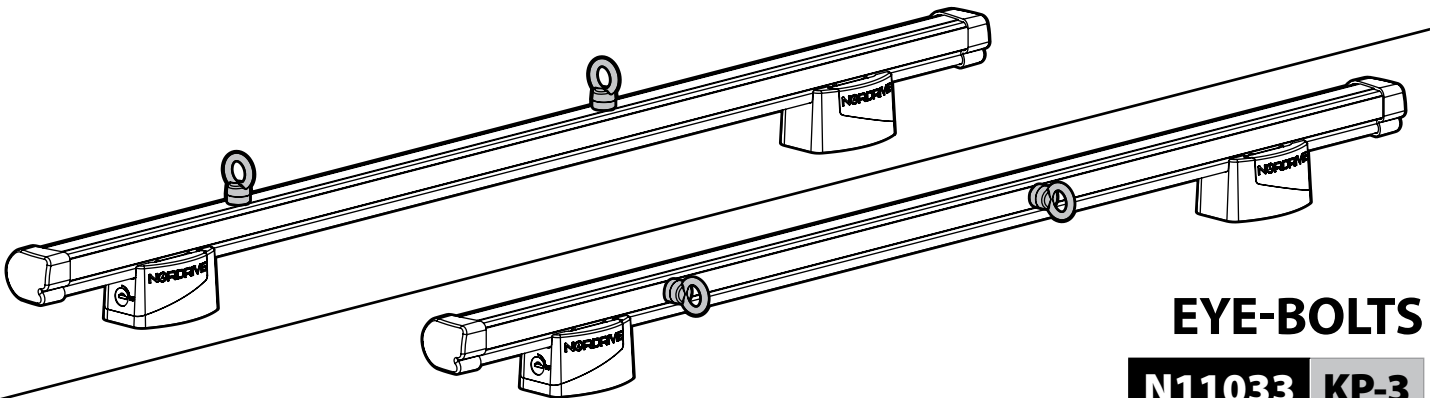

EYE-BOLTS

N11033	KP-3
---------------	-------------

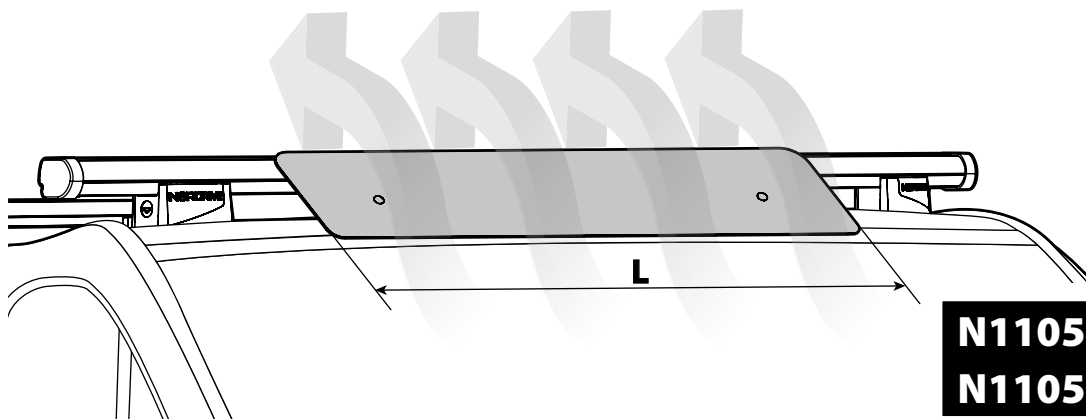

SPOILER

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series

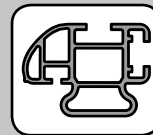

Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

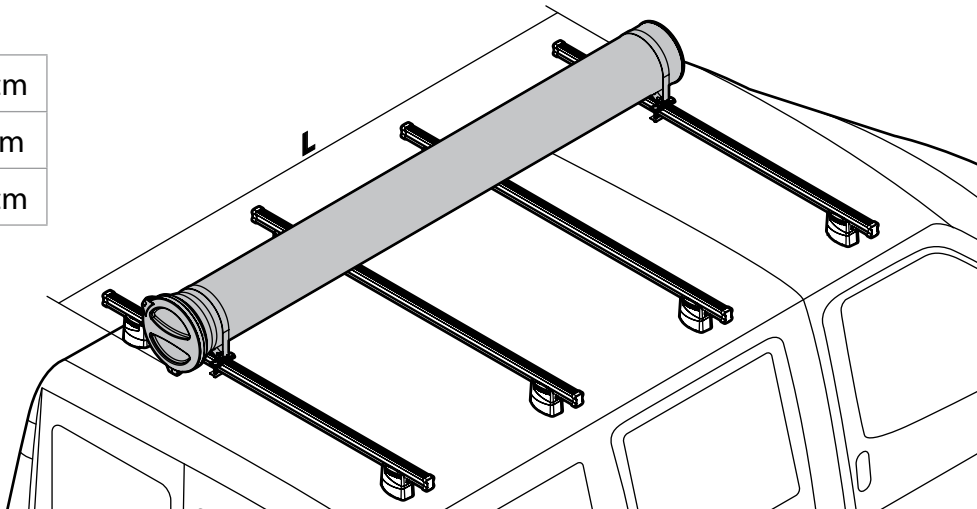


LADDER HOLDER STRAPS

N11065 U-5

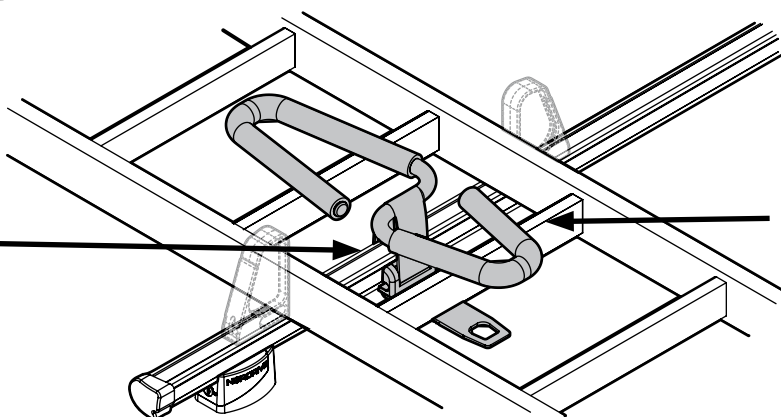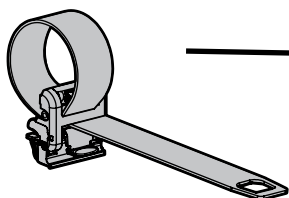

LADDER STEP ADAPTER

N11067 U-6

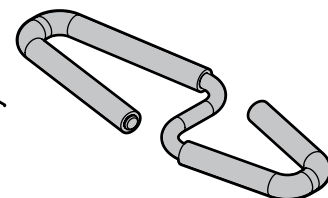

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

