

Art. **N30193**

CITROËN JUMPY

2000 01/07→03/16

FIAT SCUDO

2000 01/07→04/16

PEUGEOT EXPERT


2000 01/07→03/16

PEUGEOT EXPERT TEPEE


2000 01/07→05/16

TOYOTA PROACE

2000 12/13→03/16

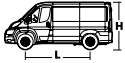


H = 1980mm
L = 3000mm

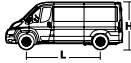

H = 1980mm
L = 3122mm





H = 2204mm
L = 3122mm

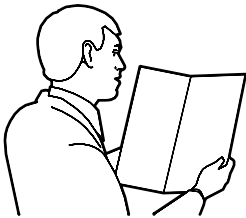



- ISTRUZIONI DI MONTAGGIO
- FITTING INSTRUCTIONS
- MONTAGEANLEITUNG
- INSTRUCTIONS DE MONTAGE
- INSTRUCCIONES DE MONTAJE
- INSTRUÇÕES DE MONTAGEM
- MONTAGE-INSTRUCTIES
- MONTERINGSANVISNING
- ASENNUSOHJE
- PAIGALDUSJUHEND
- STIPRINĀŠANAS INSTRUKCIJA
- PRITVIRTINIMO INSTRUKCIJOS
- INSTRUKCJA MONTAŻU
- Инструкции по установке
- NÁVOD NA MONTÁŽ
- NÁVOD NA MONTÁŽ
- NAVODILA ZA PRITRJEVANJE
- UPUTA ZA SASTAVLJANJE
- A FELSZERELÉS MÓDJA
- Οδηγίες συναρμολόγησης
- MONTAJ TALIMATLARL
- ИНСТРУКЦИИ ЗА МОНТАЖ
- UPUTSTVA ZA MONTAŽU

KIT x6

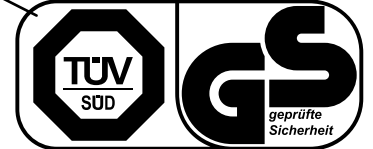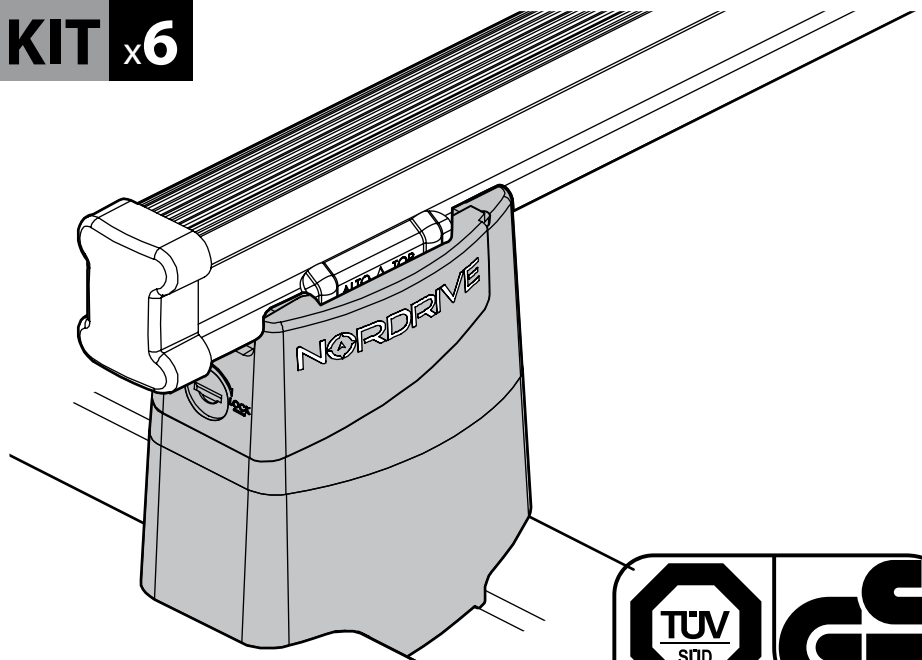

**NORDRIVE
KARGO SERIES**


- ADATTO PER
- SUITABLE FOR
- INDIQUÉ POUR
- GEEIGNET FÜR
- ADECUADA PARA

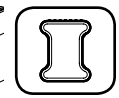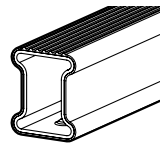



Kargo
ACCIAIO
Steel

- BARRE KARGO
- KARGO BARS
- BARRES KARGO
- DACH-LASTENTRÄGER KARGO
- BARRES KARGO

150cm

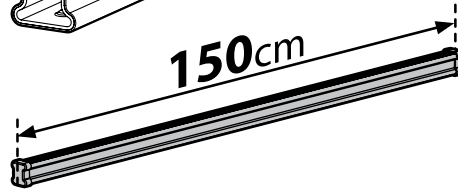


Art. **N10010** x3

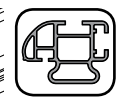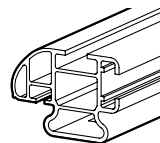


Kargo-Plus
ALLUMINIO
Aluminium

- BARRE KARGO-PLUS
- KARGO-PLUS BARS
- BARRES KARGO-PLUS
- DACH-LASTENTRÄGER KARGO-PLUS
- BARRES KARGO-PLUS

150cm

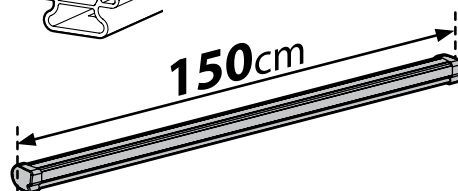


Art. **N10040** x3

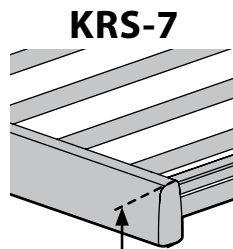

KRS-7

7cm

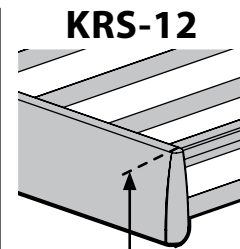


KRS-12

12cm

- CESTE PORTATUTTO KRS-7 / KRS-12
- KRS-7 / KRS-12 VAN ROOF RACKS
- GALERIE KRS-7 / KRS-12
- DACHKÖRBEIN KRS-7 / KRS-12
- BACAS KRS-7 / KRS-12

NORDRIVE®









TRANSPORT SOLUTIONS













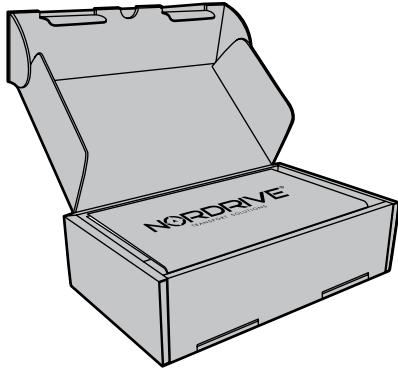




NORDRIVE[®]

TRANSPORT SOLUTIONS

Art. **N30193**

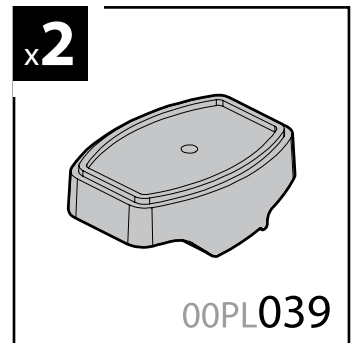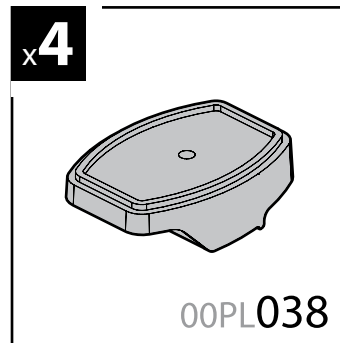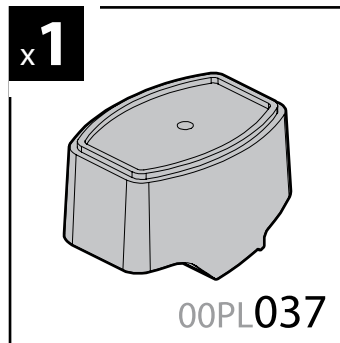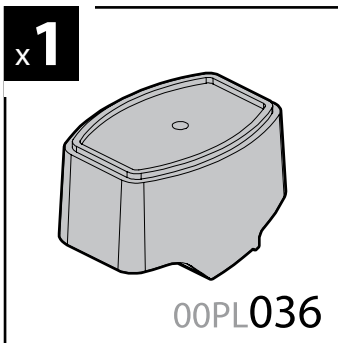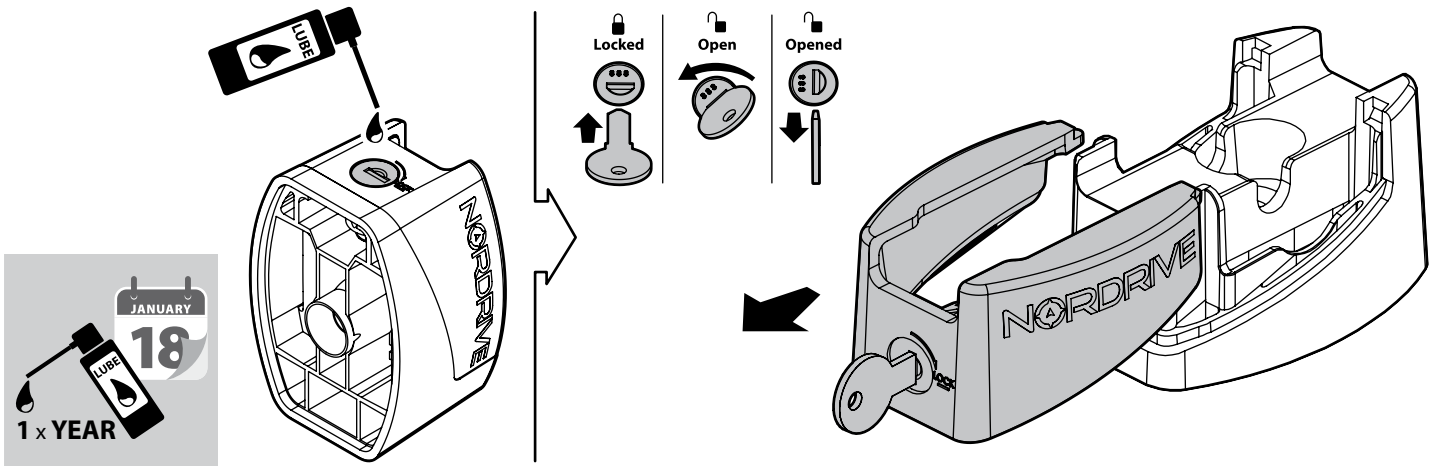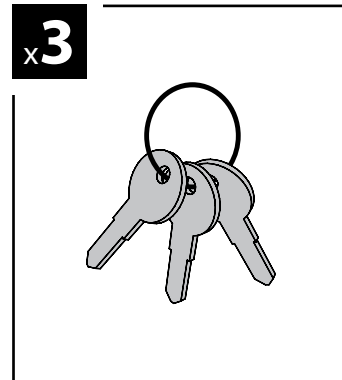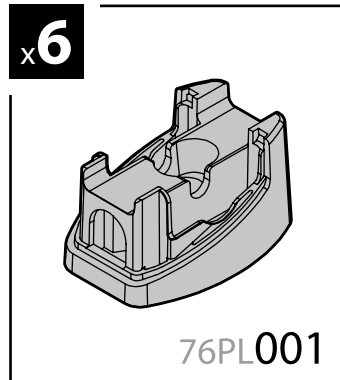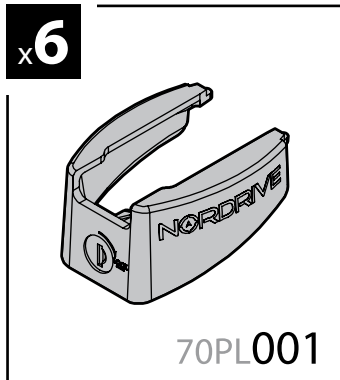

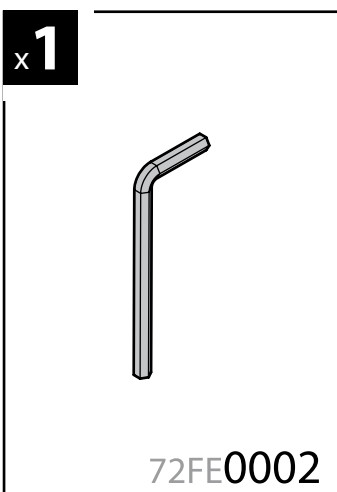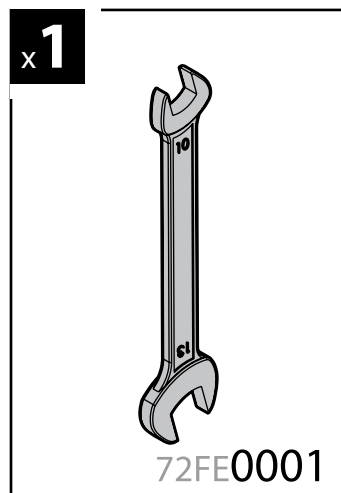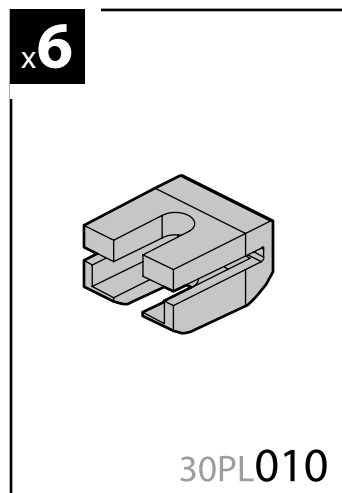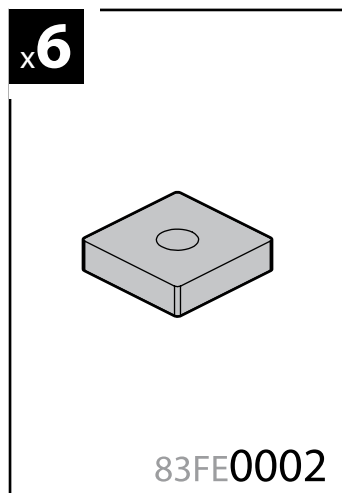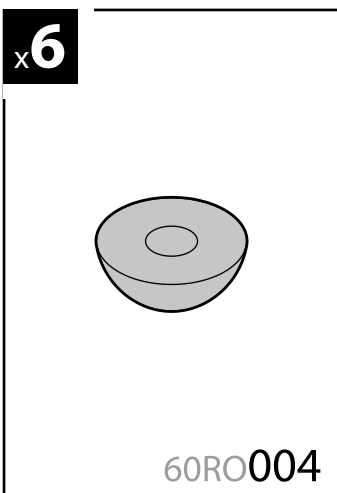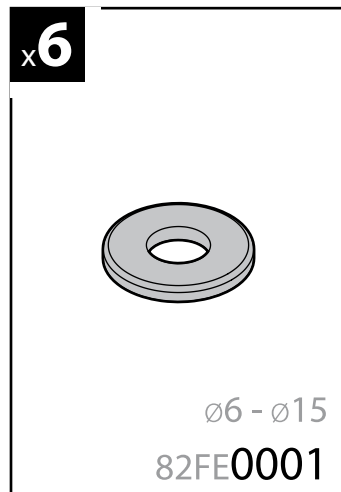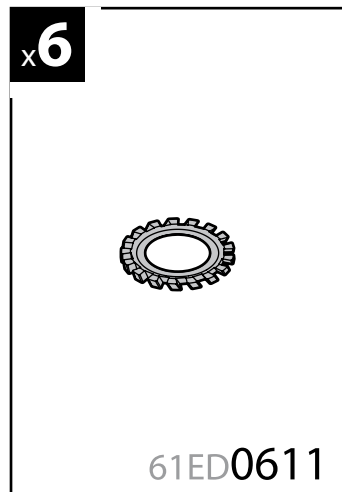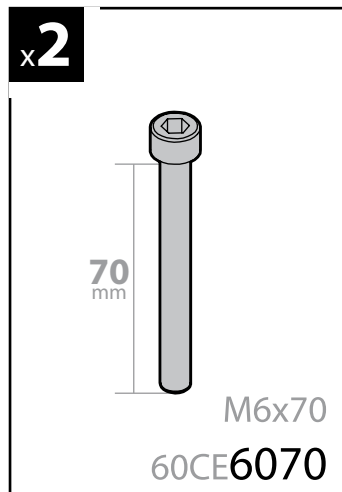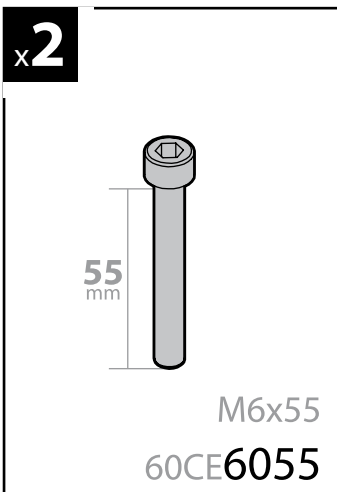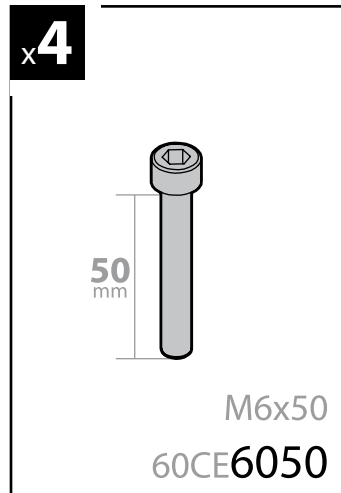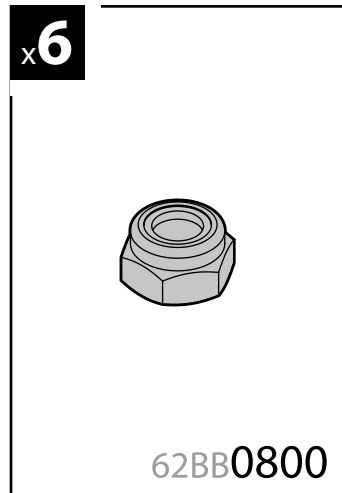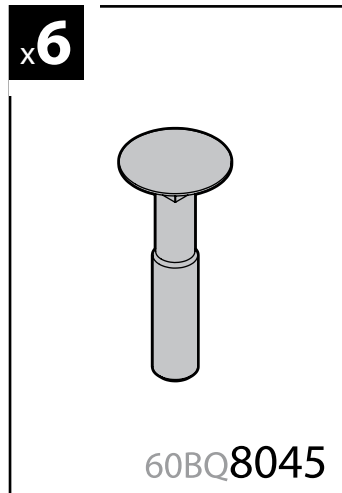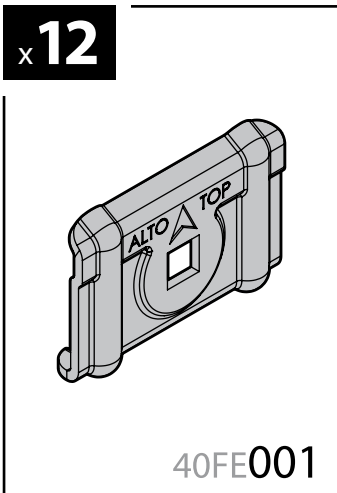





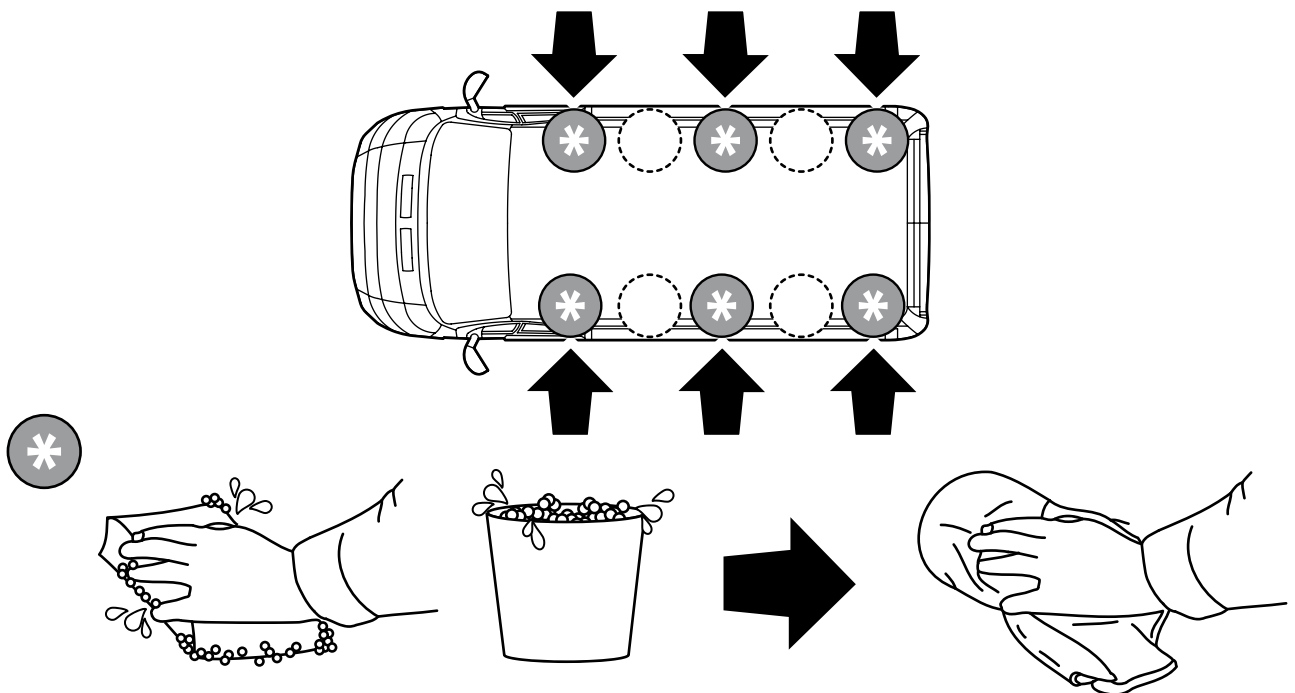
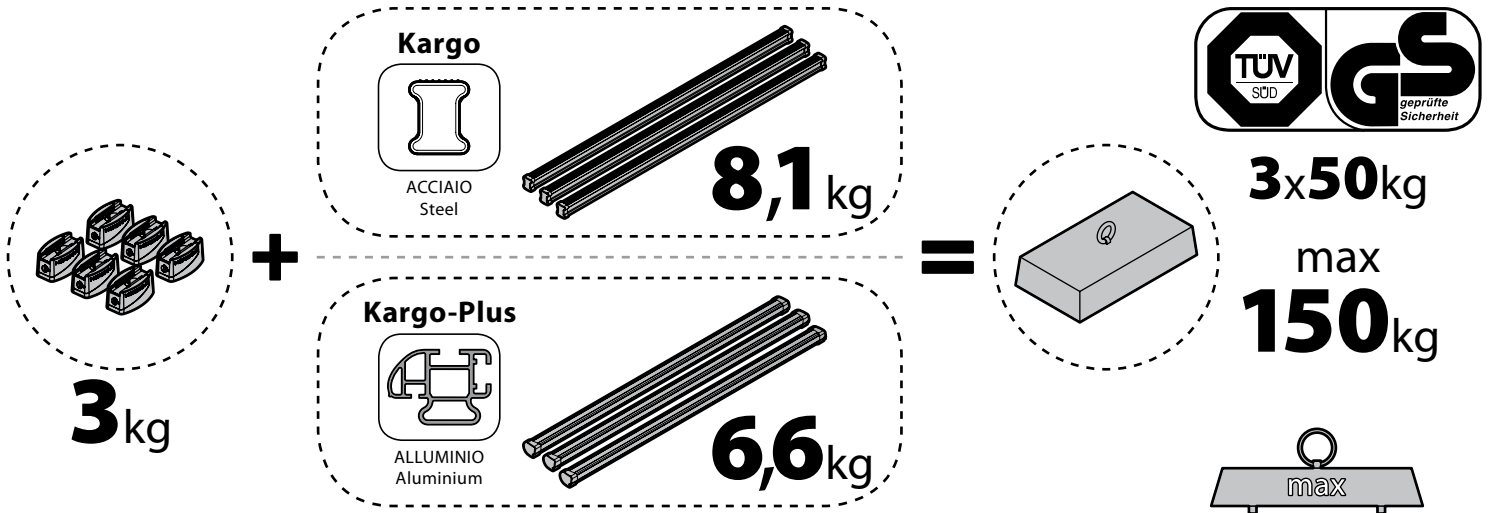


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING



(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRIŅŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ



(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγίες συναρμολόγησης
 (TR) MONTAJ TALIMATLARI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

1

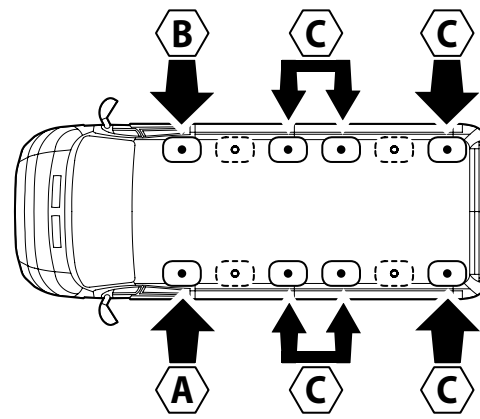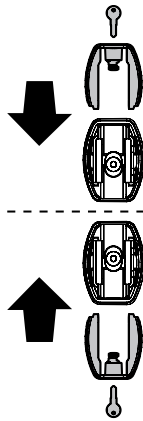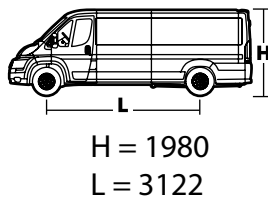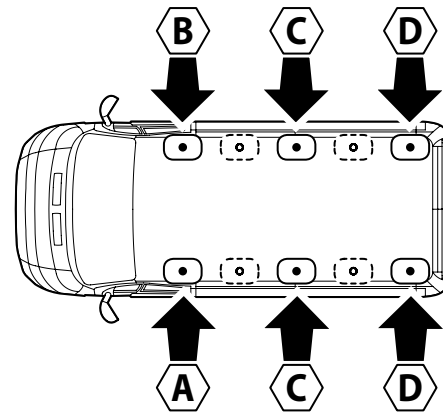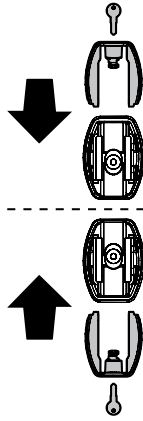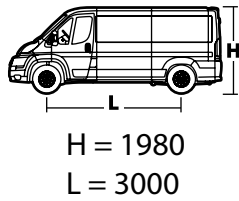

2

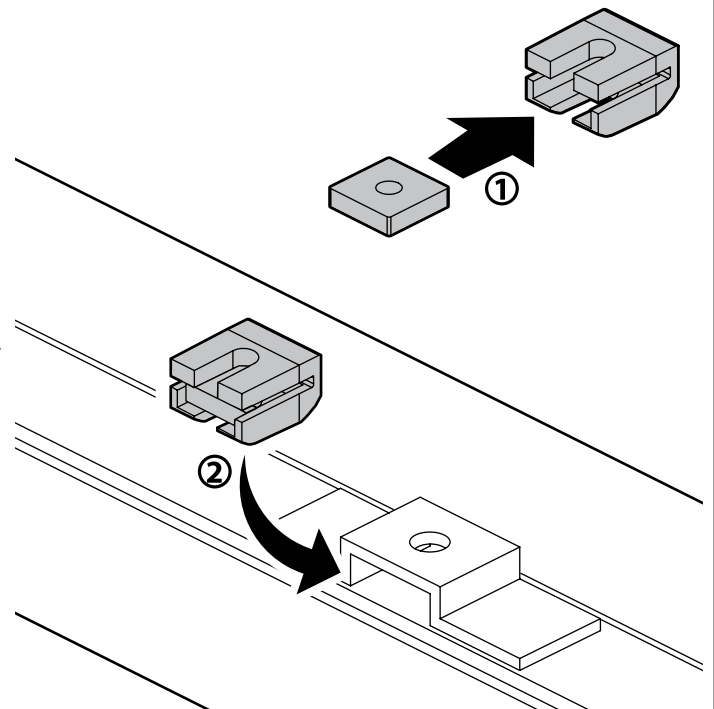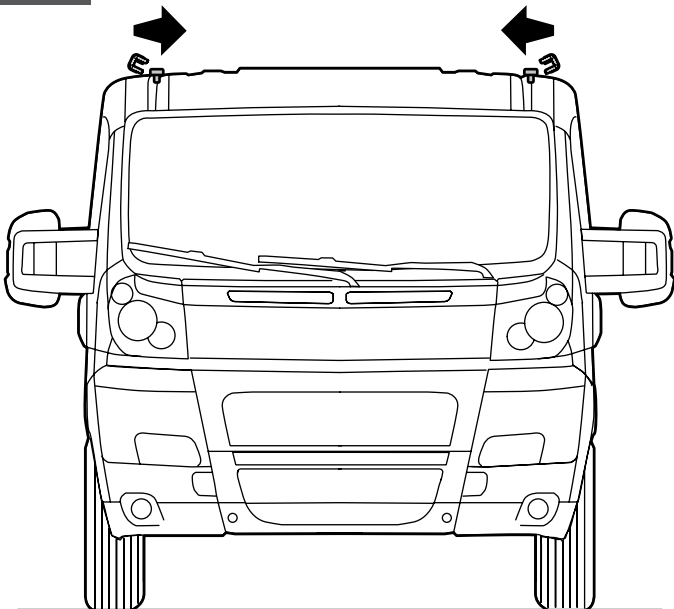

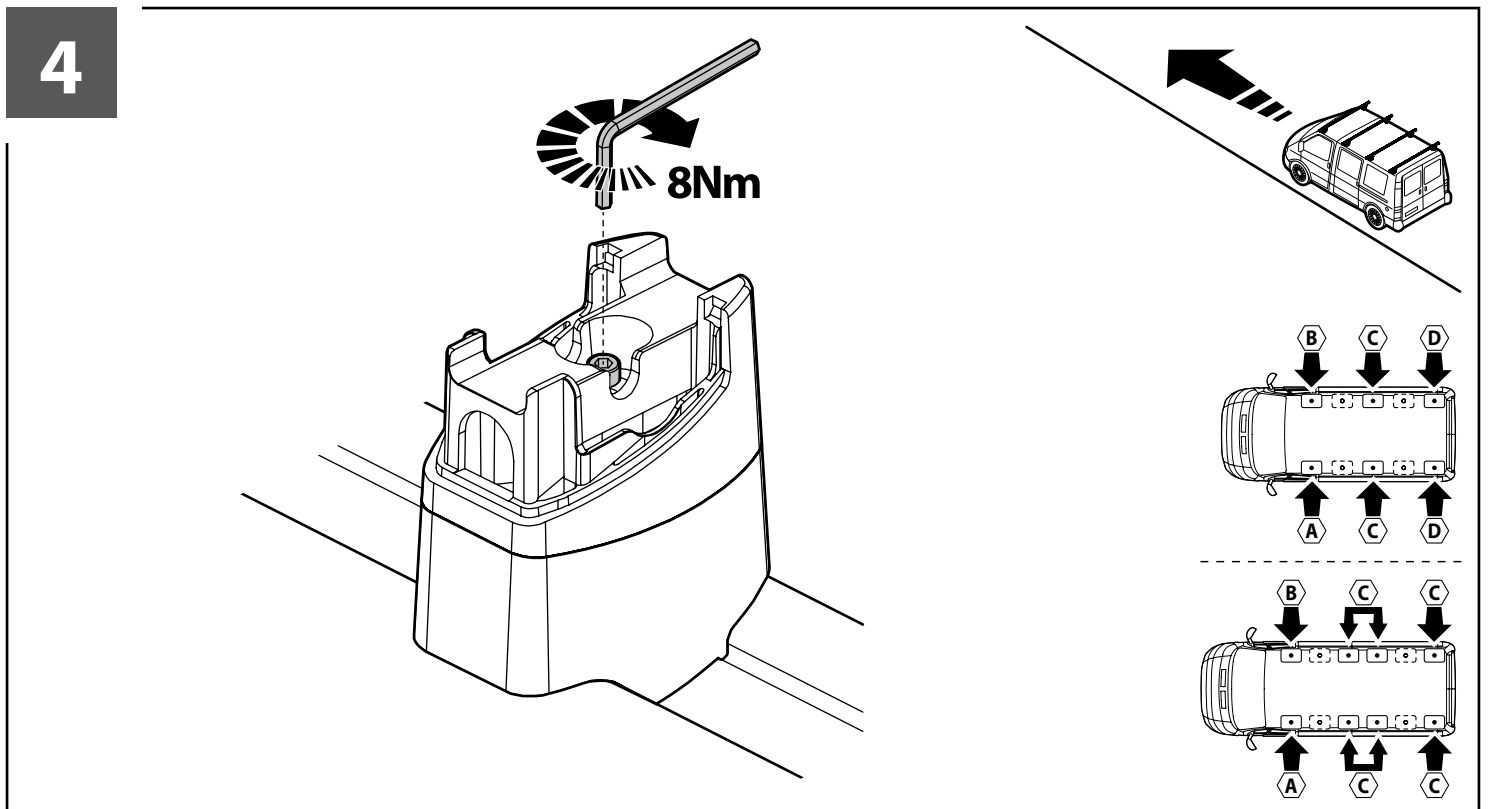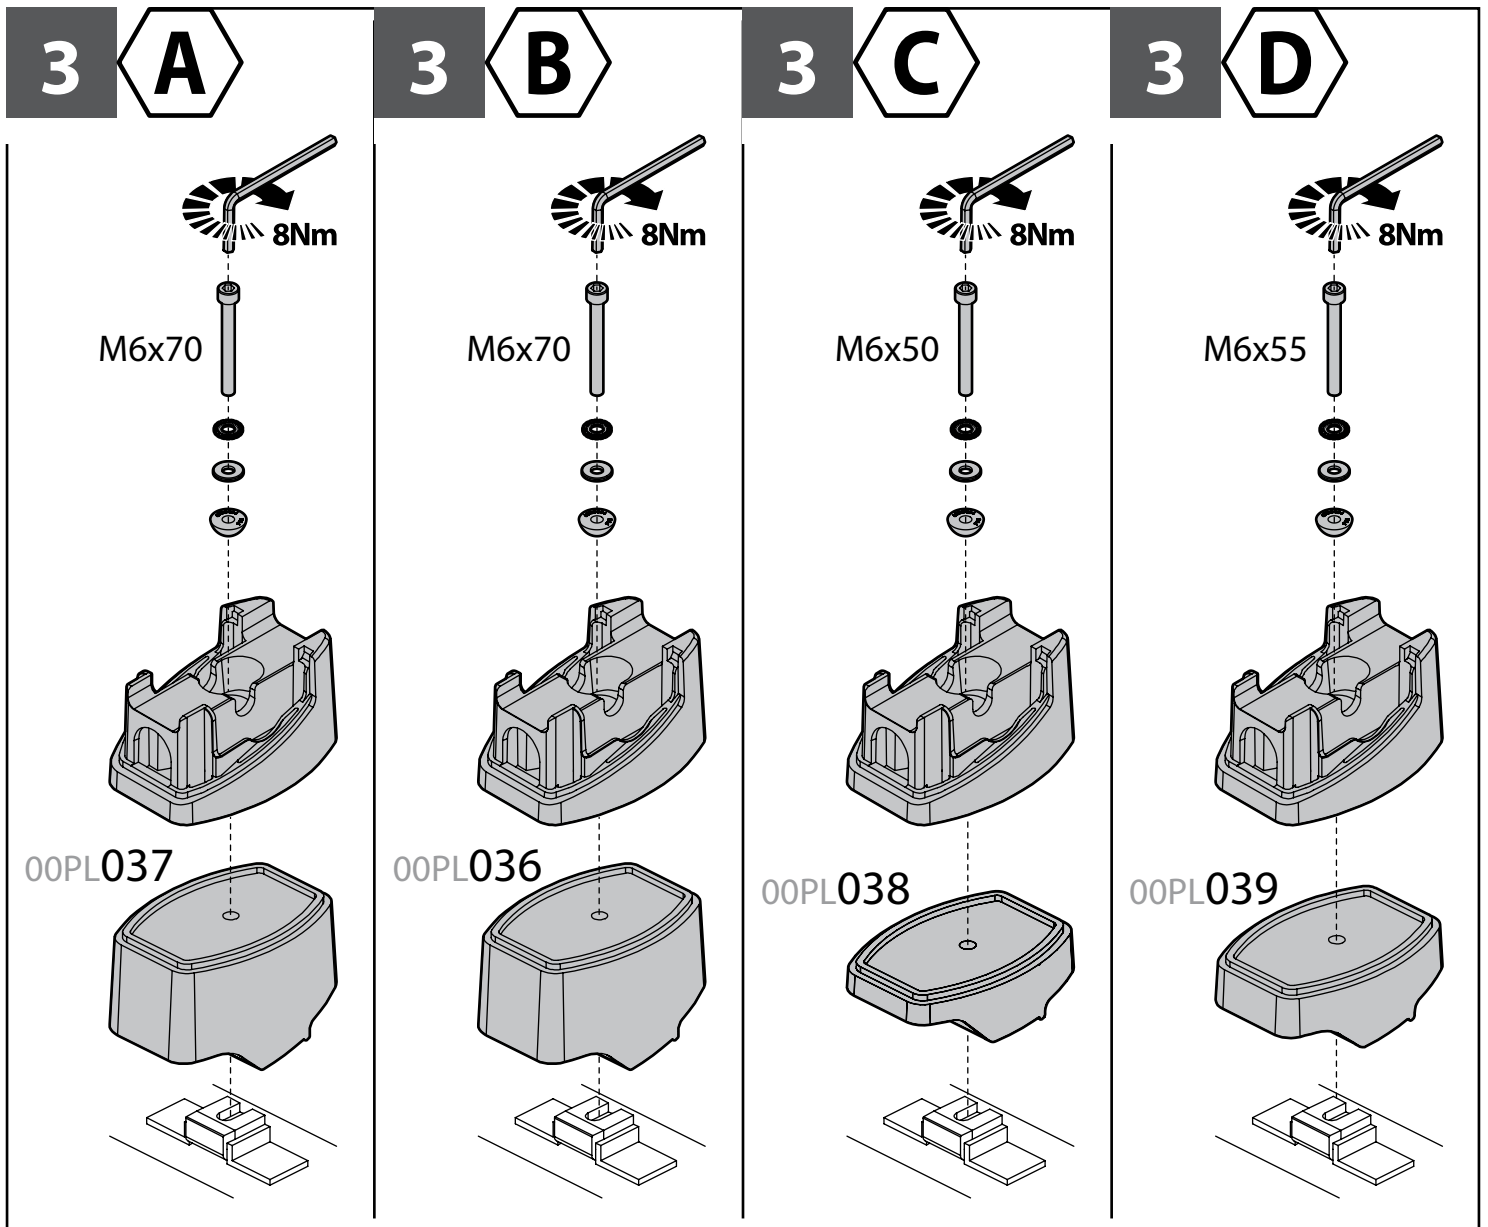




ATTENZIONE WARNING



Kargo

A

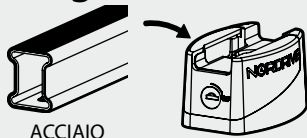


ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

Kargo-Plus


B

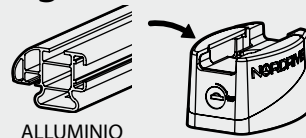



ALLUMINIO
Aluminium

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE



OK ✓

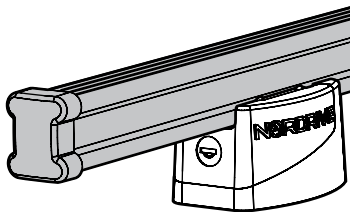




NO ✗

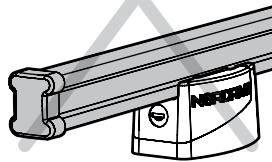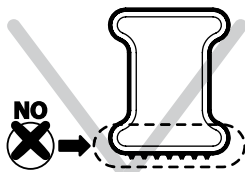


OK ✓

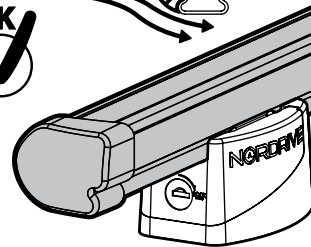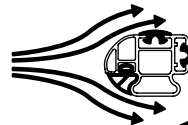



NO ✗

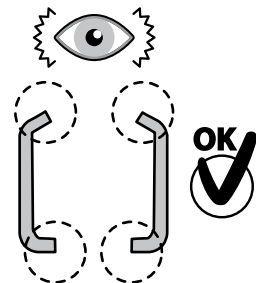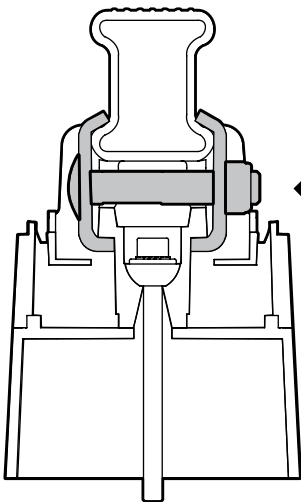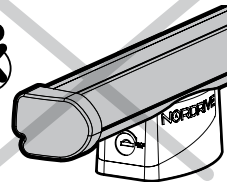


OK ✓

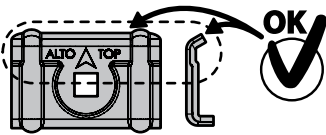


OK ✓

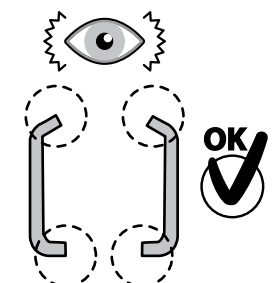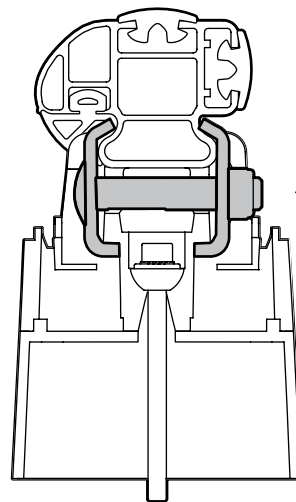


OK ✓

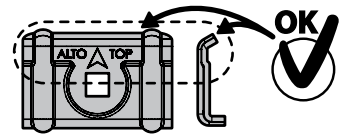


OK ✓

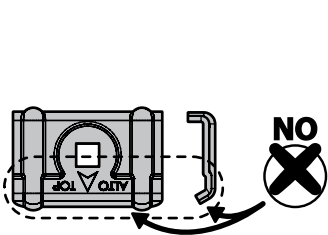


NO ✗

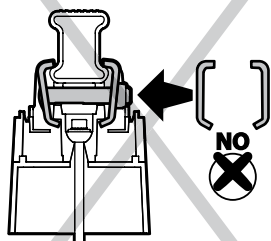

NO ✗

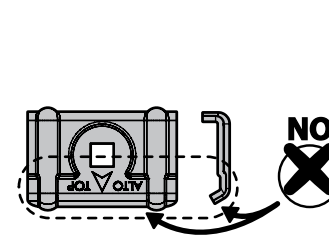


NO ✗

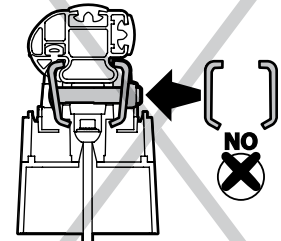


NO ✗

5

A

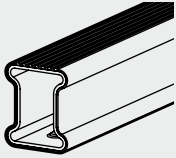

Kargo



ACCIAIO
Steel


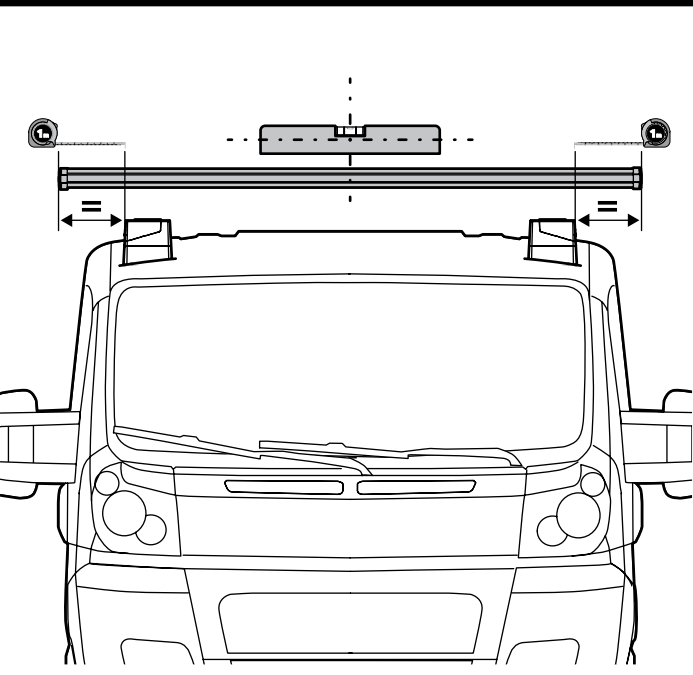



Diagram showing the Kargo steel bar being installed on a vehicle roof. The bar is positioned across the roof rails, and the diagram indicates the correct placement and alignment.

B



Kargo-Plus

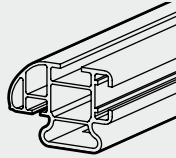

ALLUMINIO
Aluminium

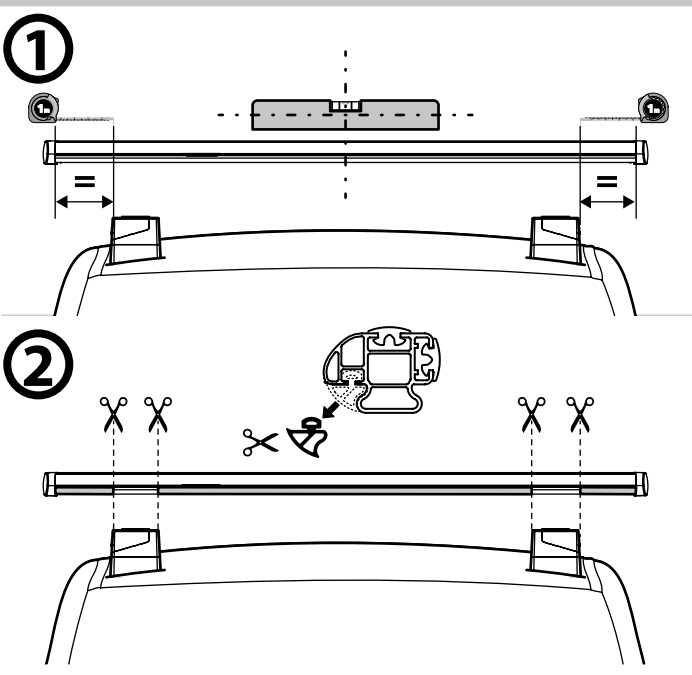


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. Step 1 shows the bar being placed on the roof rails. Step 2 shows the bar being secured with clips, with scissors indicating where to cut the clips.

6

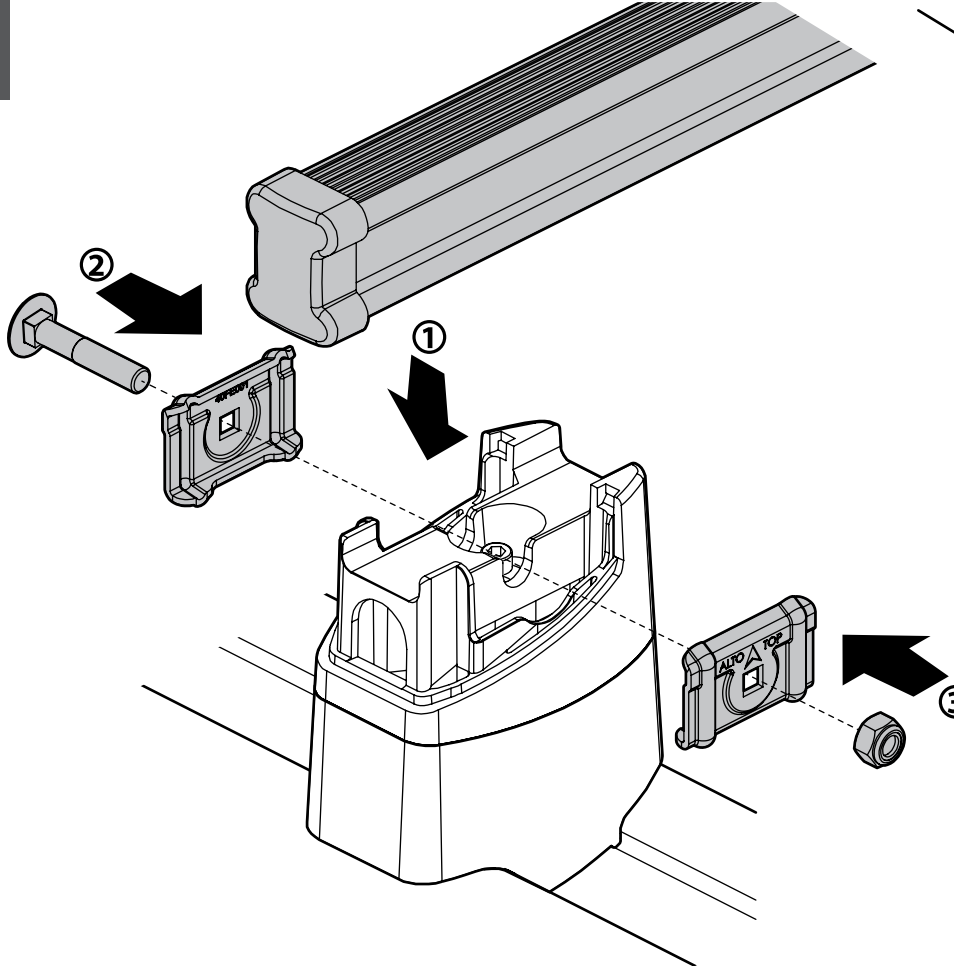


Diagram showing the detailed assembly of the Kargo bar. Step 1 shows the bar being inserted into the base. Step 2 shows a bolt being inserted into the bar. Step 3 shows a cap being placed over the bolt. The diagram also shows the bar being installed on a vehicle roof, with arrows indicating the direction of installation.



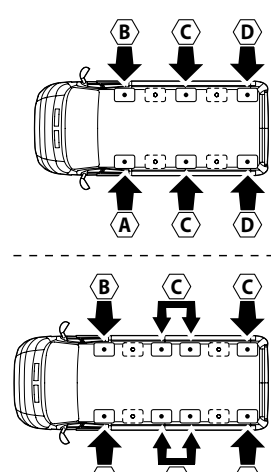


Diagram showing the bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment of the bar on the roof rails. The diagram also shows the bar being installed on a vehicle roof, with arrows indicating the direction of installation.


7

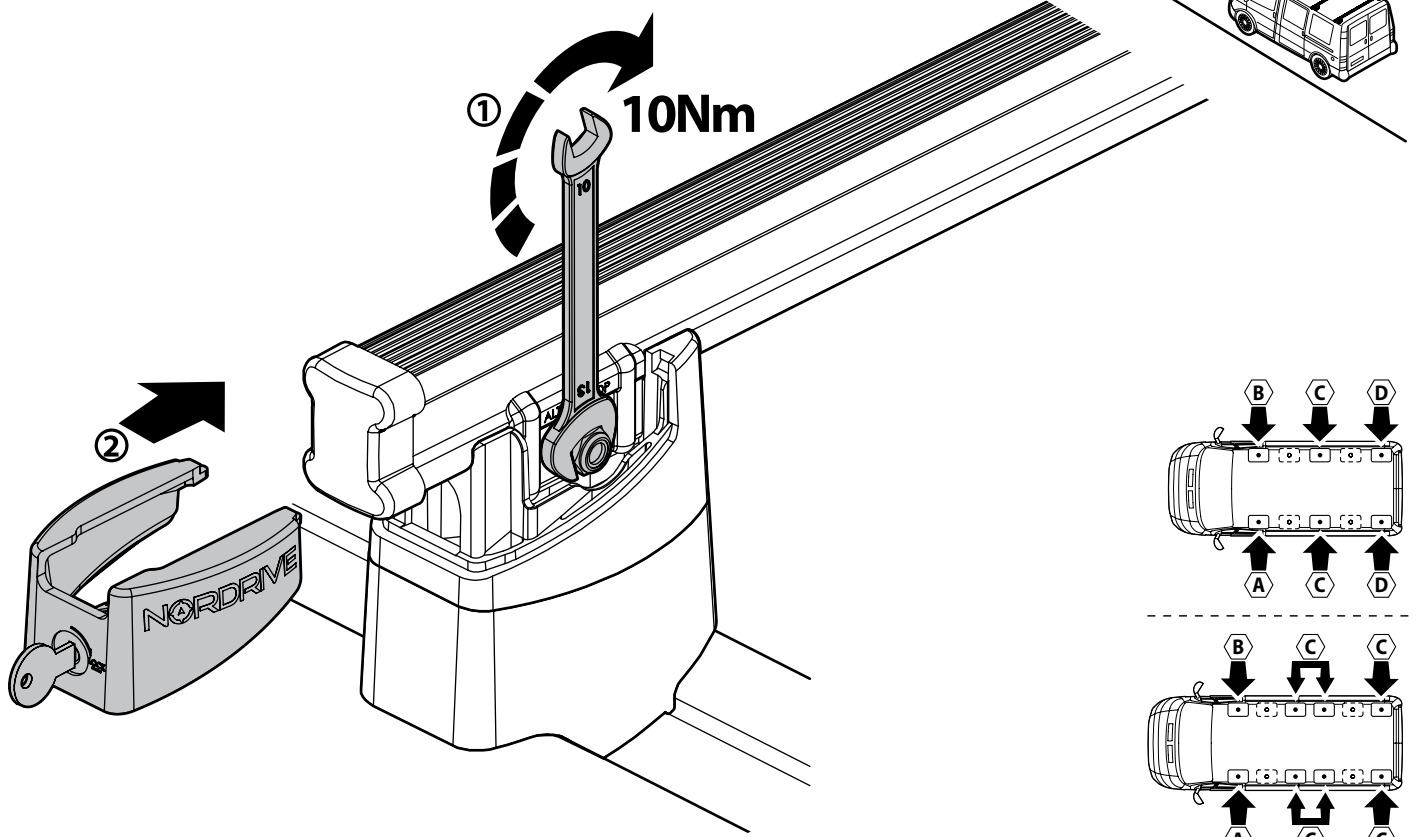


8

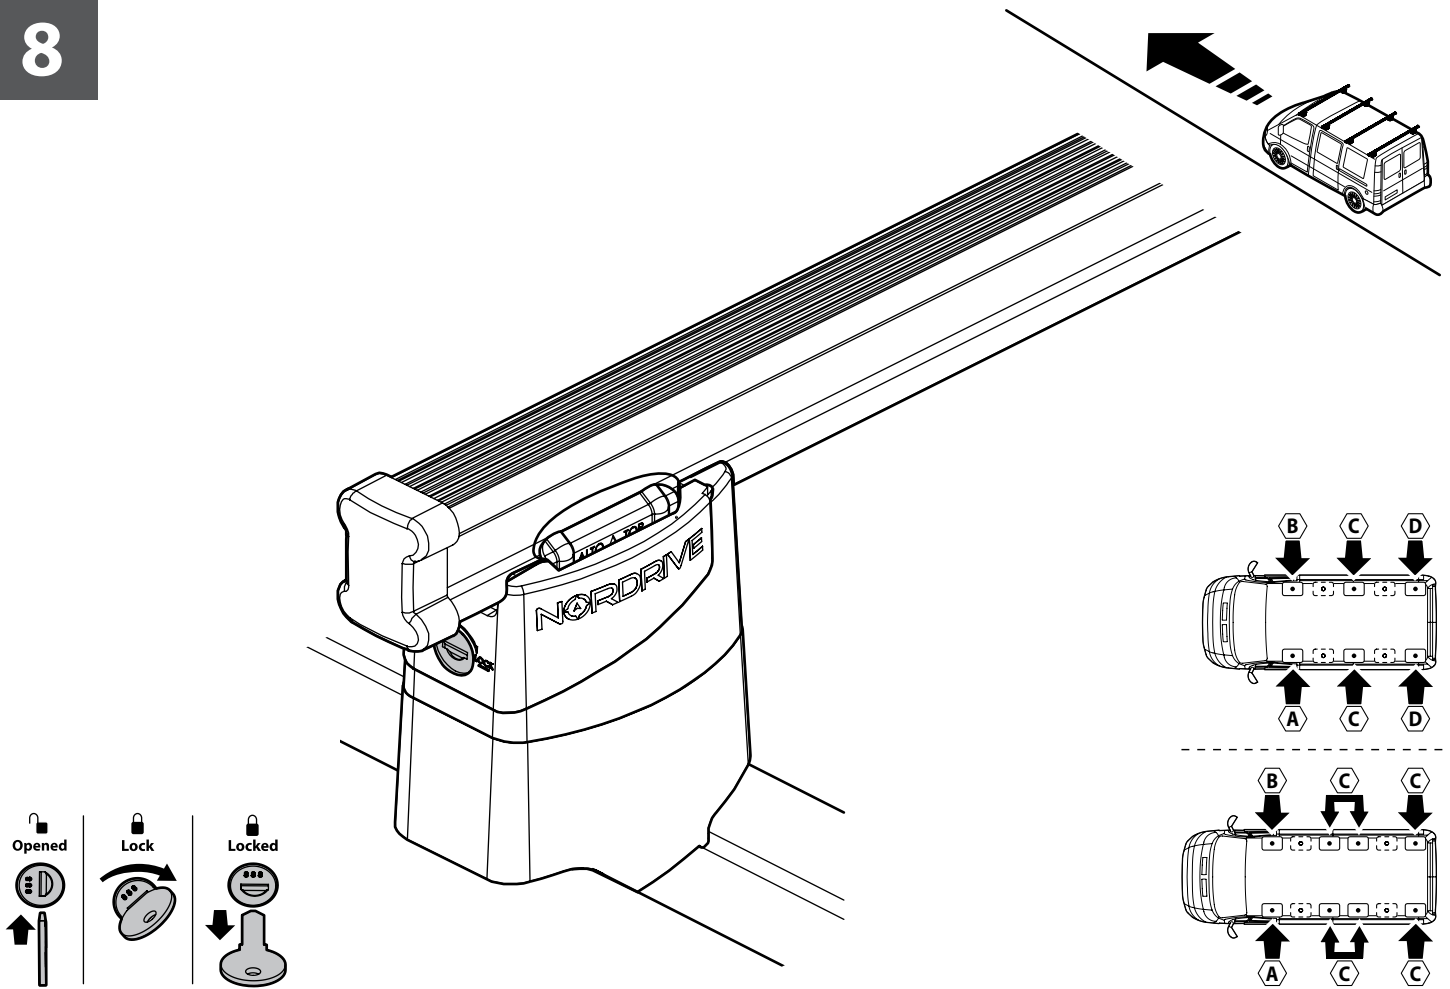

Kargo series

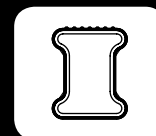

Acciaio / Steel

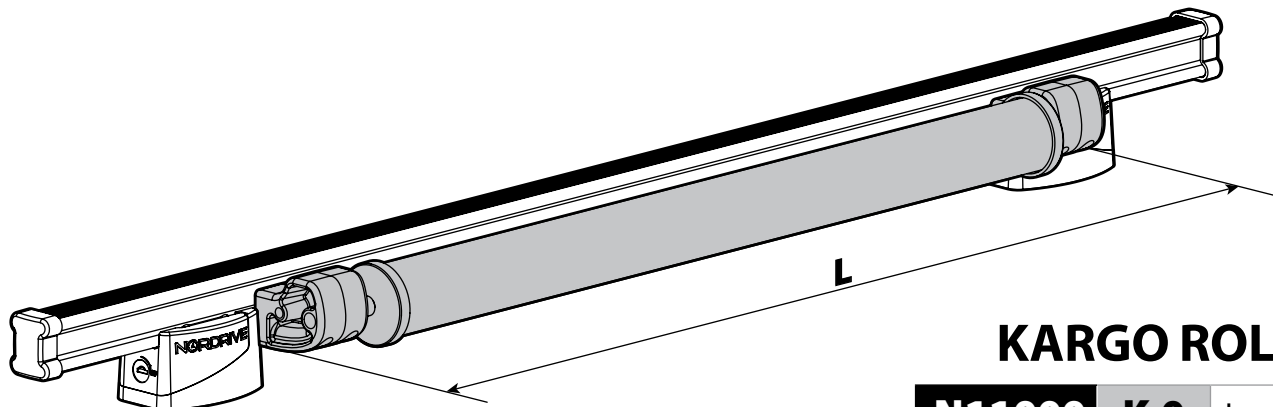

KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm




LOAD STOPS

N11001 K-1



LOAD STOPS

N11002 K-2

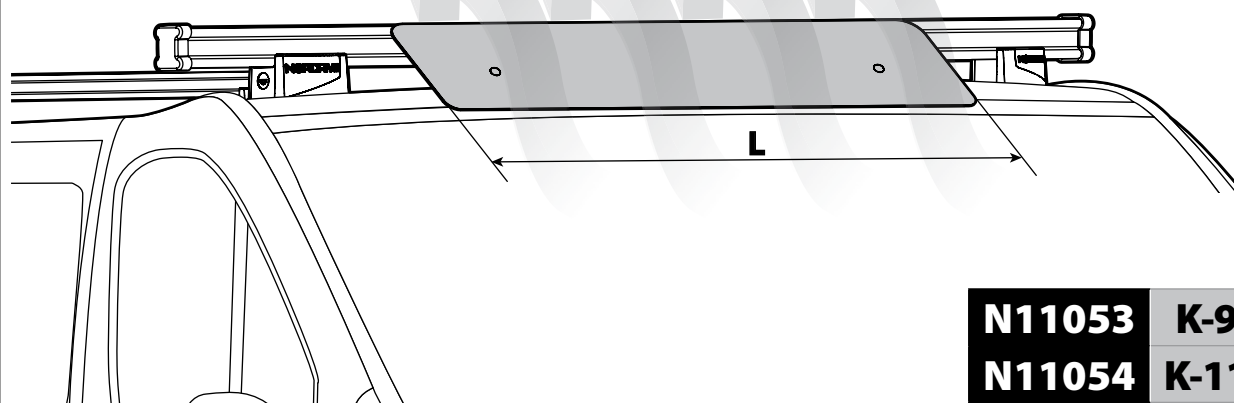


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series

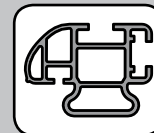


Alluminio / Aluminium

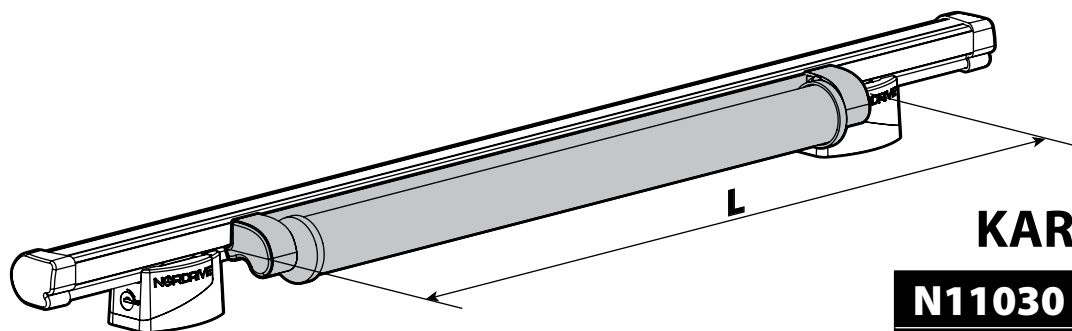

KARGO ROLLER


N11030 KP-0 L = 64 cm

N11034 KP-7 L = 96 cm

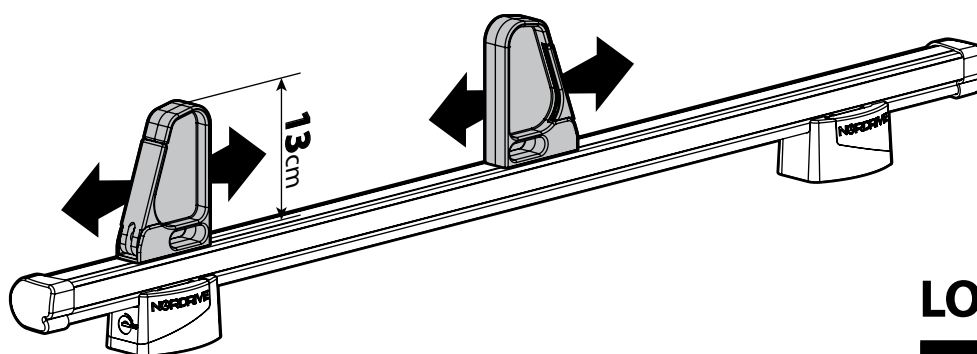


LOAD STOPS

N11031 KP-1

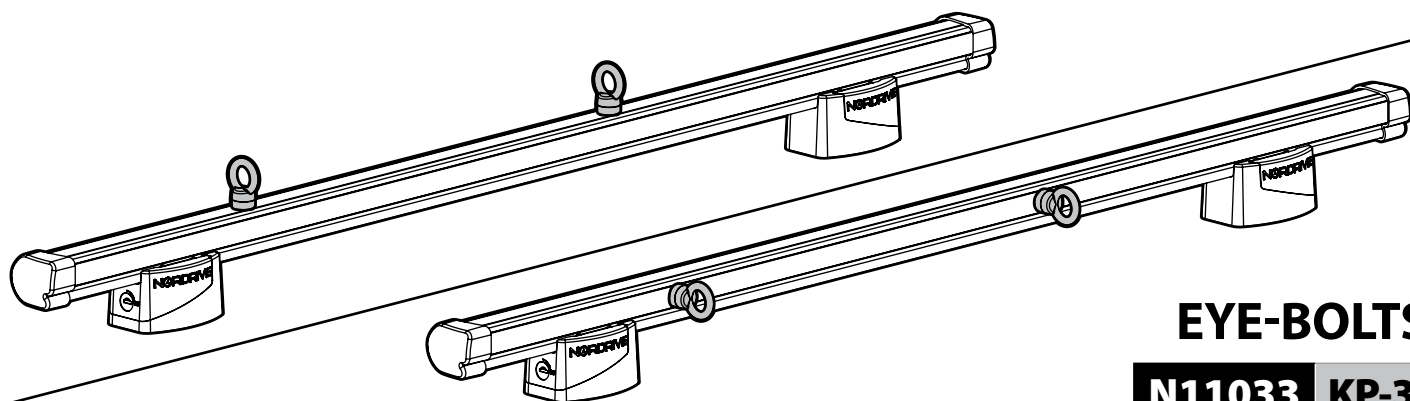

EYE-BOLTS

N11033 KP-3

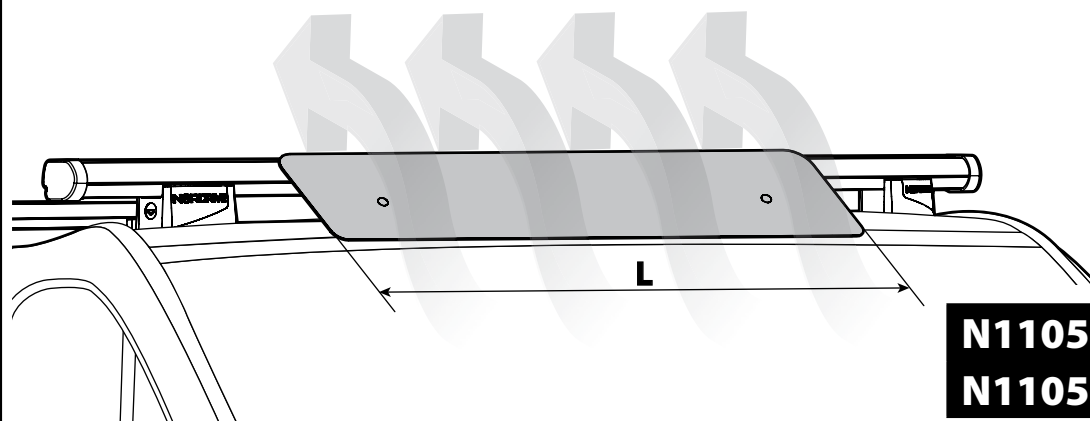

SPOILER

N11057 KP-9 L = 95 cm

N11058 KP-11 L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel

Kargo-Plus
series

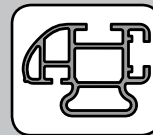


Alluminio / Aluminium

KARGO-TUBE

N11050 T200 L = 205 cm



N11051 T300 L = 305 cm

N11052 T400 L = 405 cm

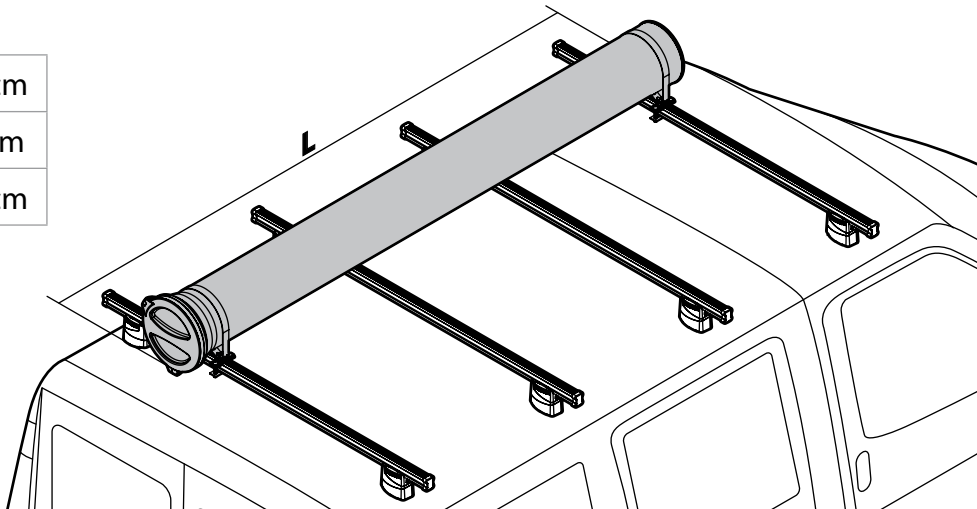


LADDER HOLDER STRAPS

N11065 U-5

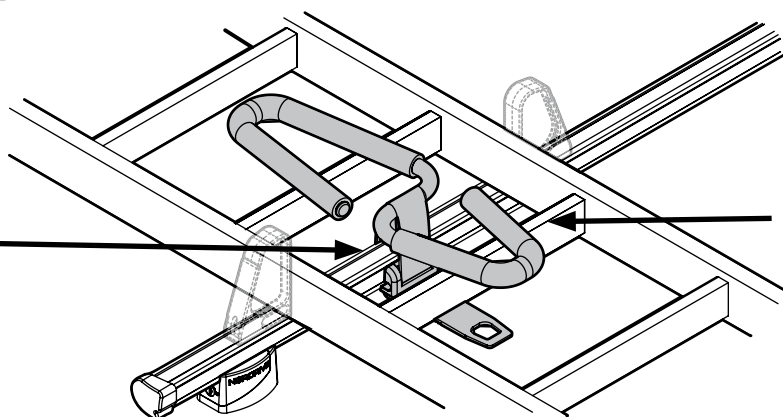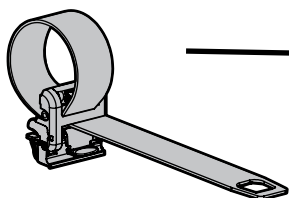

LADDER STEP ADAPTER


N11067 U-6

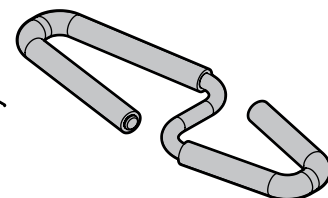

EXTENSION ROLLER

N11020 U-0 L = 64 cm

N11021 U-7 L = 96 cm

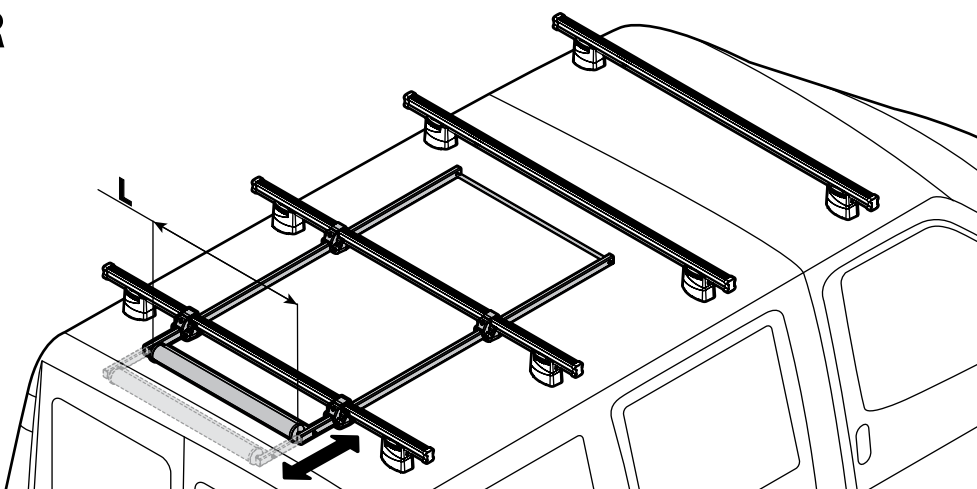

NORDRIVE[®]
TRANSPORT SOLUTIONS

NORDRIVE[®] is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it

91CA0354 r06