


Art. **N30242**

**OPEL COMBO**

10/01→03/12

(no OPEL COMBO TOUR)

**KIT x4**

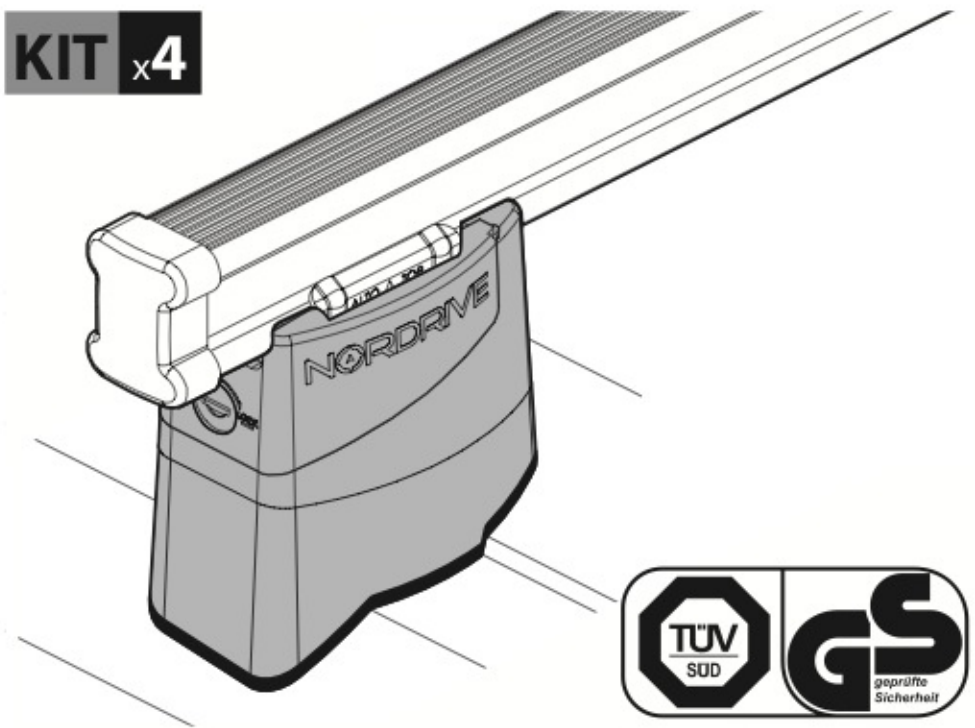

- ① ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE  
KARGO SERIES**

- ① ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓙ MONTERINGSANVISNING
- Ⓚ ASENNUSOHJE
- Ⓛ PAIGALDUSJUHEND
- Ⓝ STIPRIŅĀŠANAS INSTRUKCIJA
- Ⓟ PRITVIRTINIMO INSTRUKCIJOS
- Ⓠ INSTRUKCJA MONTAŻU
- Ⓡ Инструкции по установке
- Ⓢ NÁVOD NA MONTÁŽ
- Ⓣ NÁVOD NA MONTÁŽ
- Ⓚ NAVODILA ZA PRITRJEVANJE
- Ⓛ UPUTA ZA SASTAVLJANJE
- Ⓝ A FELSZERELÉS MÓDJA
- Ⓖ Οδηγίες συναρμολόγησης
- Ⓡ MONTAJ TALIMATLARL
- Ⓢ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓣ UPUTSTVA ZA MONTAŽU



**Kargo**



ACCIAIO  
Steel


- ① BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO



Art. **N10005** x2



**Kargo-Plus**

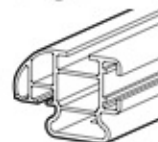

ALLUMINIO  
Aluminium

- ① BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS



Art. **N10035** x2








**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS



# NORDRIVE®

TRANSPORT SOLUTIONS

Art. **N30242**

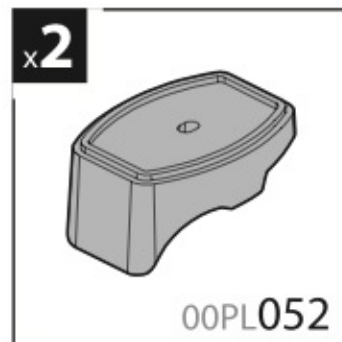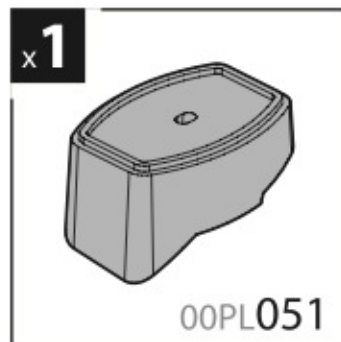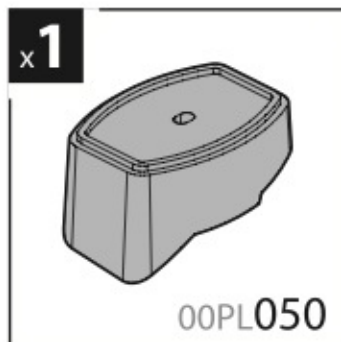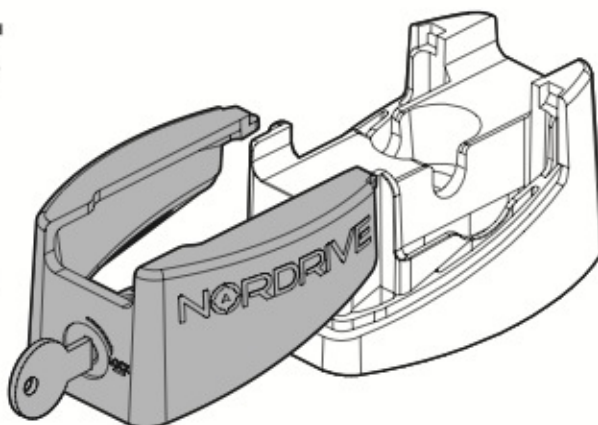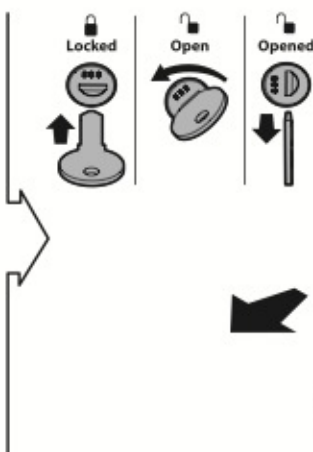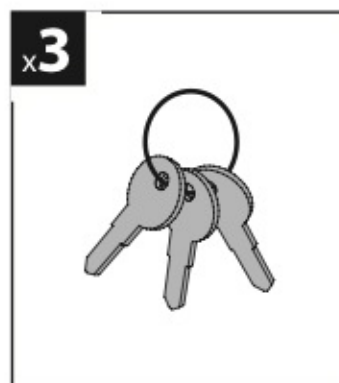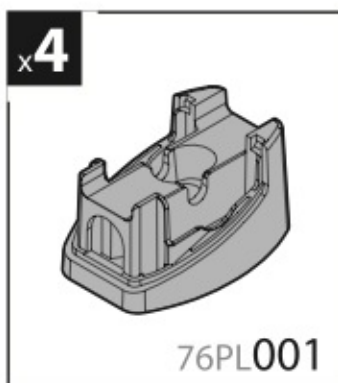


x8



40FE001

x4

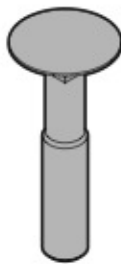


60BQ8045

x4




62BB0800

x2

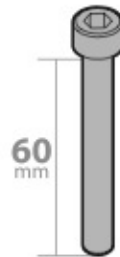


M6x60  
60CE6060

x2

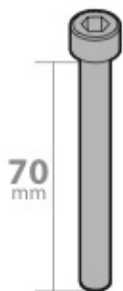

M6x70  
60CE6070

x4




62BN0600

x8



61ED0611

x8




ø6 - ø15  
82FE0001

x4




66OR15CN

x4

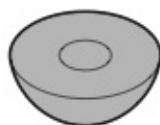

60RO004

x1





72FE0001

x1



72FE0002

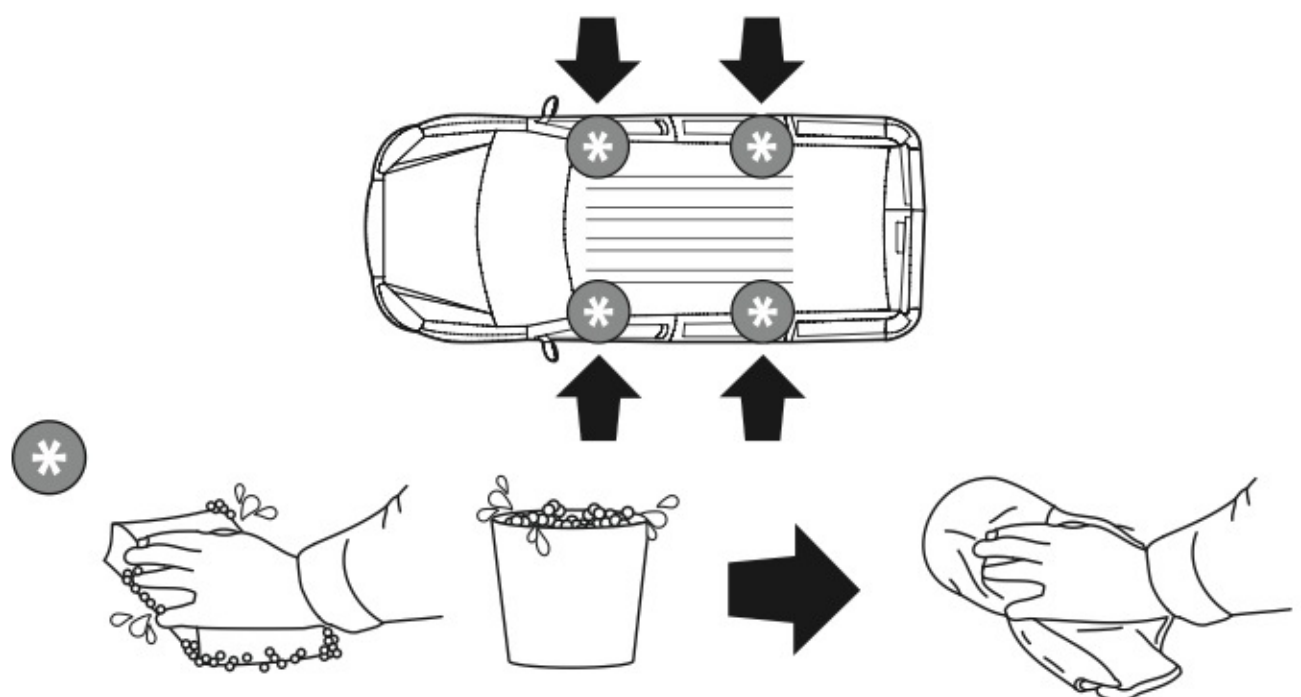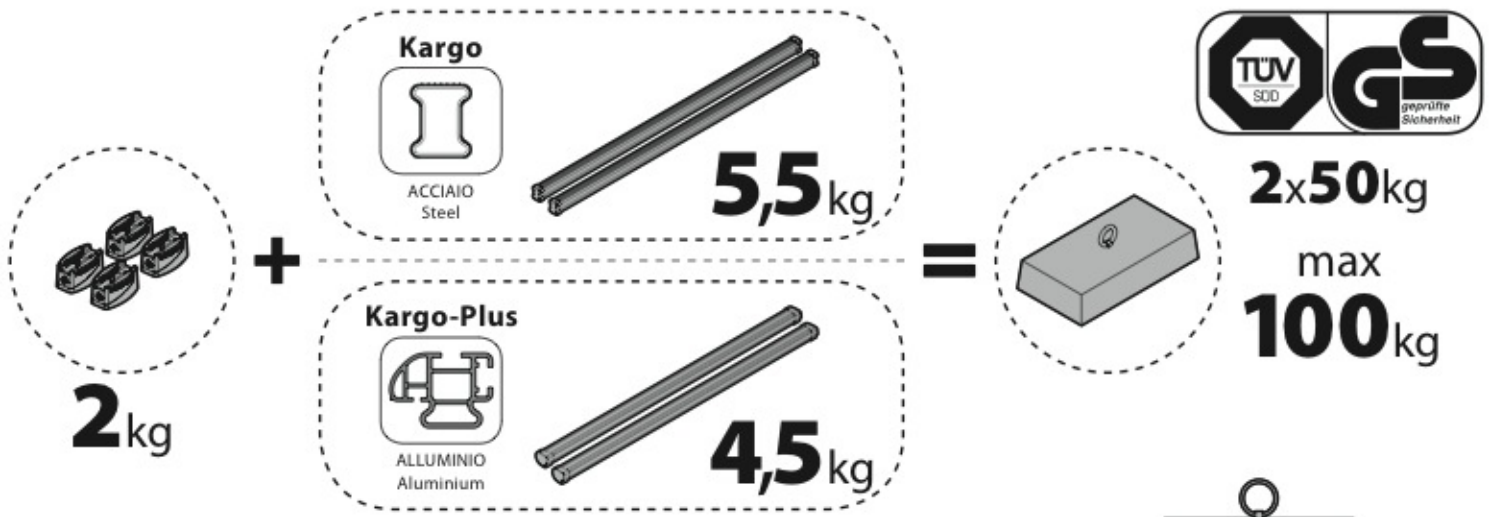





(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) INSTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγία συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU

1

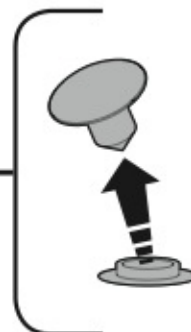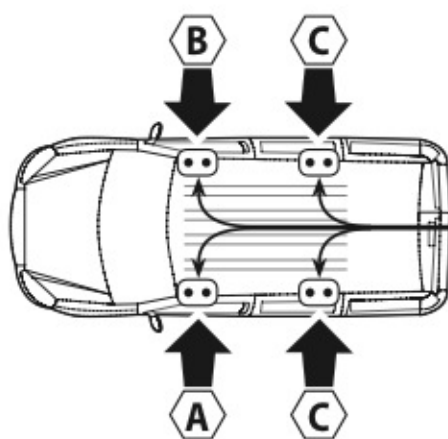


2

A

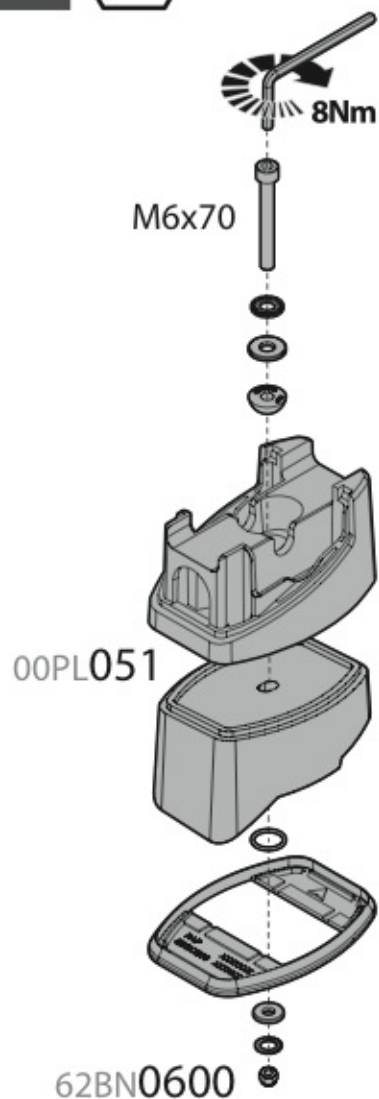


2

B


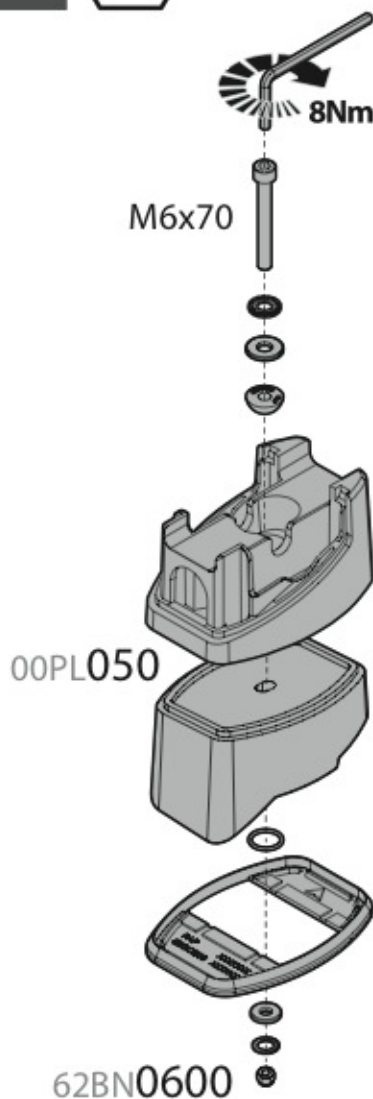


2




C

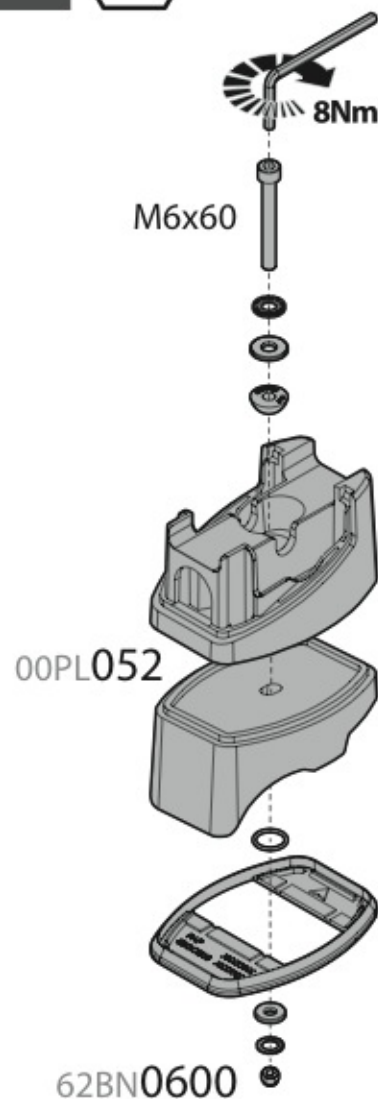

3

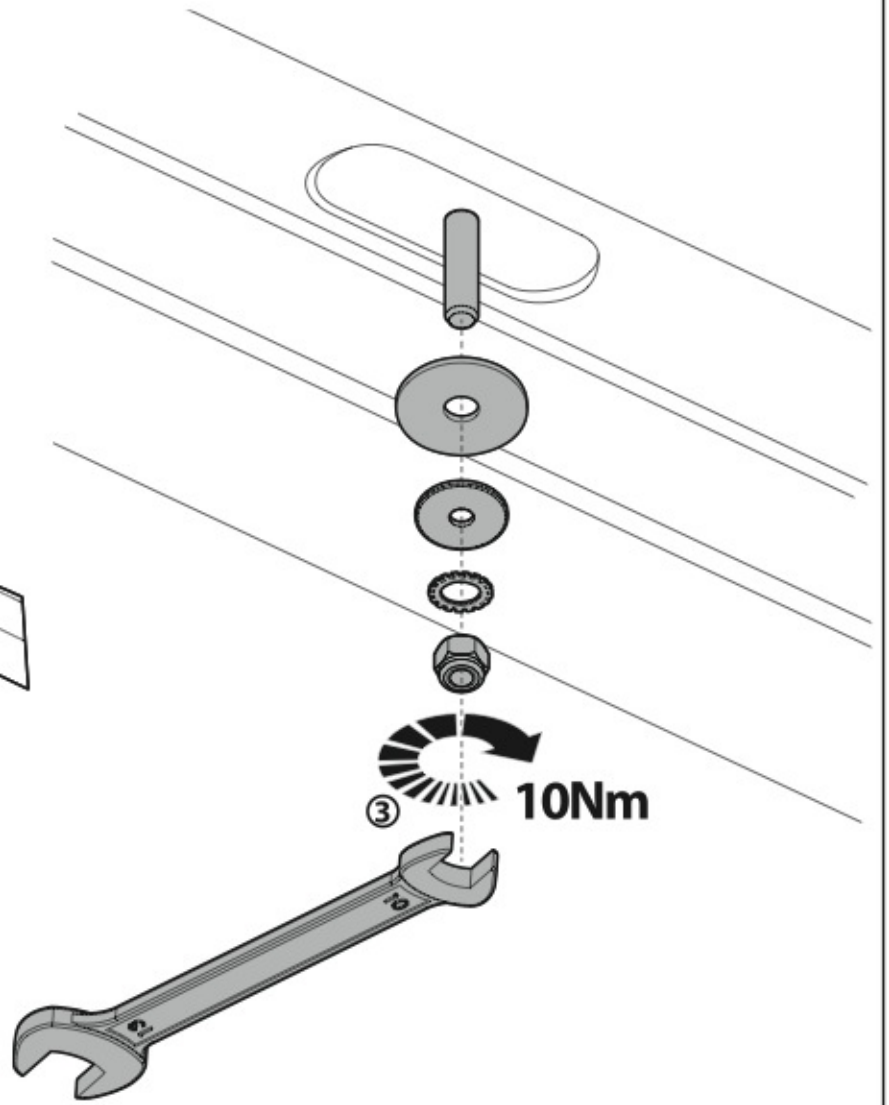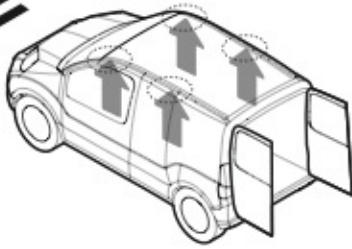

4

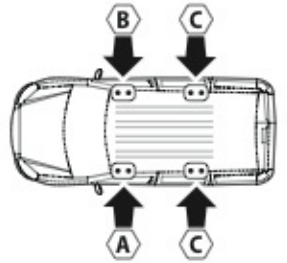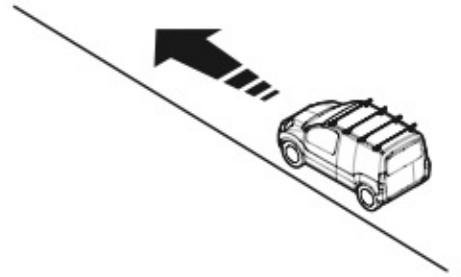
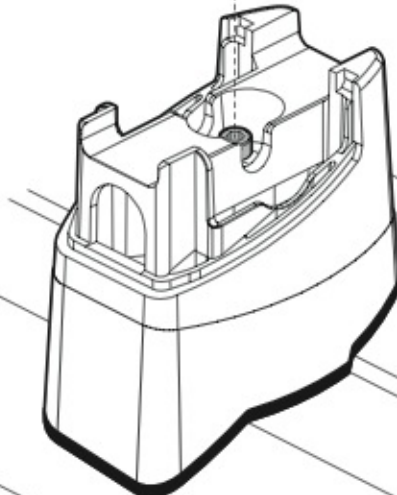






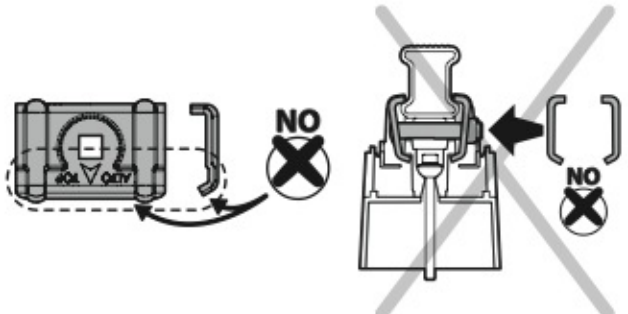
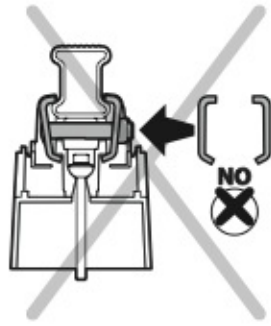
# ATTENZIONE WARNING




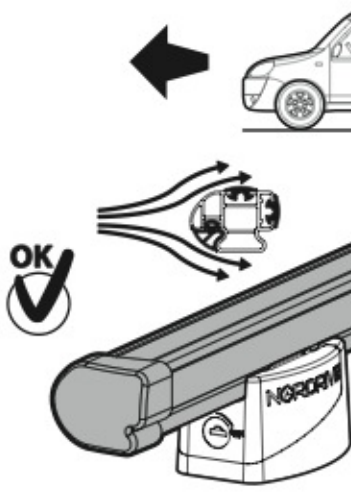
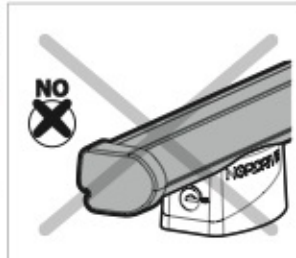
**A** **Kargo**  
  
 ACCIAIO  
 Steel  
 MONTAGGIO DIRETTO  
 SUI KIT PIEDI SPECIFICI  
 DIRECTLY ON FOOT KITS  
 BEFESTIGUNGSFÜSSE

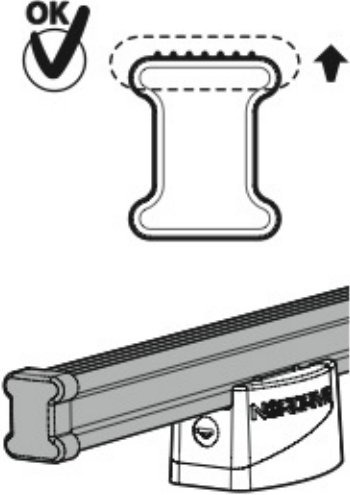
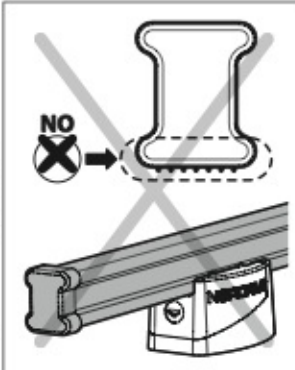
**OK** ✓  
  
**NO** ✗  

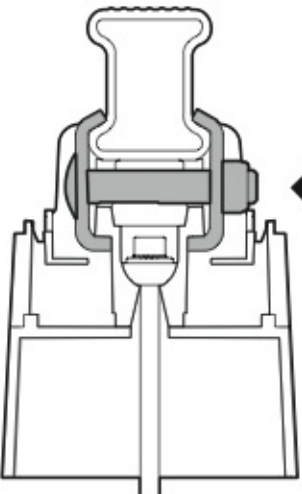
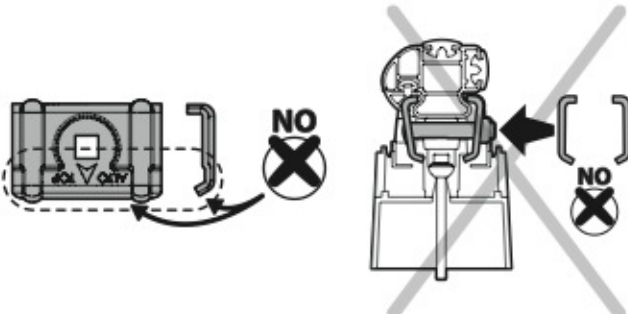
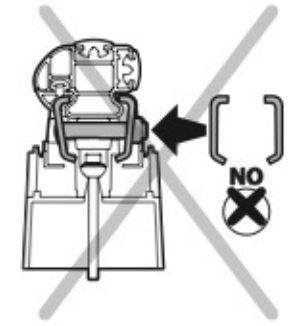
**OK** ✓  
  
**OK** ✓  


**NO** ✗  
  
**NO** ✗  


**B** **Kargo-Plus**  
  
 ALLUMINIO  
 Aluminium  
 MONTAGGIO DIRETTO  
 SUI KIT PIEDI SPECIFICI  
 DIRECTLY ON FOOT KITS  
 BEFESTIGUNGSFÜSSE


**OK** ✓  
  
**NO** ✗  

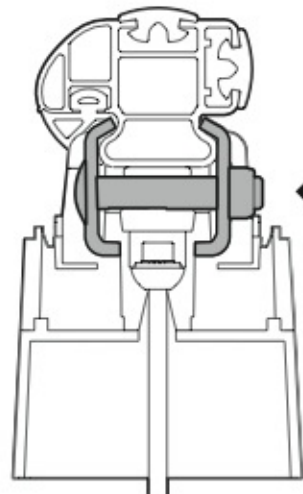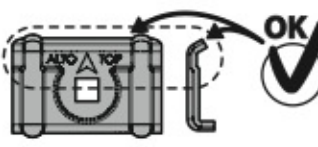
**OK** ✓  
  
**OK** ✓  


**NO** ✗  
  
**NO** ✗  


5


A

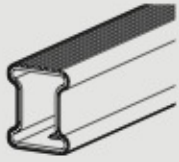


**Kargo**



ACCIAIO  
Steel

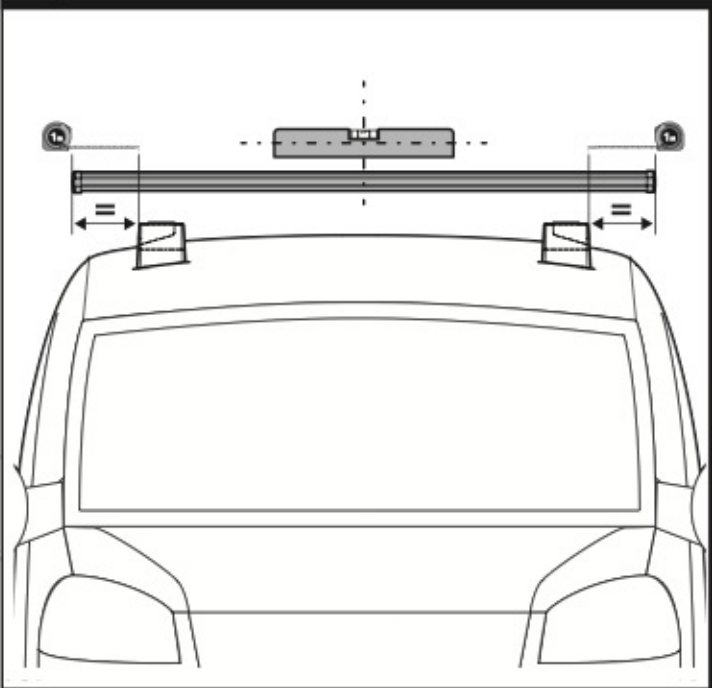

B

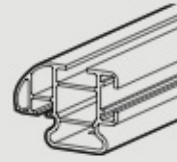


**Kargo-Plus**




ALLUMINIO  
Aluminium


①

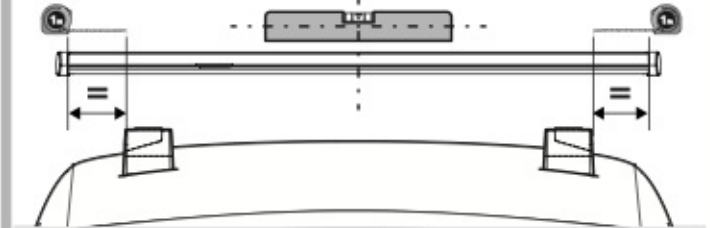

②

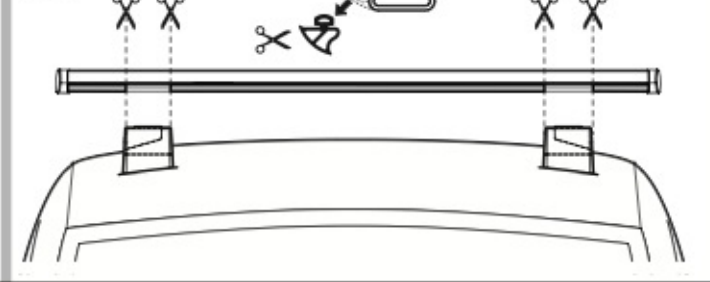


6

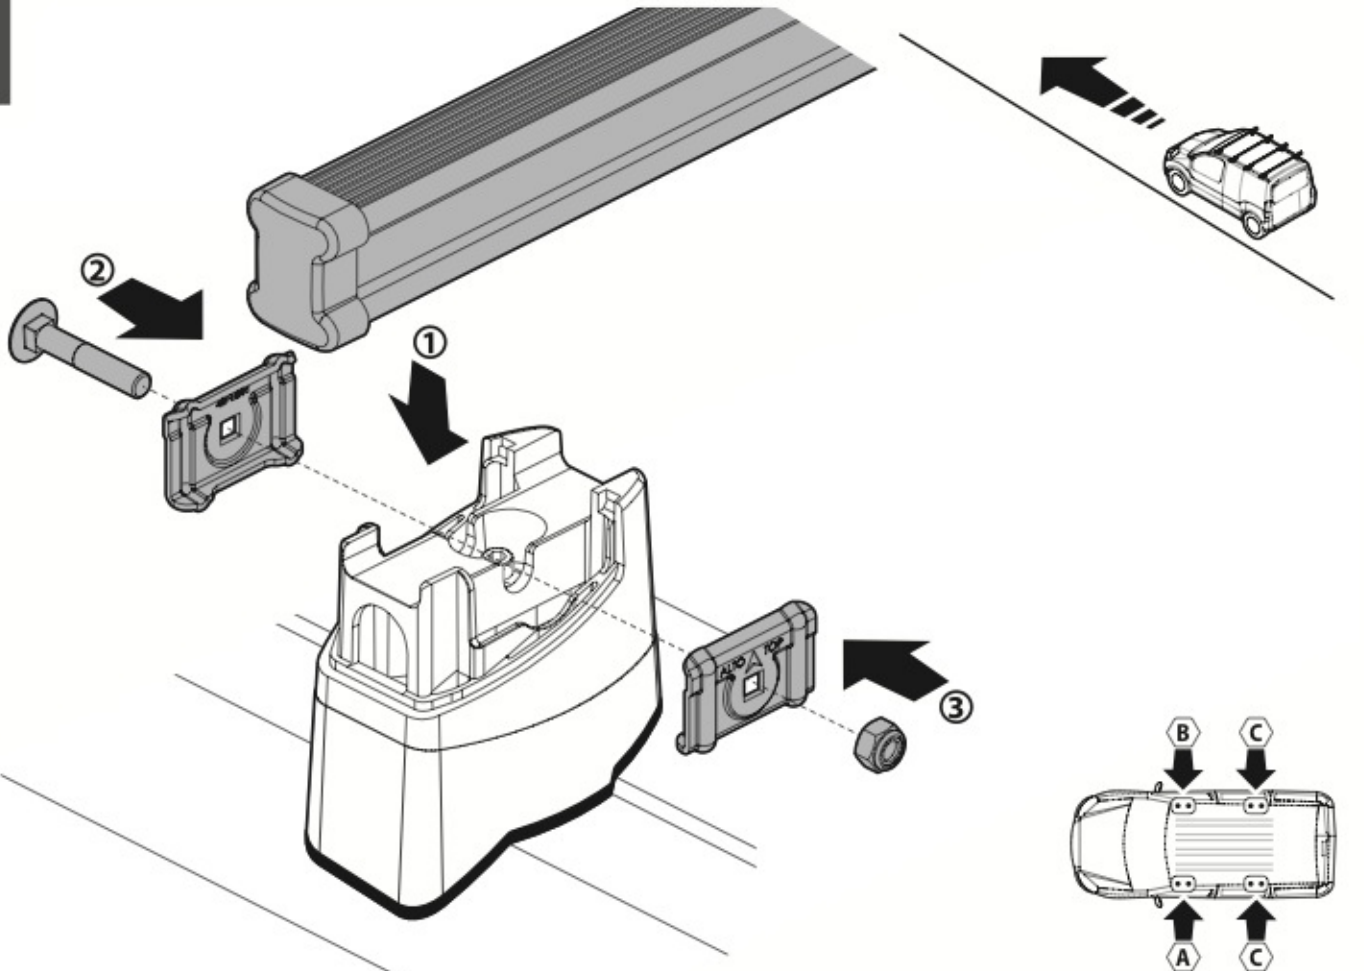




7

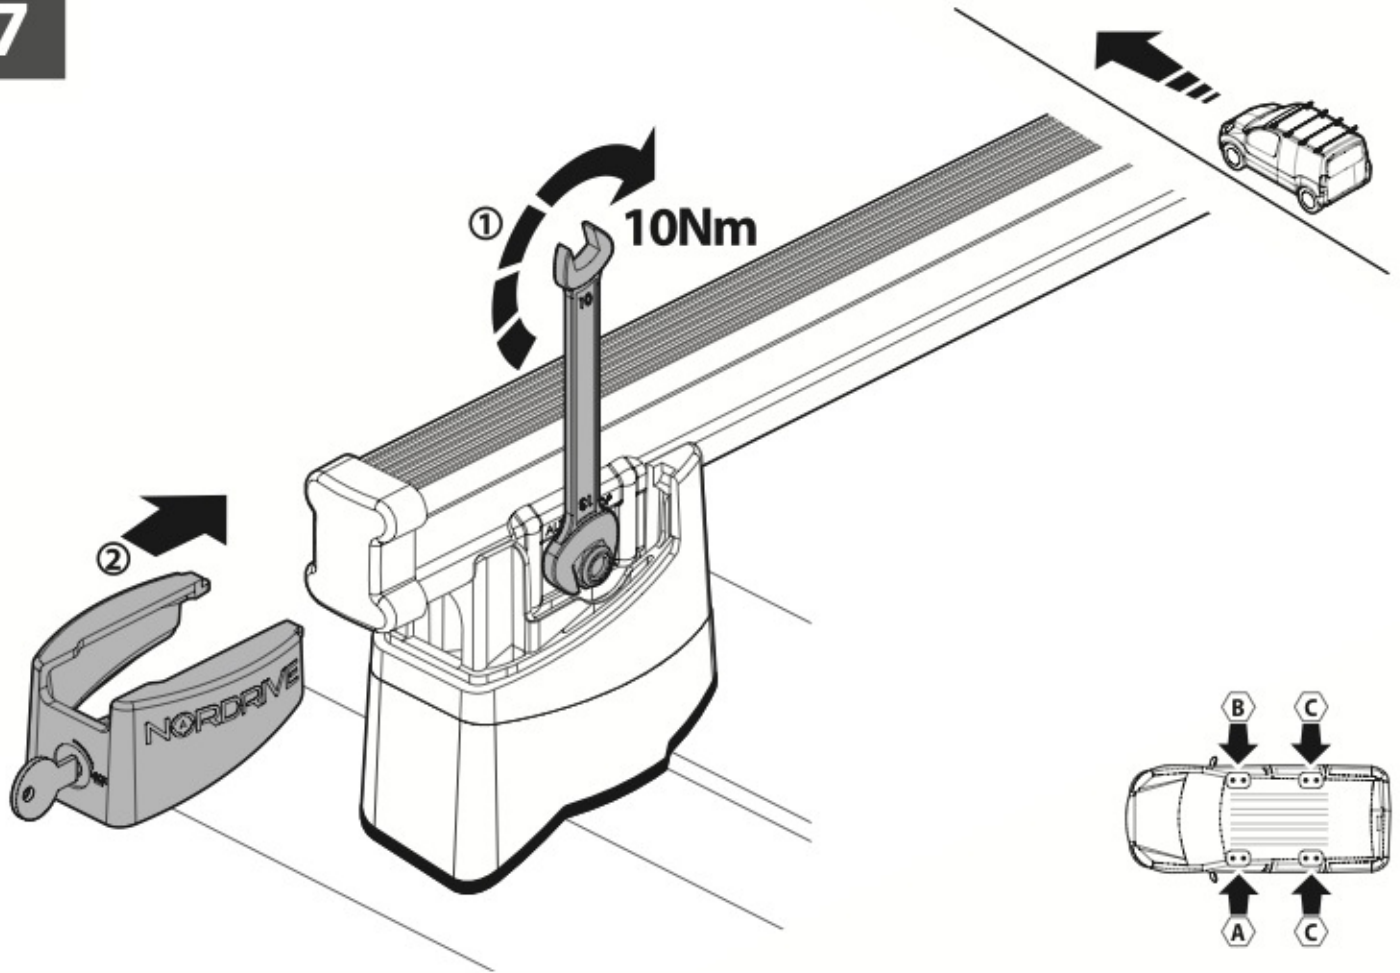


8

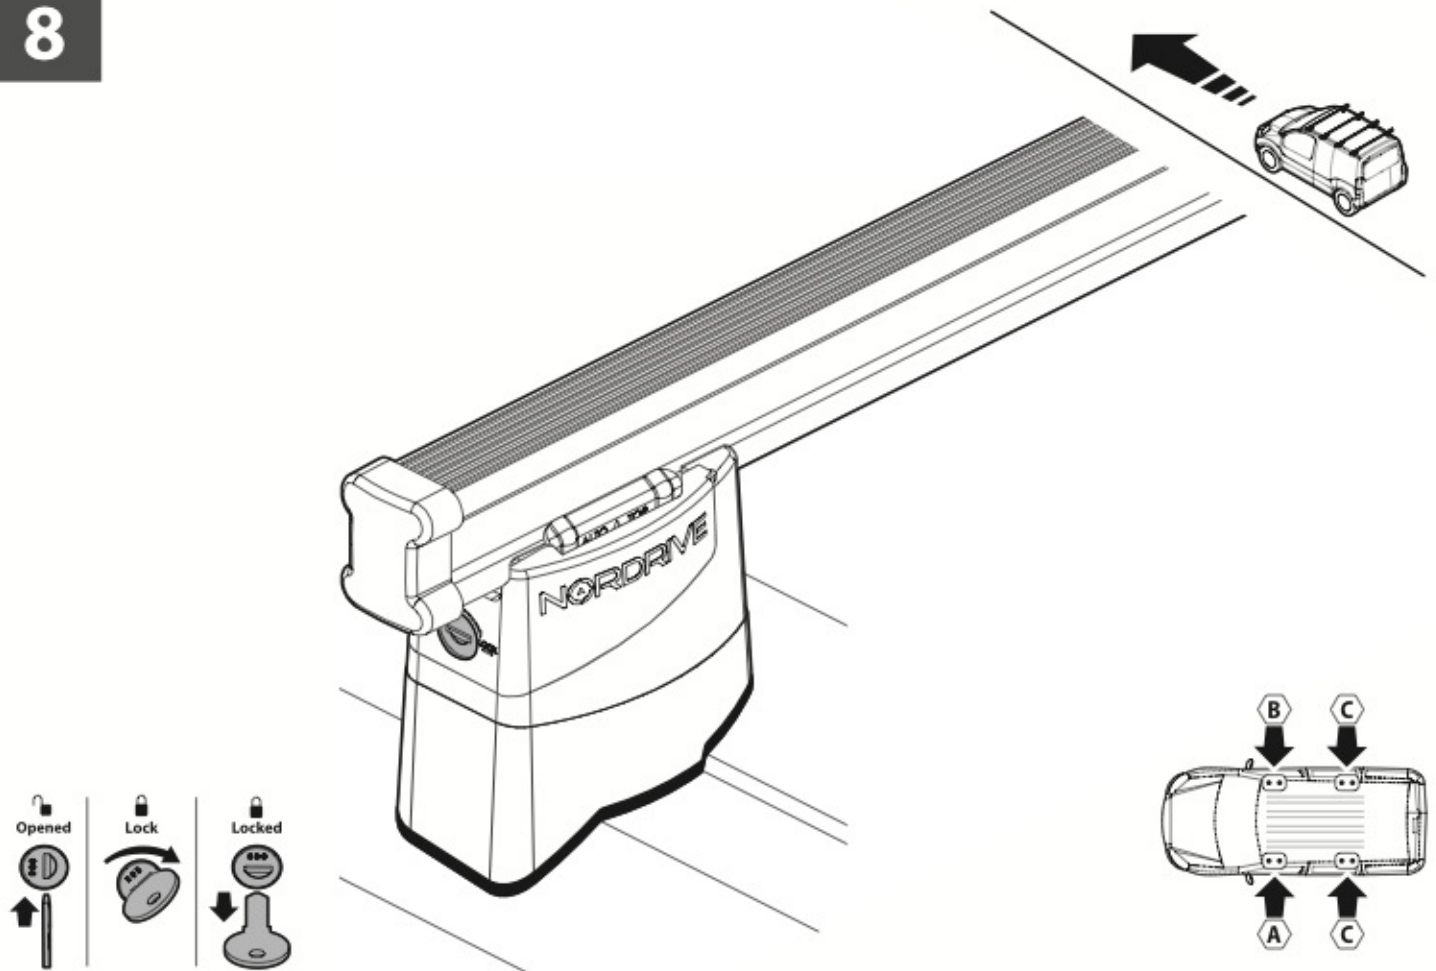

# Kargo series




Acciaio / Steel

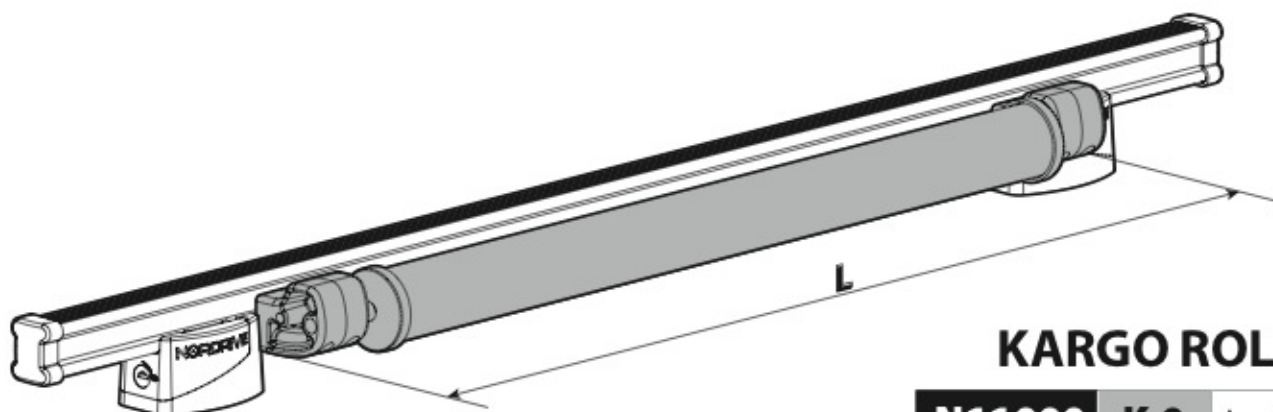


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

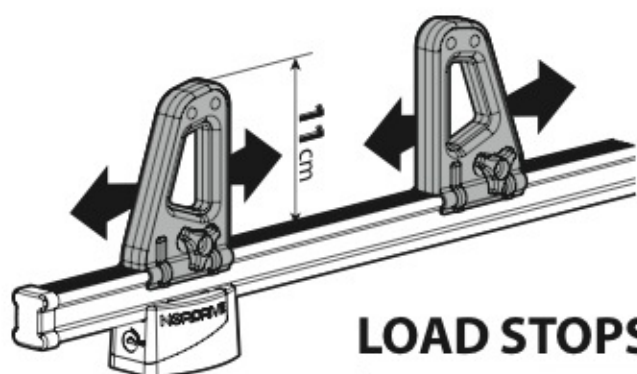


## LOAD STOPS

**N11001** K-1

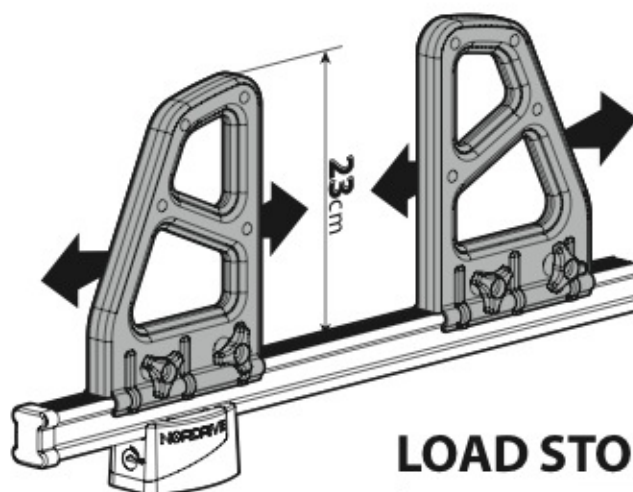

## LOAD STOPS

**N11002** K-2

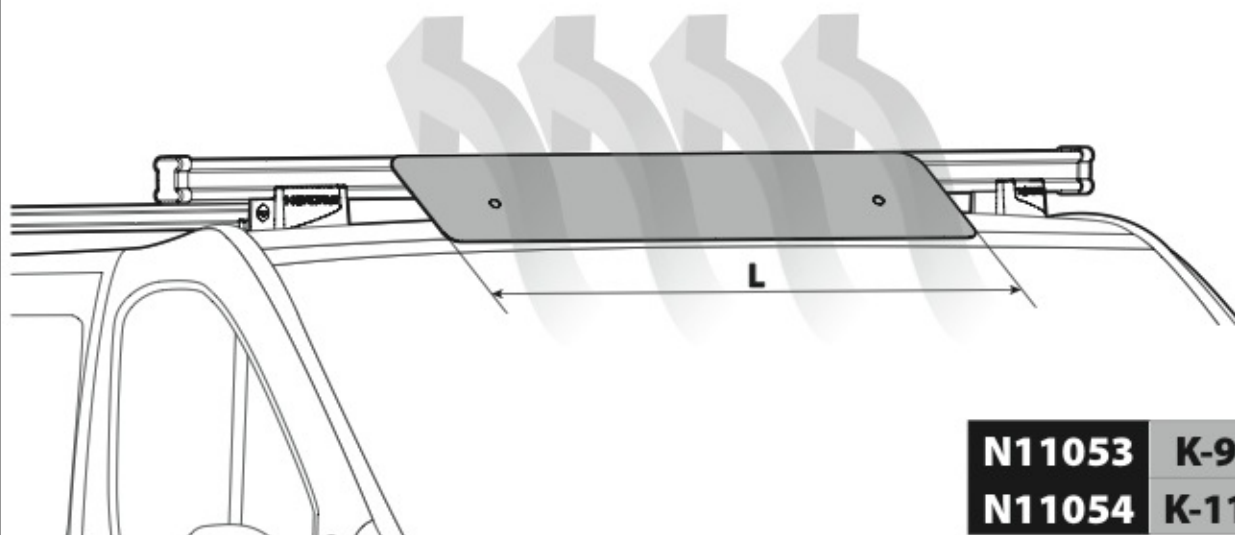

## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series




Alluminio / Aluminium

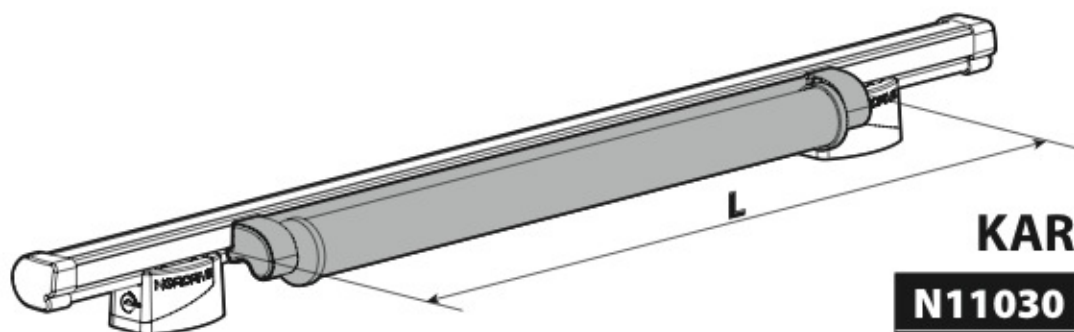

## KARGO ROLLER


**N11030** KP-0 L = 64 cm

**N11034** KP-7 L = 96 cm

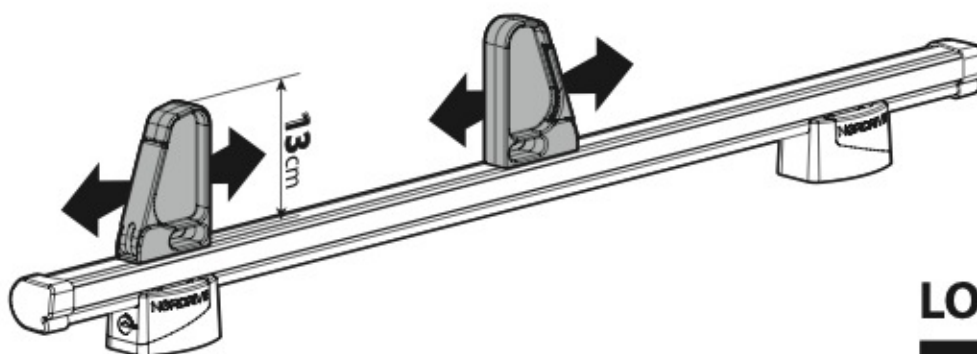


## LOAD STOPS

**N11031** KP-1

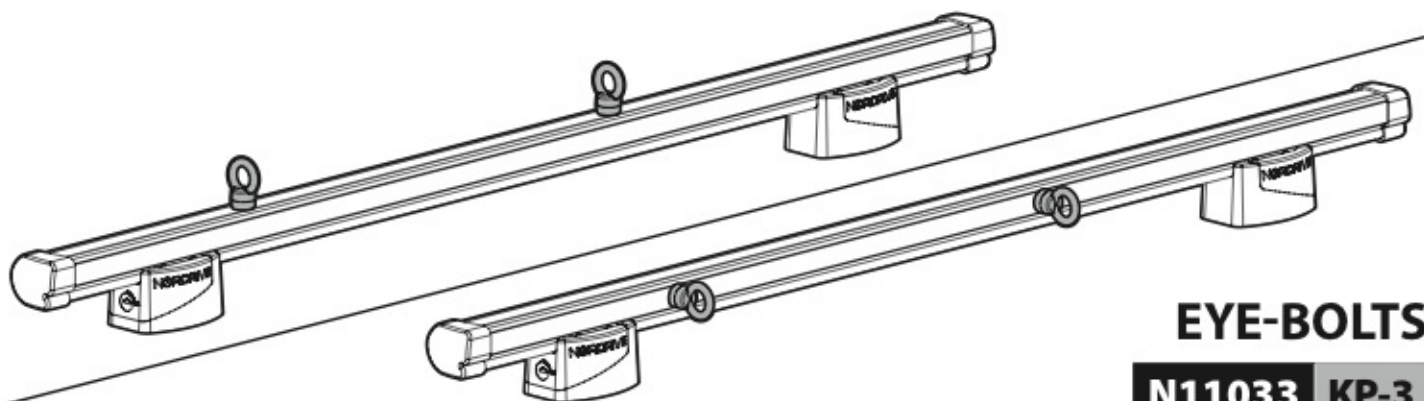

## EYE-BOLTS

**N11033** KP-3

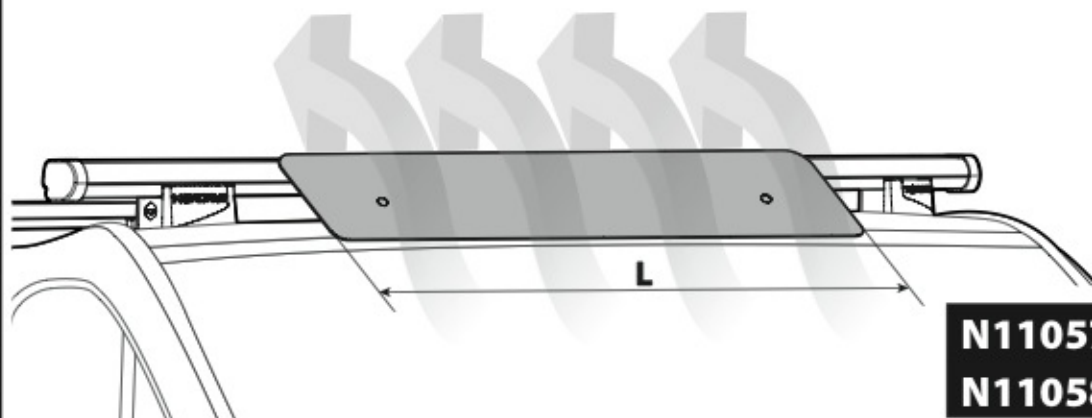

## SPOILER

**N11057** KP-9 L = 95 cm

**N11058** KP-11 L = 110 cm



OPTIONALS PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel

**Kargo-Plus**  
series




Alluminio / Aluminium

### KARGO-TUBE

**N11050** T200 L = 205 cm



**N11051** T300 L = 305 cm

**N11052** T400 L = 405 cm

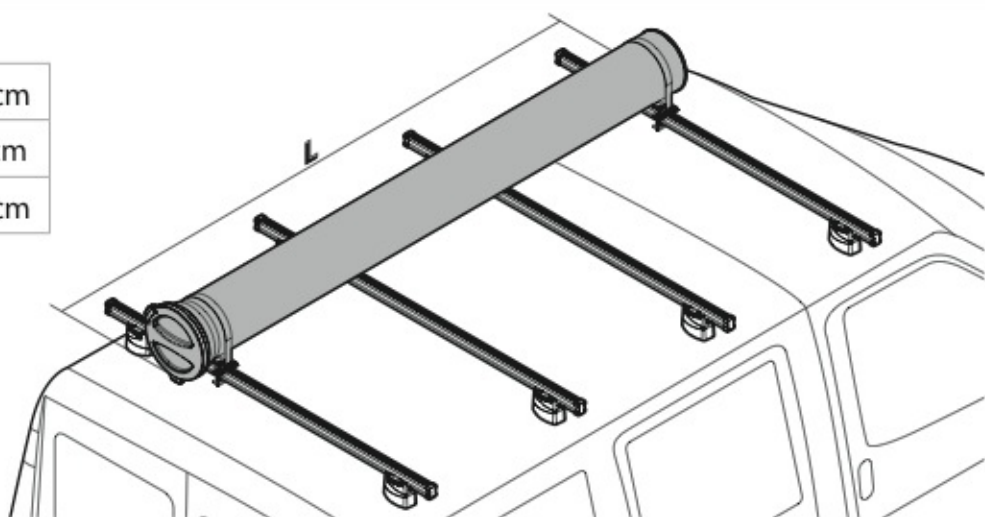


### LADDER HOLDER STRAPS

**N11065** U-5

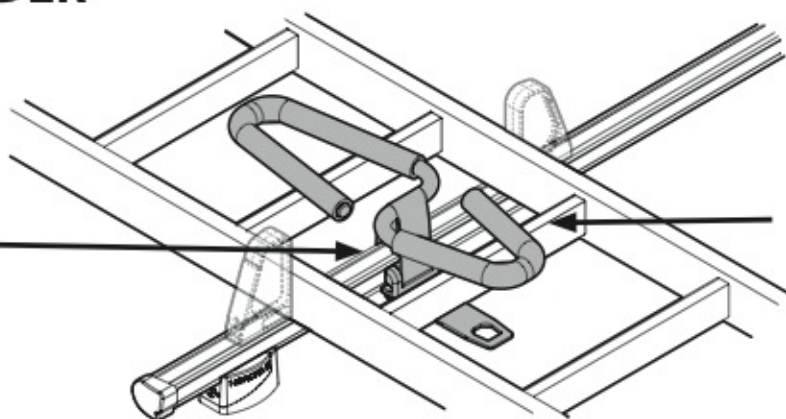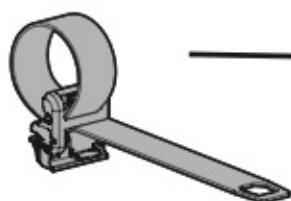

### LADDER STEP ADAPTER


**N11067** U-6

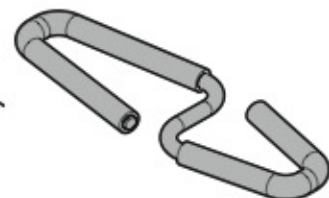

### EXTENSION ROLLER

**N11020** U-0 L = 64 cm

**N11021** U-7 L = 96 cm

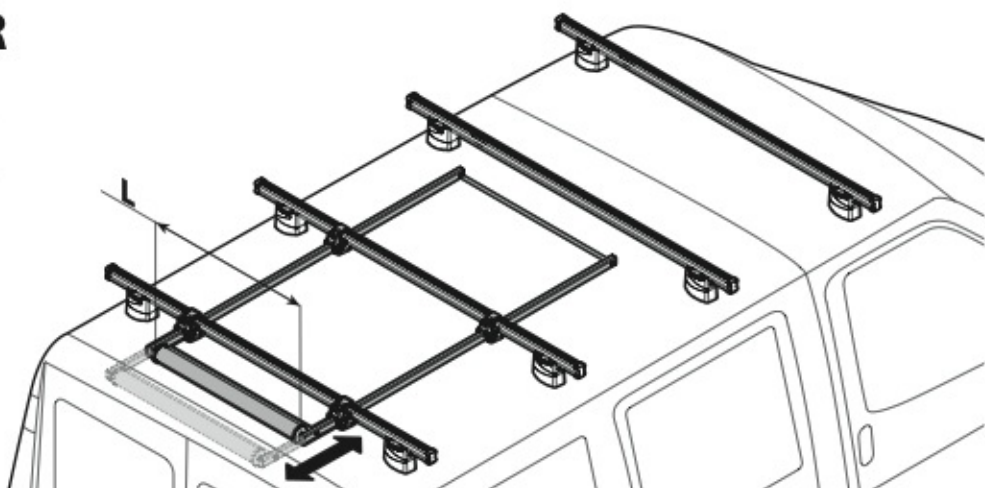

**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS

NORDRIVE<sup>®</sup> is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)